



# Acer Chromebook CB3-131-C3KD Track pad Replacement

This guide will replace the trackpad for the Acer Chromebook CB3-131C3KD.

Written By: Ashley Oxner



---

## INTRODUCTION


Use this guide to replace the trackpad in your device.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [JIS #0 Screwdriver](#) (1)
-



## Step 1 — Battery

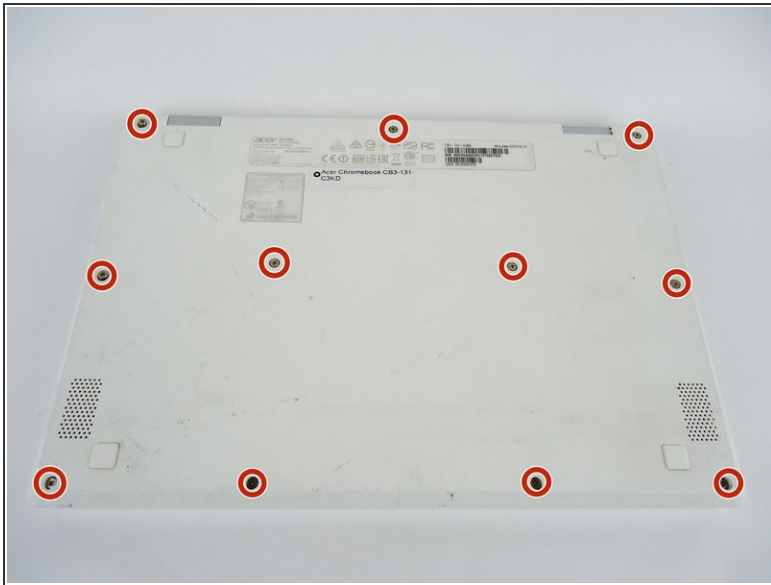

**i** Make sure you turn off the laptop before starting.

- Unscrew and remove the (11) eleven 4mm J0 head screws on the underside of the laptop using the JIS #0 screwdriver.


## Step 2

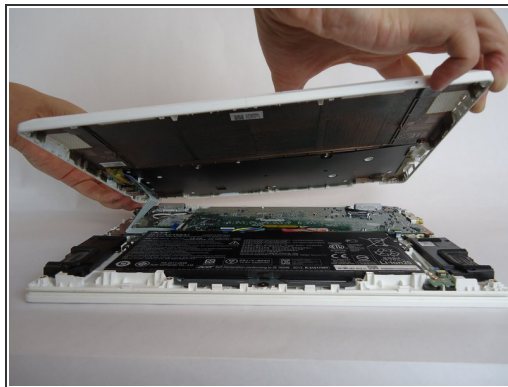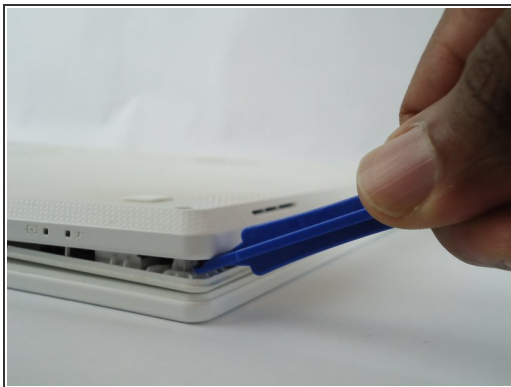

- Use the plastic opening tool to remove the back cover.


**!** Be careful not to damage the ribbon cable connecting the back cover to the laptop.

## Step 3

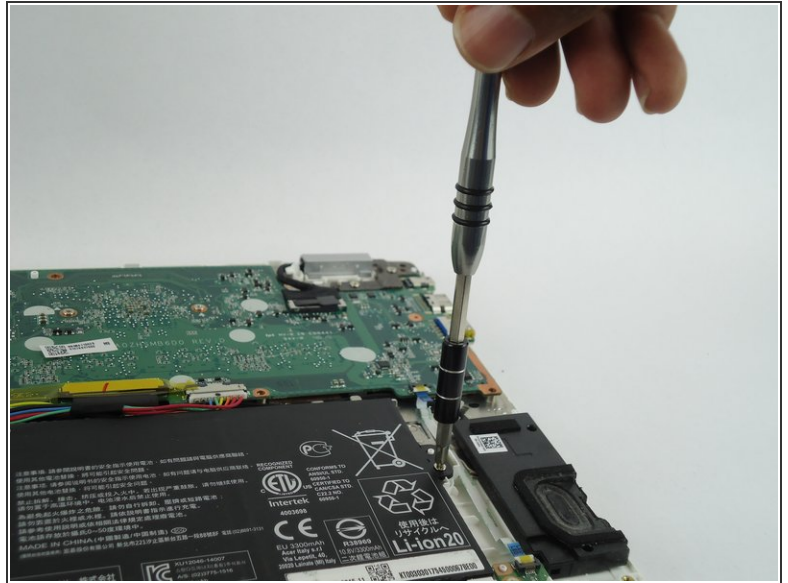

- Unscrew the (2) two 3mm J0 Phillips head screws that hold the battery in place.

## Step 4

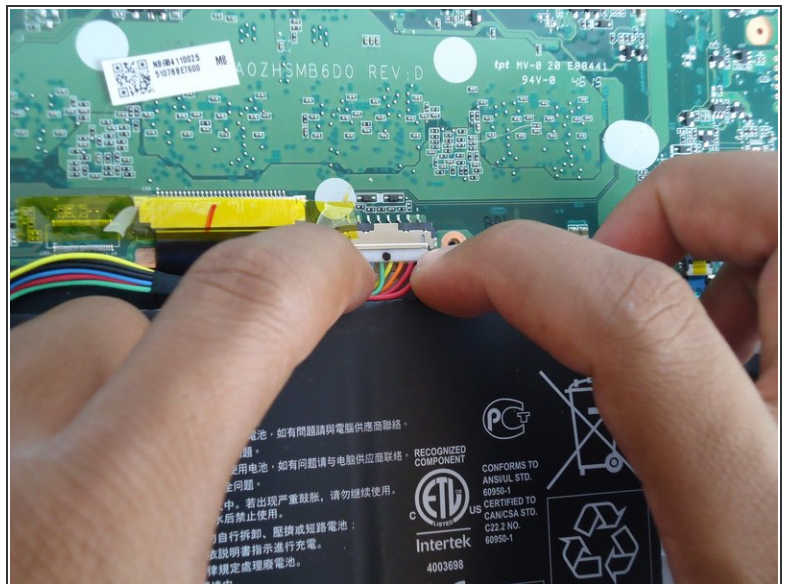

- Disconnect the battery from the motherboard.





Carefully disconnect the cable parallel to the board, not at an angle. Otherwise, you could damage the port.

## Step 5





- Carefully lift the battery from one side, and then lift it out of the laptop.

## Step 6 — Trackpad

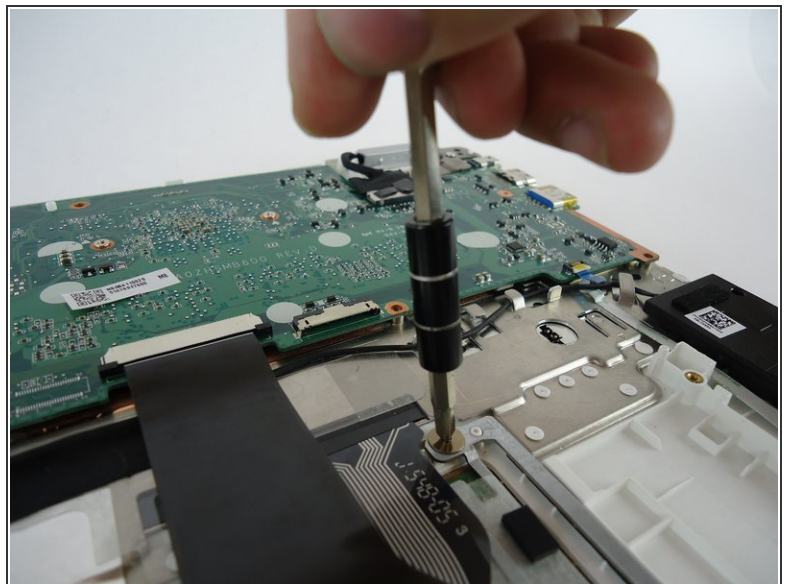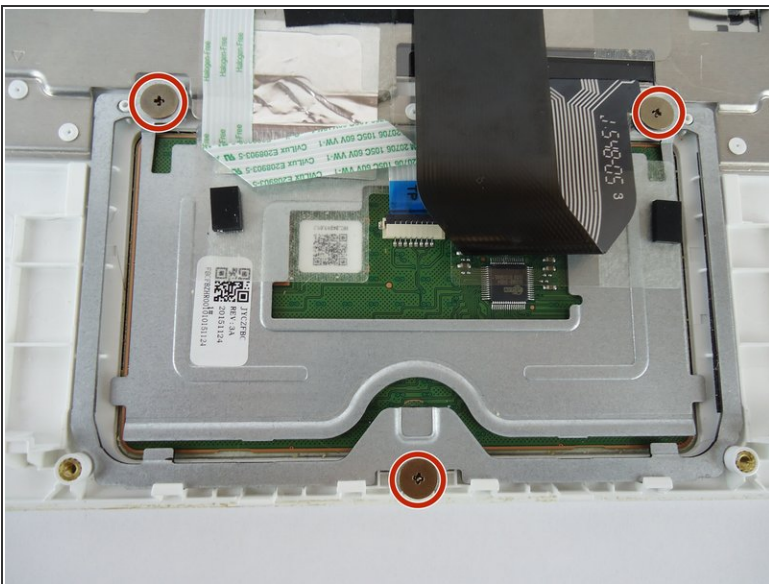

- Remove the (3) three 7.0mm screws using the J0 screwdriver head.

## Step 7

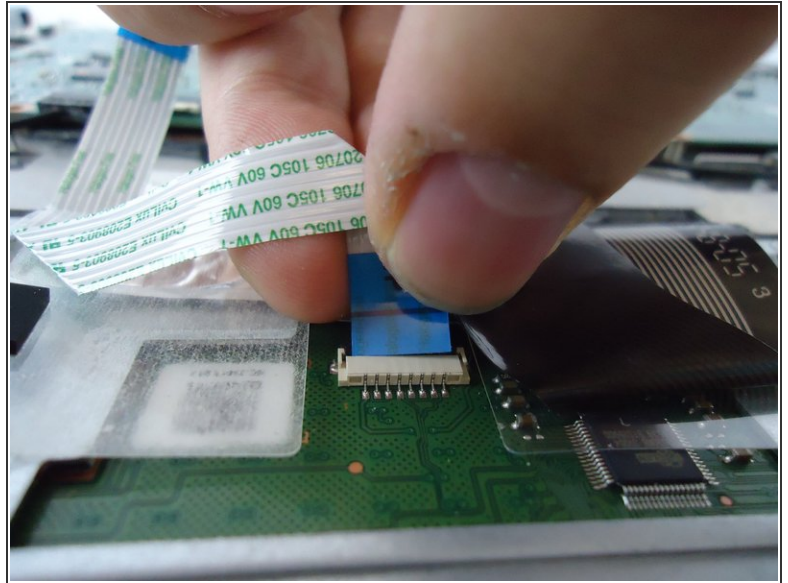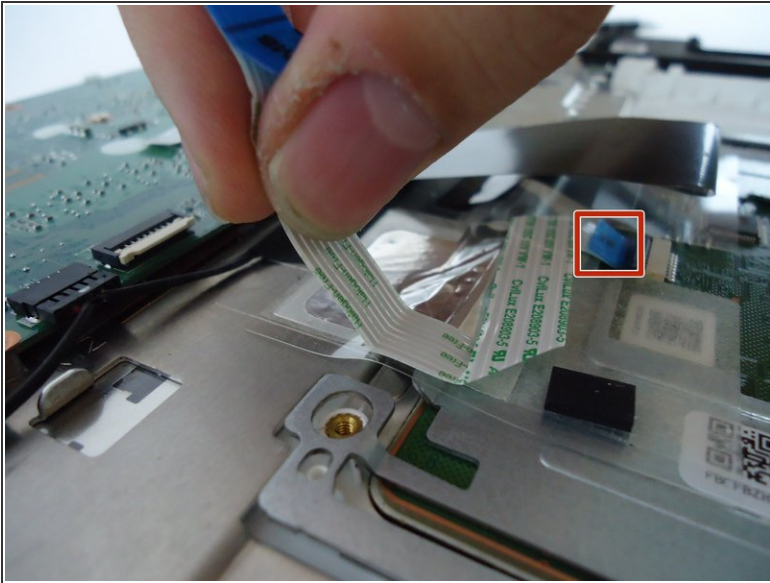

- Unlock the latches on both ends of the ribbon cable, and pull to detach.


**i** The ribbon cable will still be attached to the tape.

## Step 8



- Peel the tape that is on top of the trackpad.

## Step 9

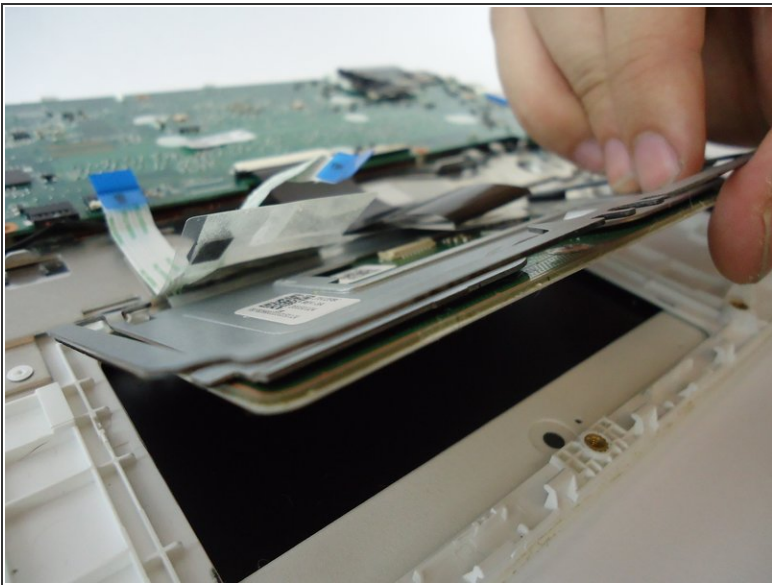

- Lift the trackpad out of the Chromebook.

To reassemble your device, follow these instructions in reverse order.