



# Samsung Series 7XE700T1A Volume Button Replacement

Written By: james





## TOOLS:


- [iFixit Opening Tool](#) (1)
-

## Step 1 — Back panel



- Remove the microSD card before attempting to open the device. Wedge the opening tools inside the device and move it around the perimeter (between the black and silver panels, not between the glass and the black panel) until you have loosened the adhesive that is keeping it together.

## Step 2

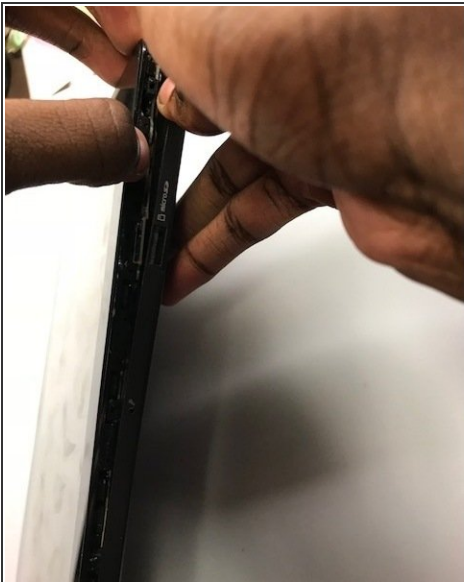

- With your hands, open up the back panel, separating it from the tablet.

## Step 3 — Volume Button



- Now that the back panel has been removed, using your fingers, push out the volume button from the inside.

To reassemble your device, follow these instructions in reverse order.