



ASUS GL752VW-DH74 SSD Replacement

This guide will demonstrate how to access and replace the M.2 SSD.

Written By: Ralph Lopez



INTRODUCTION

This guide will show you how to replace/upgrade the M.2 SSD in your ASUS.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — SSD




- Unscrew both 8mm phillip's head screws that hold on the access gate.

Step 2




- Use either the your finger, the screw driver, or a spudger to pop out the gate.

Step 3

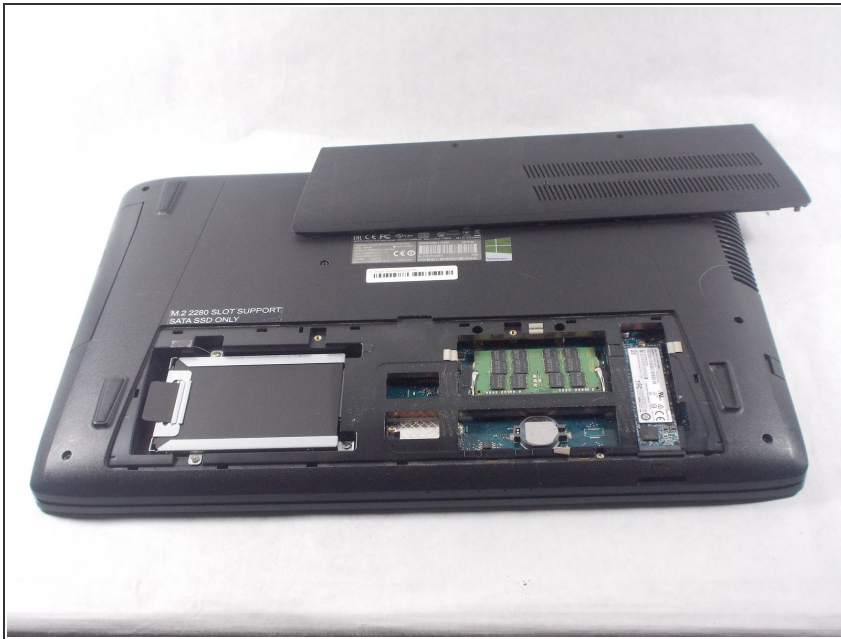


- From here, you can access the harddrive, motherboard, SSD, and RAM.

Step 4

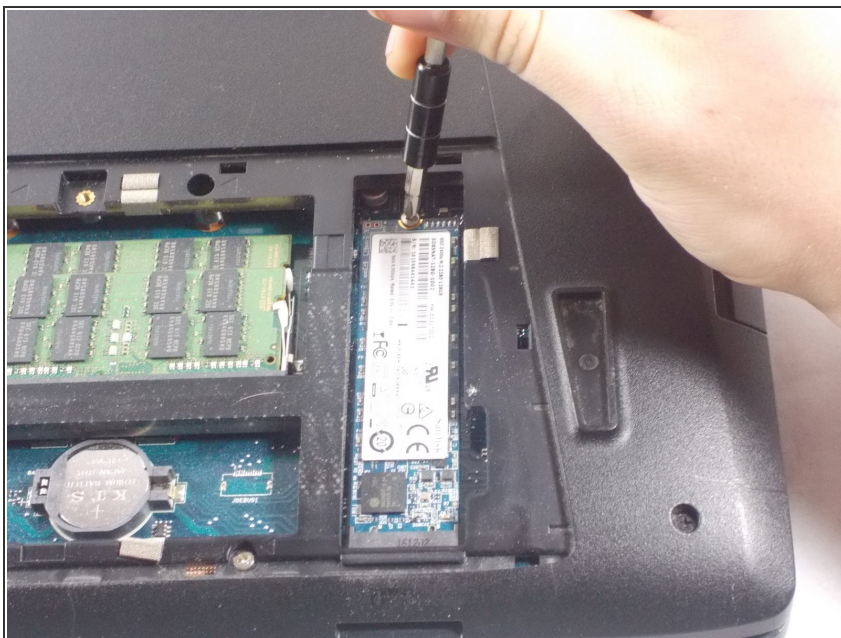

- Remove the 4mm screw holding in the SSD.
- ⓘ Note that the screw is holding it down so it will pop up once the screw is removed.

Step 5

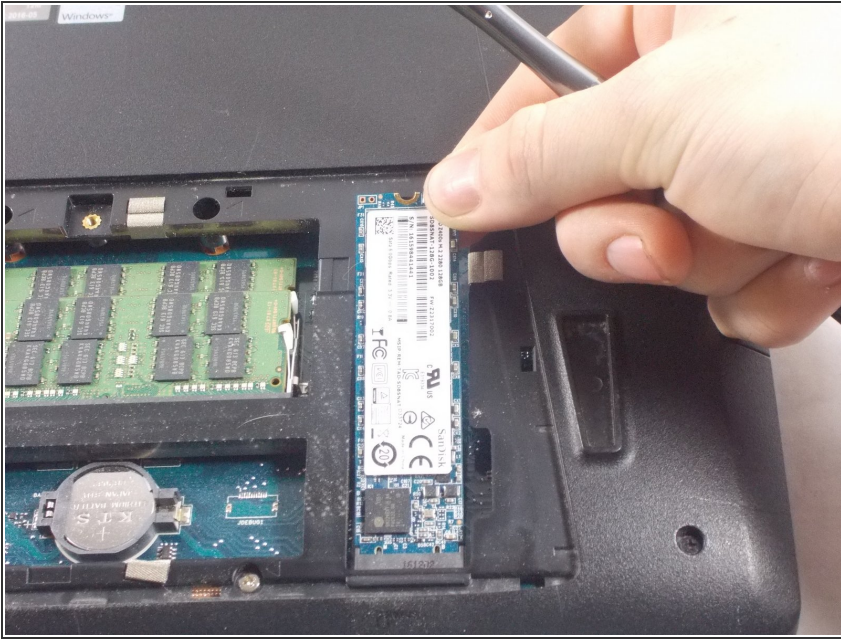

- Remove SSD from slot.

To reassemble your device, follow these instructions in reverse order.