


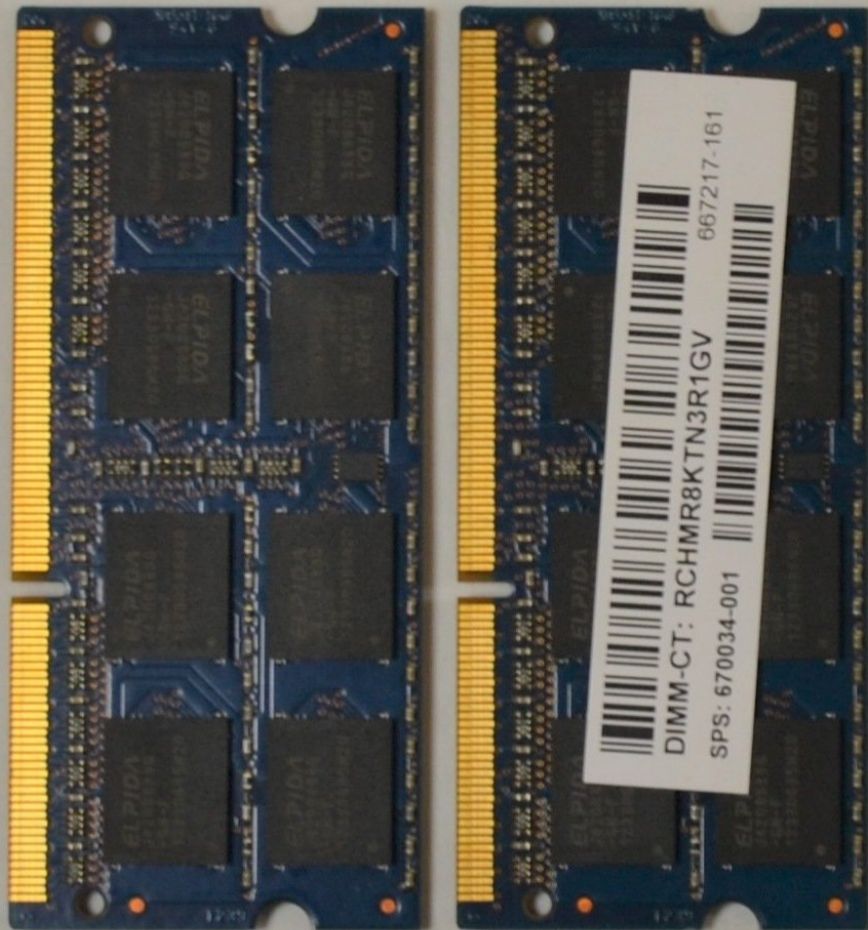

# HP Envy dv7t-7200 RAM Replacement

Use this guide to replace faulty RAM on your HP Envy dv7t-7200 if your laptop is running slow or you would like more memory.

Written By: Krystal






## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-



## Step 1 — Battery



 Turn the power off and disconnect all cables and cords from the laptop.


- Place the computer on its top on a flat surface with the hinges facing away from you.

## Step 2

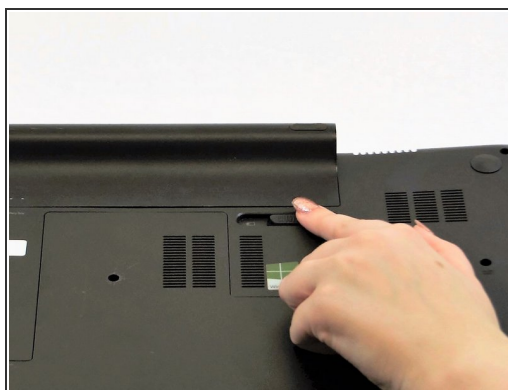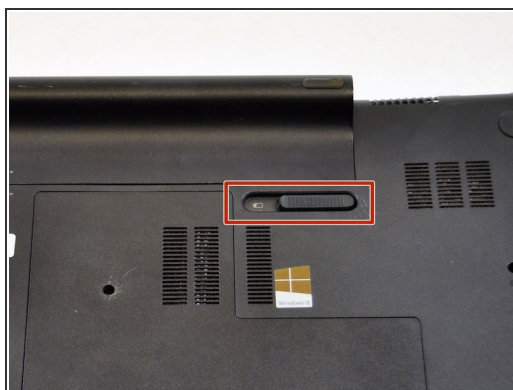

- Slide the battery release latch to the left which is located on the right-hand side of the battery.

## Step 3

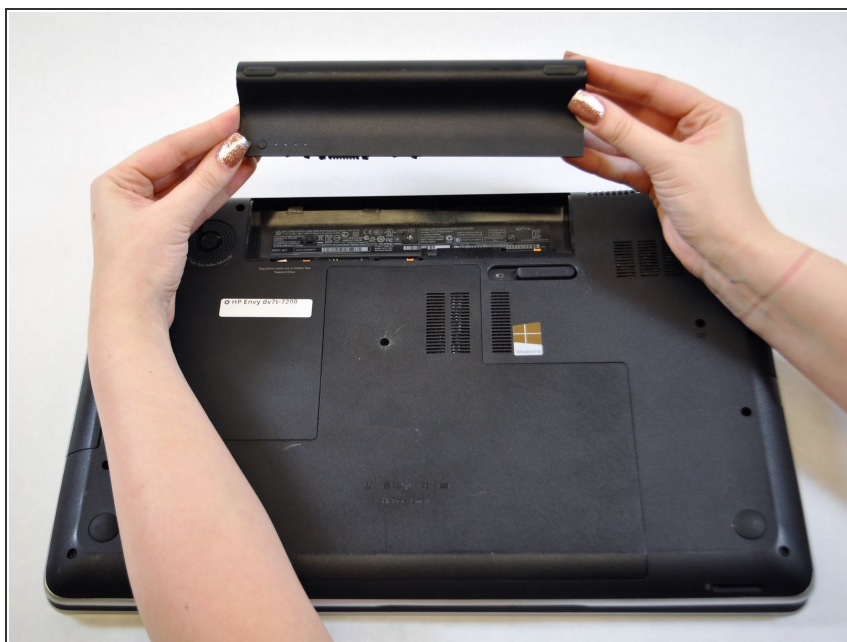

- Tilt the battery away from you and lift out.



## Step 4 — Service Cover



- Using a Phillips #01 screwdriver, remove the Phillips PM2.5×5.5 screw on the service cover.
- ⓘ This screw does not come out of the service cover completely once loosened.





## Step 5

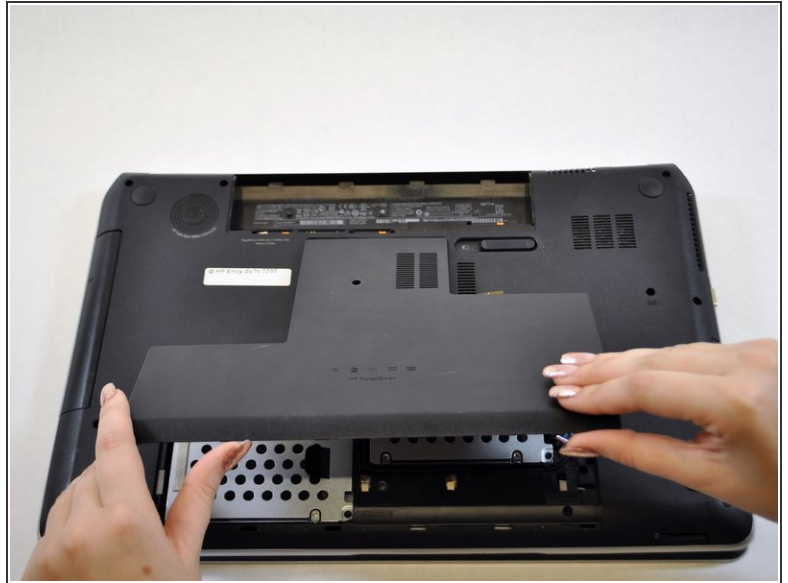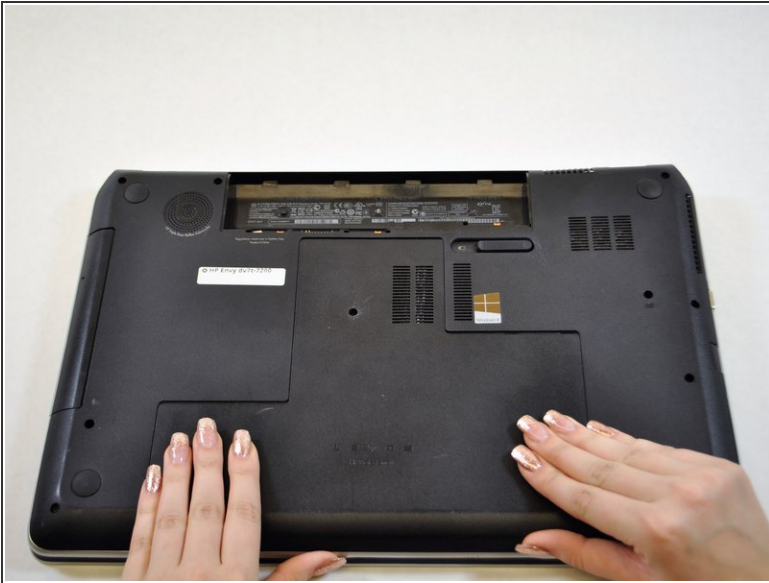


- Slide the service cover toward the front of the laptop.
- Lift the service cover to remove it from the laptop.

## Step 6 — RAM

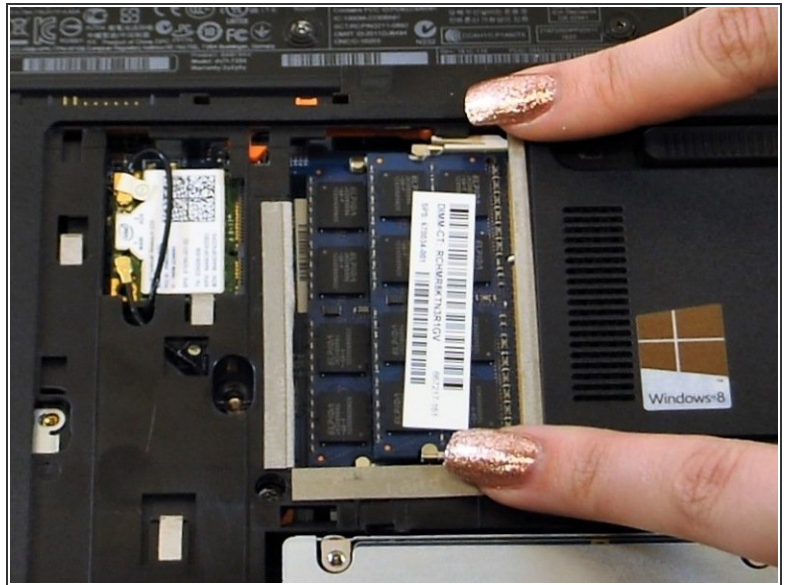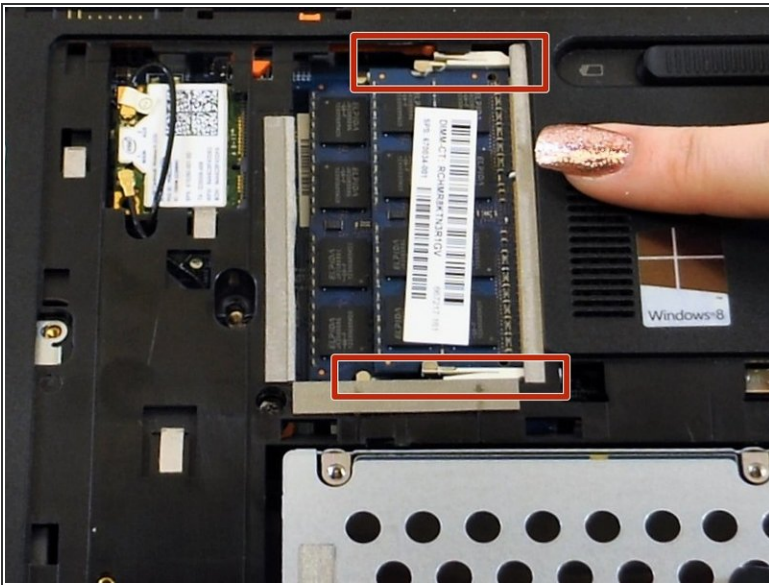



- Press down and away from the ram cards on the tabs surrounding the ram cards.

## Step 7

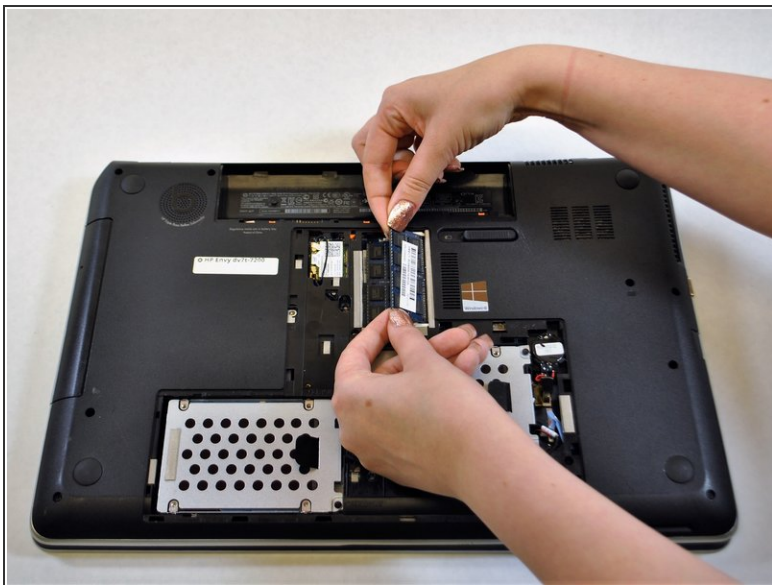

- The first ram card will pop up, and now you will slide it out of its slot.

## Step 8

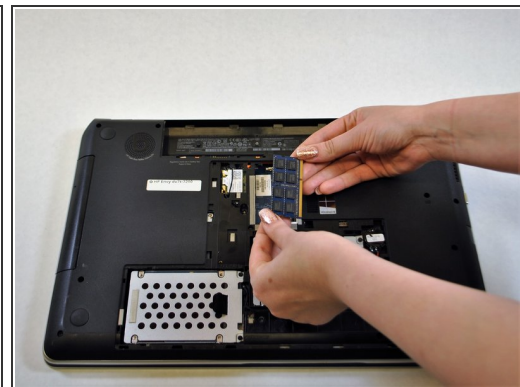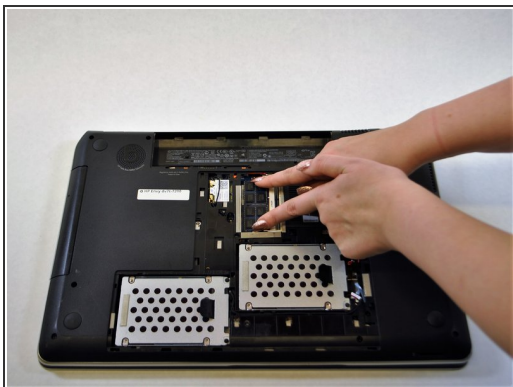

- Repeat this process for the second ram card.

To reassemble your device, follow these instructions in reverse order.