



HP Envy dv7t-7200 Optical Disc Drive Replacement

Use this guide to replace a faulty optical disk drive on your HP Envy dv7t-7200 if your laptop is not reading discs properly or if you cannot burn a disc.

Written By: Krystal






TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-



Step 1 — Battery



 Turn the power off and disconnect all cables and cords from the laptop.


- Place the computer on its top on a flat surface with the hinges facing away from you.

Step 2

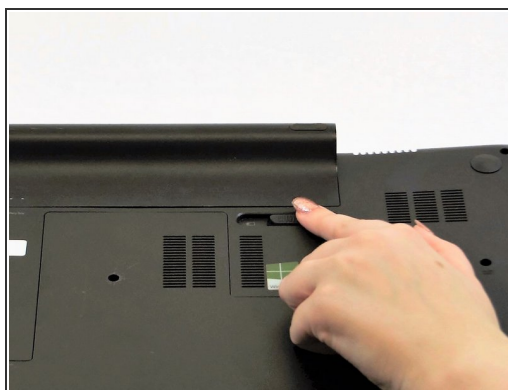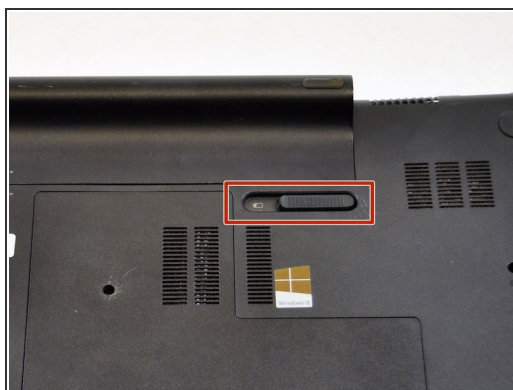

- Slide the battery release latch to the left which is located on the right-hand side of the battery.

Step 3

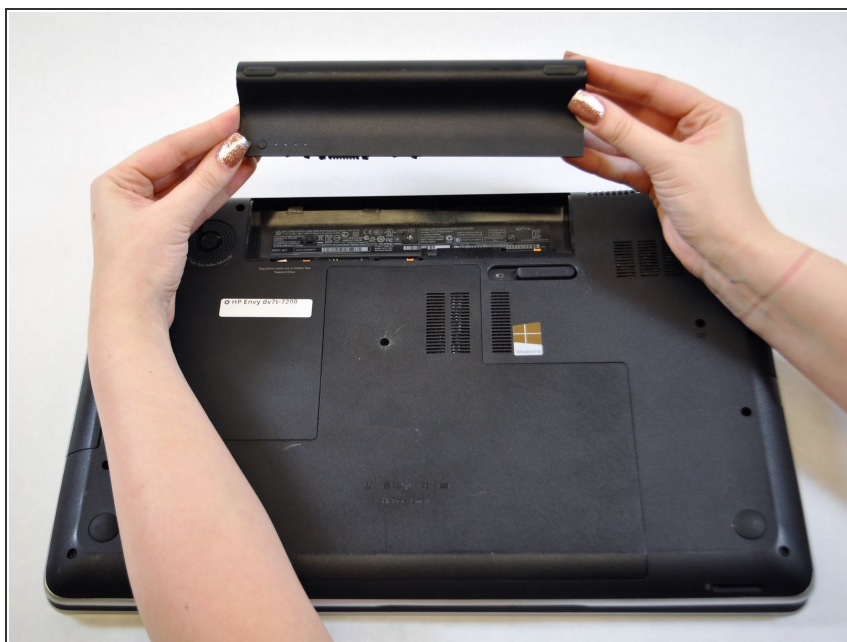



- Tilt the battery away from you and lift out.

Step 4 — Service Cover




- Using a Phillips #01 screwdriver, remove the Phillips PM2.5×5.5 screw on the service cover.
- ⓘ This screw does not come out of the service cover completely once loosened.

Step 5

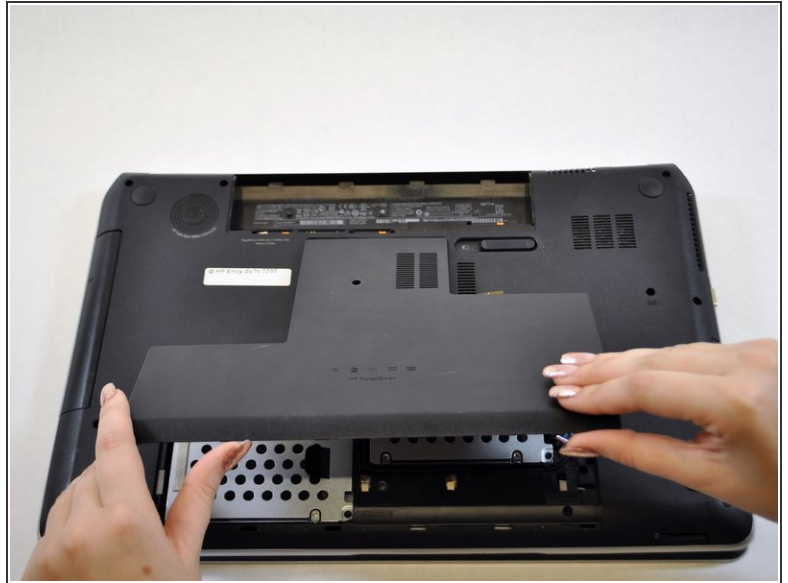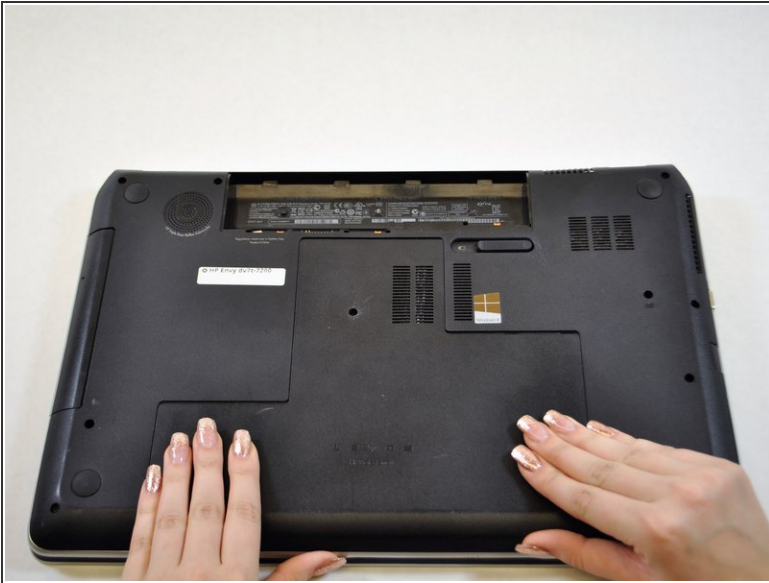



- Slide the service cover toward the front of the laptop.
- Lift the service cover to remove it from the laptop.

Step 6 — Optical Disc Drive

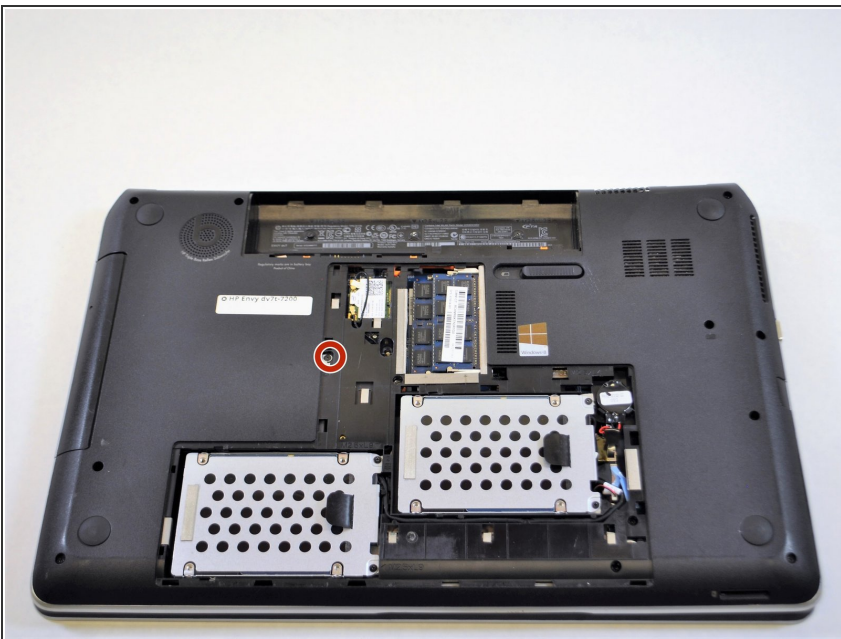



- Remove the Phillips PM2.5x4.0 screw that attaches the optical drive to the laptop.

Step 7

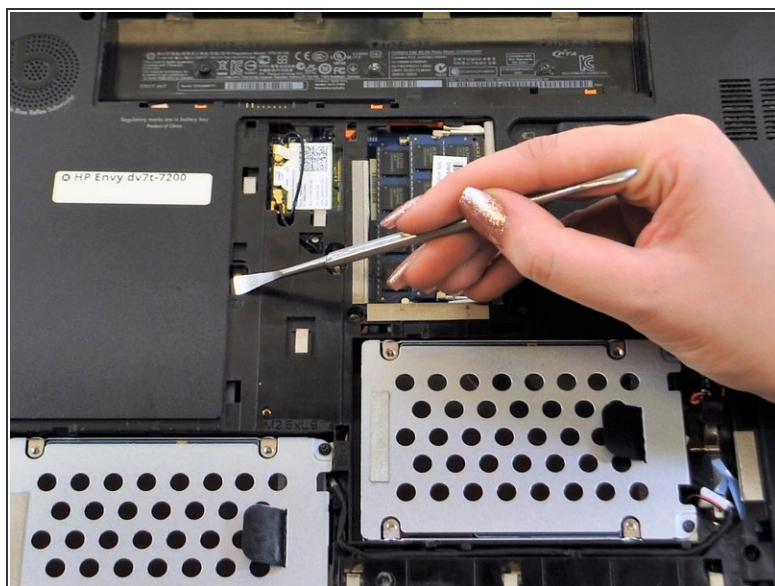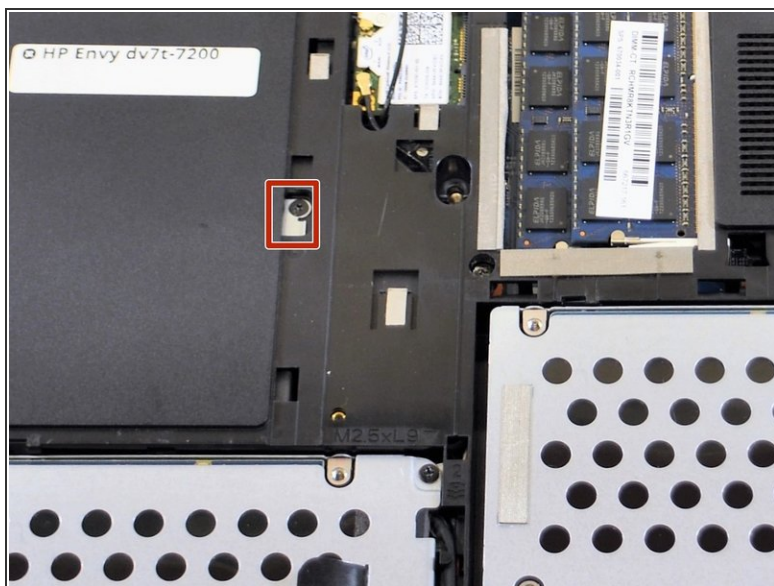

- Press the tab with a metal spudger that is located next to the screw to release the optical drive.

Step 8

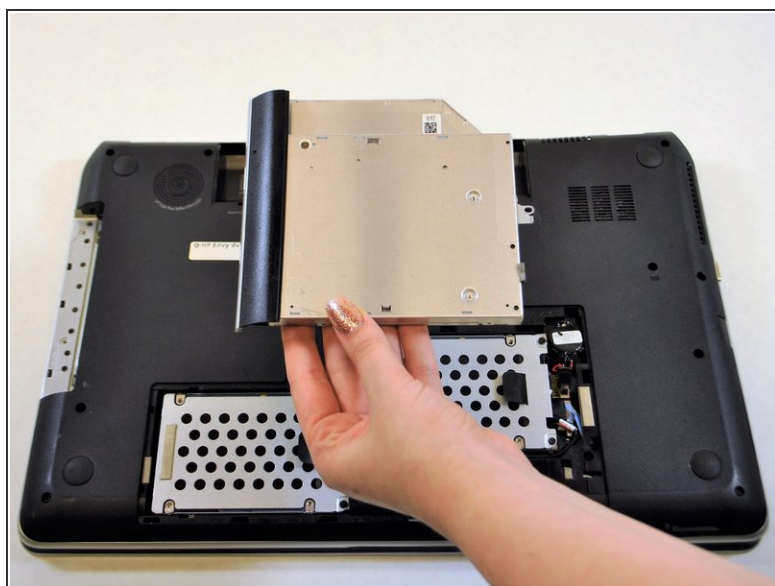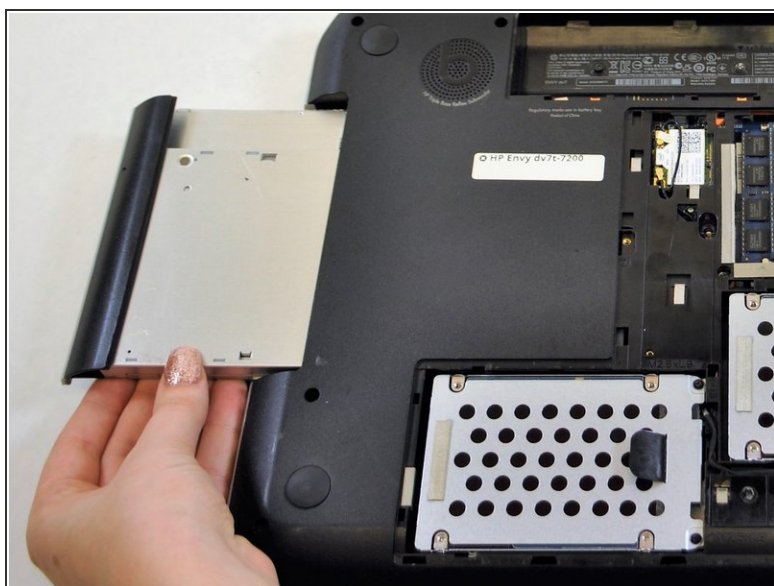

- Slide the disk drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.