



iPhone 8 Pentalobe Screws Replacement

Use this guide to remove or replace the two...

Written By: Adam O'Camb



INTRODUCTION

Use this guide to remove or replace the two pentalobe (five-point) screws securing the iPhone's display. These screws are a proprietary Apple design, requiring the use of a specialized P2 screwdriver.

TOOLS:


P2 Pentalobe Screwdriver iPhone (1)

PARTS:

iPhone 8/8 Plus Bottom Screws (1)


Step 1 — Remove the pentalobe screws



 Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

 Power off your iPhone before beginning disassembly.

- Remove the two 3.5 mm pentalobe screws on the bottom edge of the iPhone.

 Opening the iPhone's display will compromise its waterproof seals. Have [replacement seals](#) ready before you proceed past this step, or take care to avoid liquid exposure if you reassemble your iPhone without replacing the seals.

To reassemble your device, follow these instructions in reverse order.

