



# Acer Chromebook CB5-571-C5XU Bottom Case Replacement

This guide will help users understand how to...

Written By: Erin Moffatt



# INTRODUCTION

This guide will help users understand how to take off the bottom case to access the inside of the device.

---


## TOOLS:

Phillips #0 Screwdriver (1)

Spudger (1)

---


### Step 1 — Bottom Case

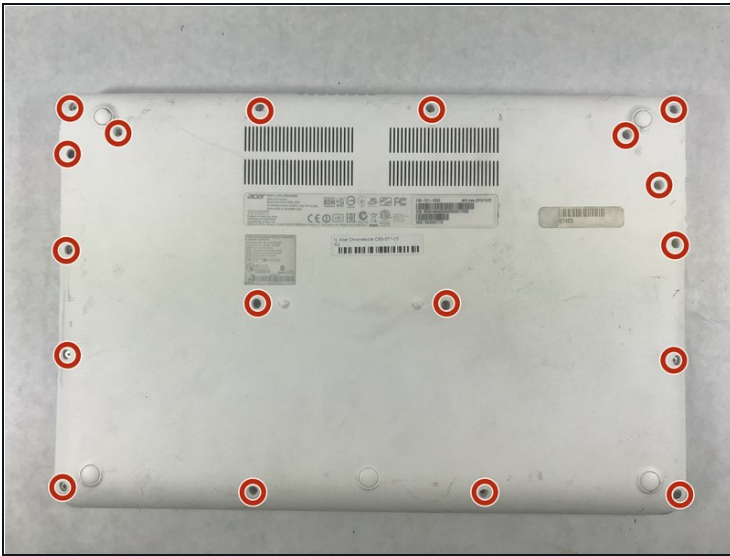

- Remove the following eighteen screws using a Phillips #0 screwdriver.

 Make sure the Chromebook is unplugged and shut down, so no files are lost and there is no risk of electrocution.

## Step 2

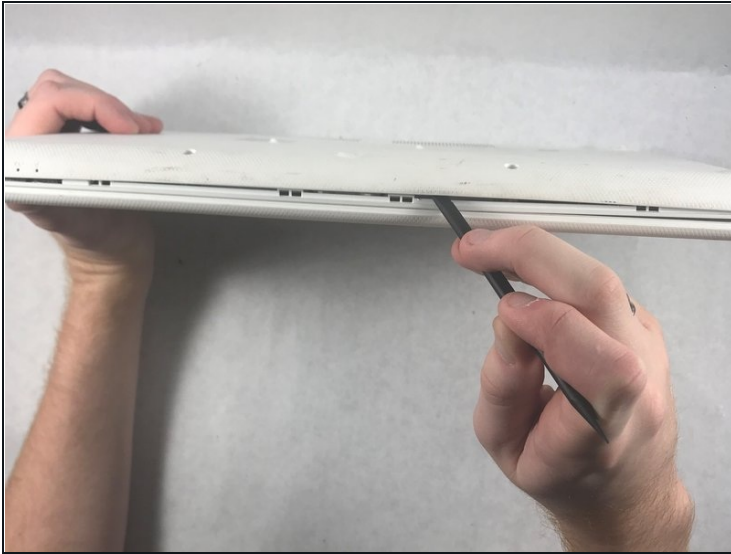

- Using the flat side of the spudger, pry open the bottom case of the laptop.
- ① Working from the front to the back, where it connects to the screen, proved to be the easiest way of popping the case off.

---

To reassemble your device, follow these instructions in reverse order.