



# Canon ZR70MC LCD Battery Replacement

Use this guide to replace the battery for the LCD screen on the Canon ZR70MC.

Written By: khalid clarke



## INTRODUCTION

The LCD battery powers the Canon ZR70MC LCD screen. This guide will show you how to replace the battery for the LCD screen. You will need to replace the LCD battery if your LCD screen is dim or will not turn on. The LCD battery is very small compared to the battery pack so make sure you have a designated location to keep track of the LCD battery and replacement battery.



### TOOLS:

- [Tweezers](#) (1)
- [64 Bit Driver Kit](#) (1)



### PARTS:

- [CR1632 Battery](#) (1)

## Step 1 — LCD Battery




- Open the LCD screen to expose the compartment where the LCD battery is held.

## Step 2



- Open the LCD battery compartment by pulling on the tab as seen in the picture.

## Step 3

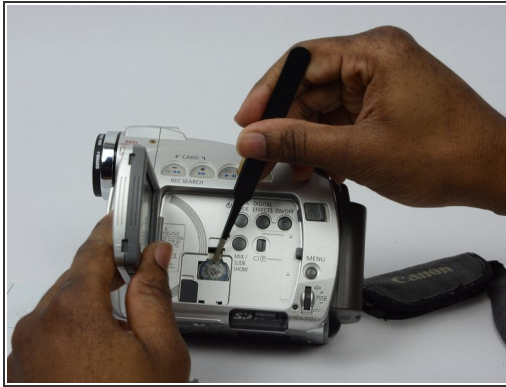

- Use tweezers to carefully pull out the LCD battery.

To reassemble your device, follow these instructions in reverse order.