


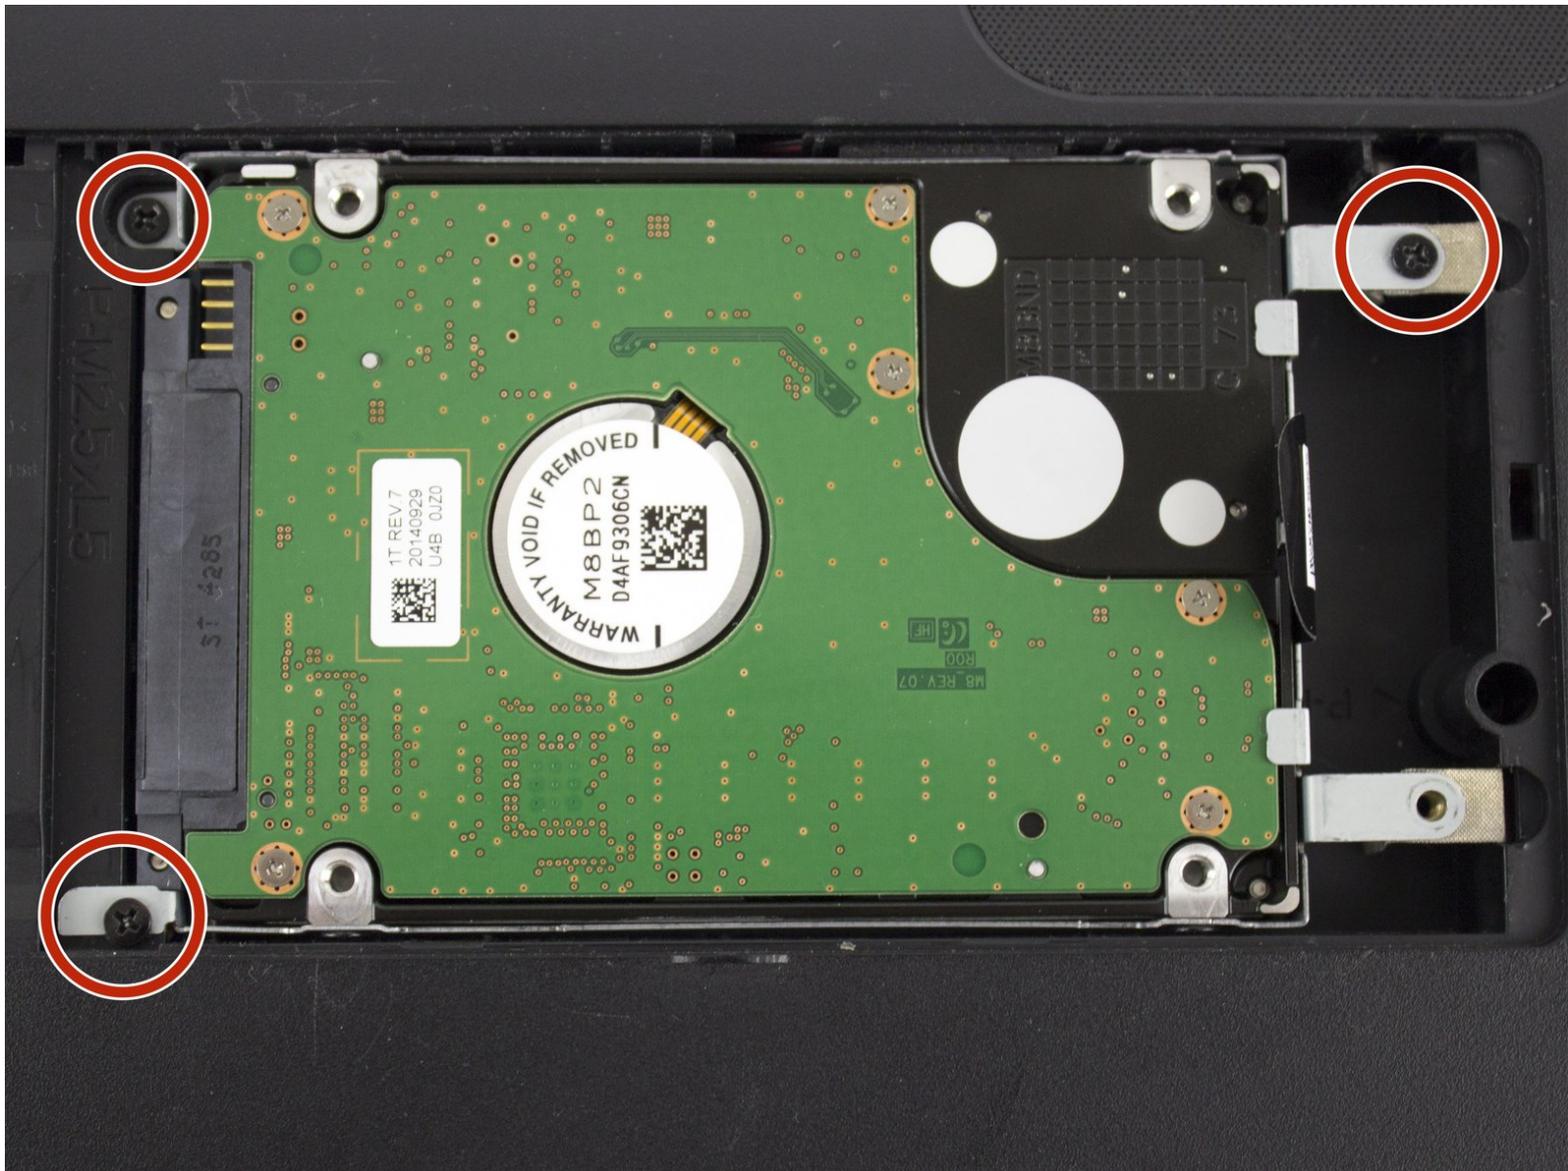

Dell Inspiron 17R-5737 Hard Drive Replacement

The hard drive must be removed before other steps to prevent damage to the hard drive.

Written By: Mack Chabot



TOOLS:

- [JIS #00 Screwdriver](#) (1)
-

Step 1 — Battery



 Make sure the laptop is off before attempting to remove the battery.

- Flip over your laptop so that the battery faces you.

Step 2



- Slide each latch away from the battery to unlock it.

Step 3




- Lift the battery upwards to remove it.
- ⓘ Continue holding the latches when removing the battery.

Step 4 — Access Panel



- Remove two 4.8mm screws with a JIS #00 screwdriver.
- Remove the access panel.

Step 5 — Hard Drive

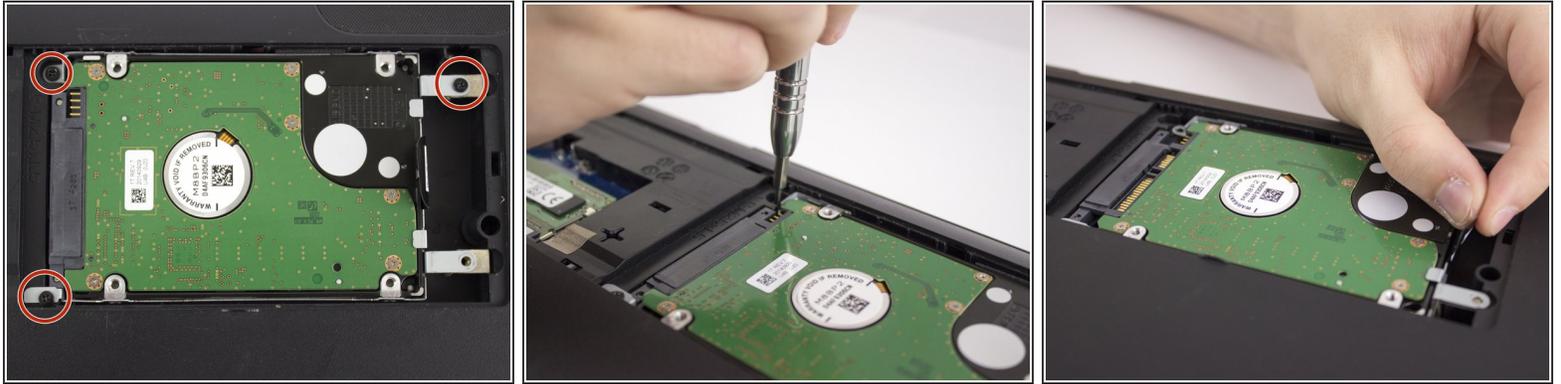

- Remove three 4.8mm screws from the hard drive with a JIS #00 screwdriver.
- Slide the hard drive to the left.
- Slide the hard drive to the right and up.

To reassemble your device, follow these instructions in reverse order.