



Panasonic ER430K Battery Replacement

Upon purchase of the trimmer, battery would not...

Written By: Dileep Balaji



INTRODUCTION

Upon purchase of the trimmer, battery would not be included. Therefore this guide would be of help to replace the battery into the trimmer.

⚙️ PARTS:

[AA Battery](#) (1)

Step 1 — Battery



- Remove the battery cover by rotating it counter-clockwise and lifting it off.
- Tilt the trimmer to the bottom, you will notice the battery housing.

Step 2



- Insert the AA Battery according to the terminals on the Battery housing.
- Note the '+' side in the the housing and the '-' side on the cover.

Step 3



- Twist the battery cover housing in a clockwise direction to secure the the battery.

To reassemble your device, follow these instructions in reverse order.