

Acer Chromebook 15 CB5-571-C09S Back Cover Replacement

Use this guide to replace the back cover of your Acer Chromebook 15 CB5-571-C09S.

Written By: Sakiynah Howard



INTRODUCTION

This guide will walk you through replacing the back cover of your Acer Chromebook 15 CB5-571-C09S.

TOOLS:


- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)

Step 1 — Back Cover




 Place the device on a flat surface faced down so that the fan vents are at the top of the device.

Step 2

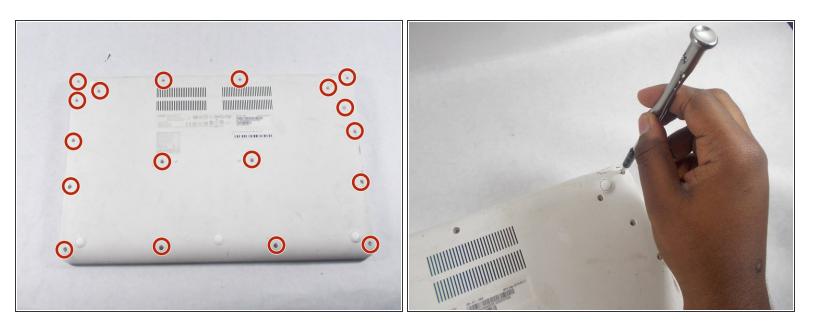

• Unscrew the eighteen 6 mm PH0 Phillips head screws from the back of the device.

Step 3

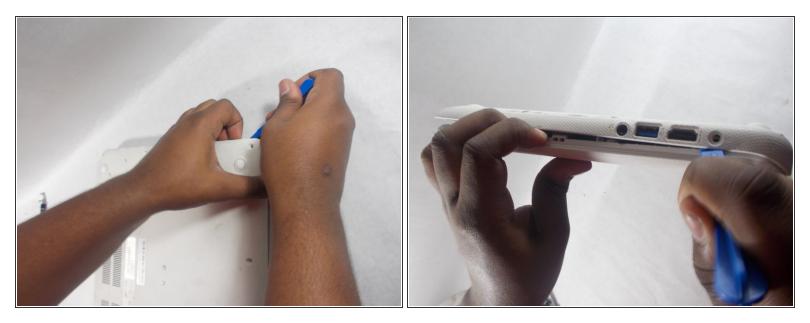

• Use a plastic opening tool to pry open the back cover around the edges of the device.

A Be careful not to crack or break the back cover of the device.

(i) You will have to adjust the position of the device to pry it open along all the edges.

Step 4



• Stand the device up with the hinges on top and carefully pull apart the back cover from the device.

To reassemble your device, follow these instructions in reverse order.