




Gateway P-7805u RAM Replacement

Learn how to replace your laptop's RAM.

Written By: Emily Pendleton

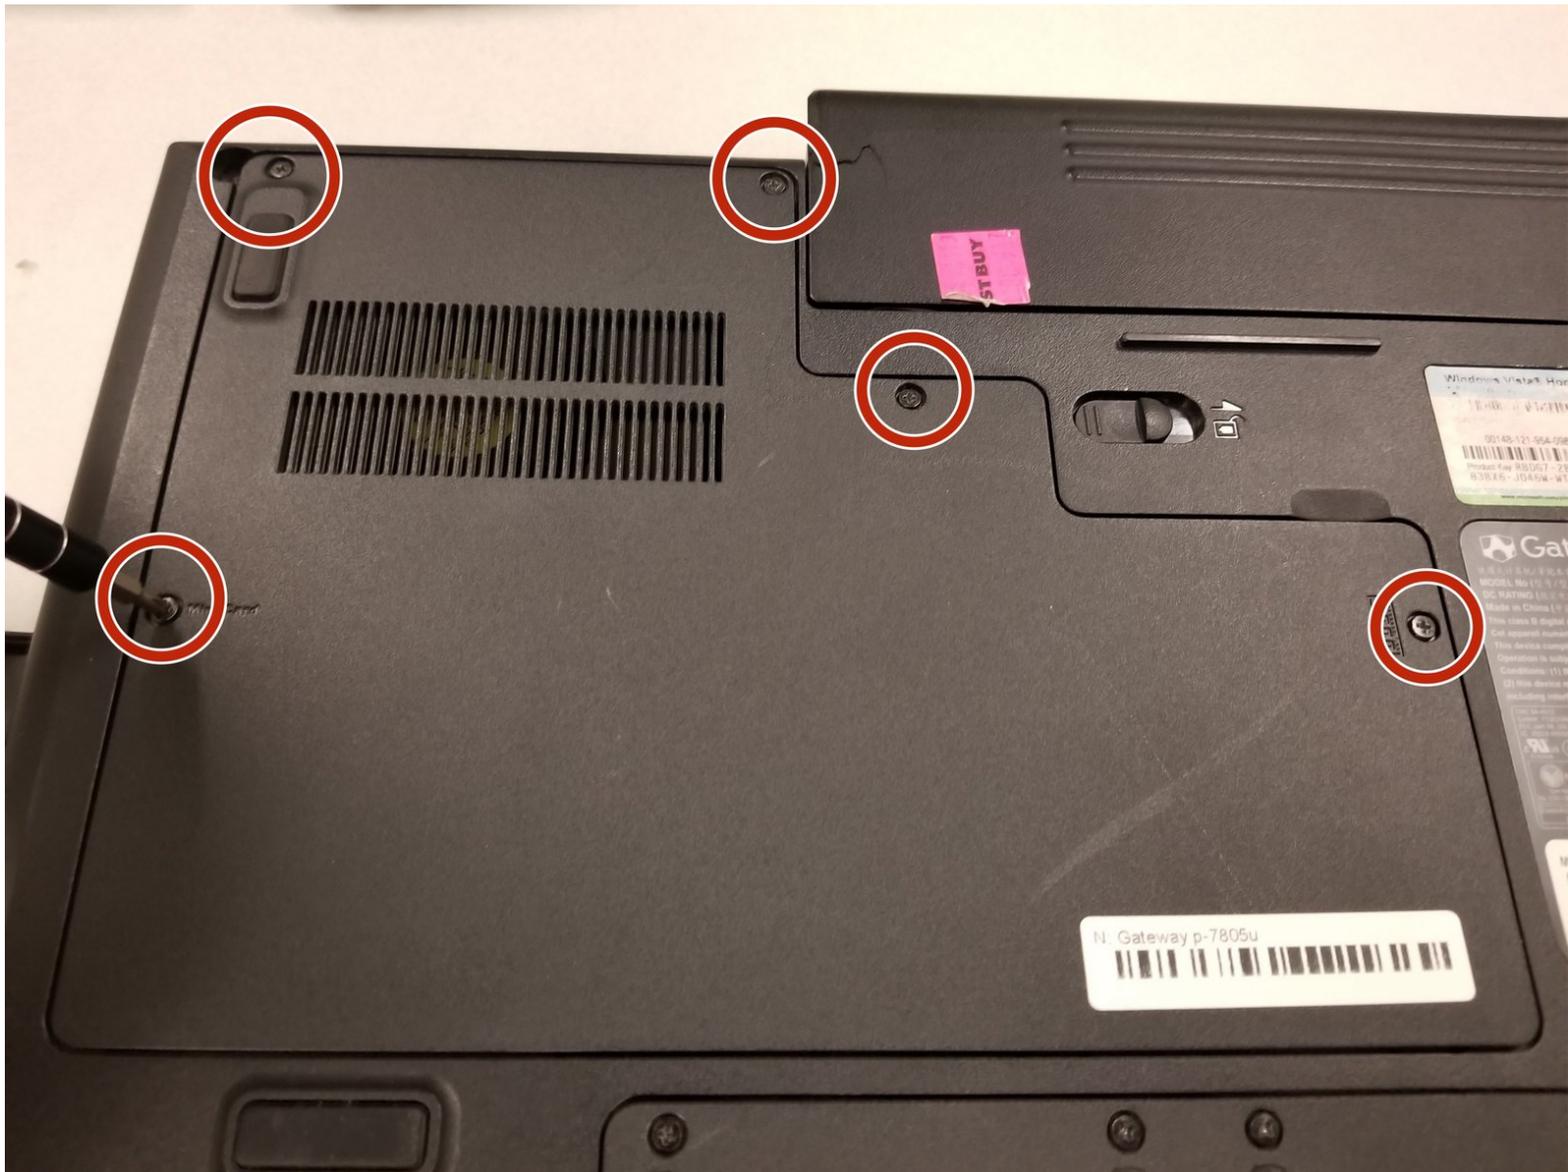


INTRODUCTION

This guide will teach you how to remove your laptop's RAM. Upgrading RAM is a common practice.

TOOLS:


- [JIS #0 Screwdriver](#) (1)
-

Step 1 — RAM

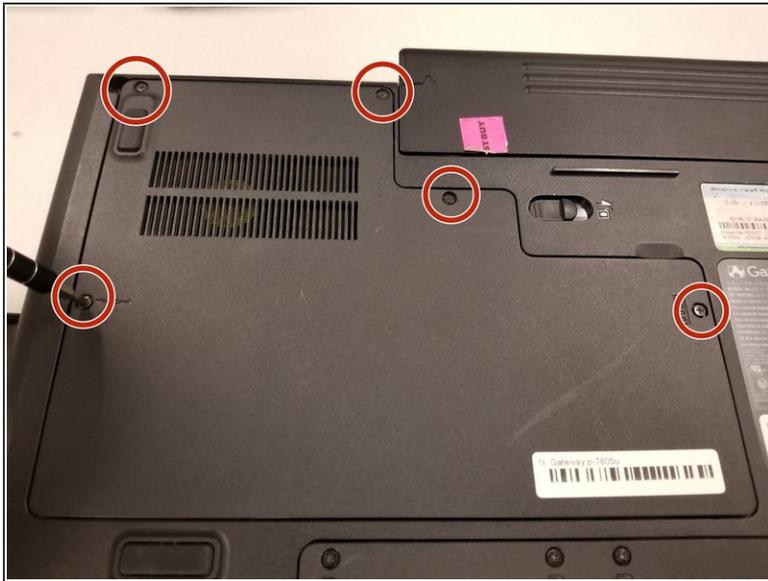

- Use the J0 screwdriver to remove the five 2mm screws holding the back plate.

Step 2

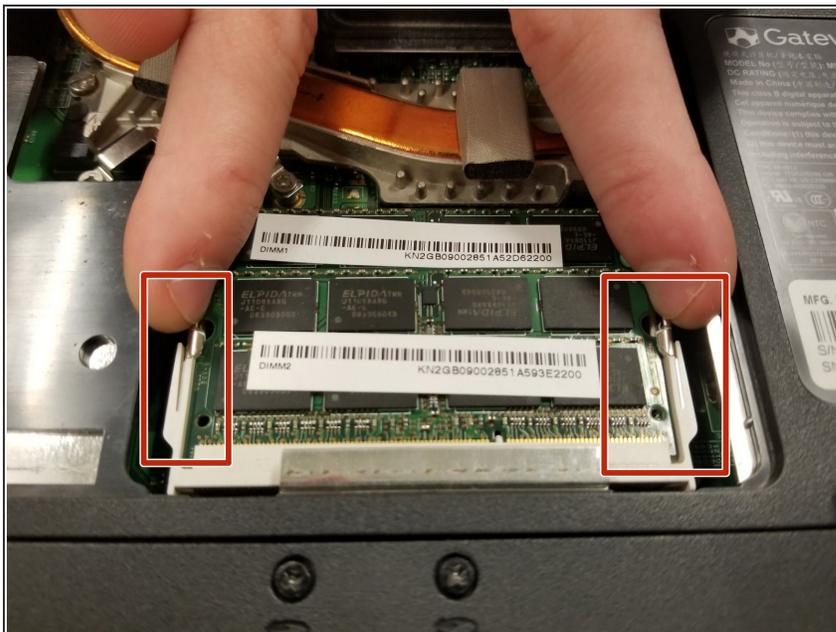


- Push the upper RAM module's two pins outwards at the same time.
- If done correctly, the module should lift.

Step 3



- Grab onto the module and pull away in a straight direction.

Step 4

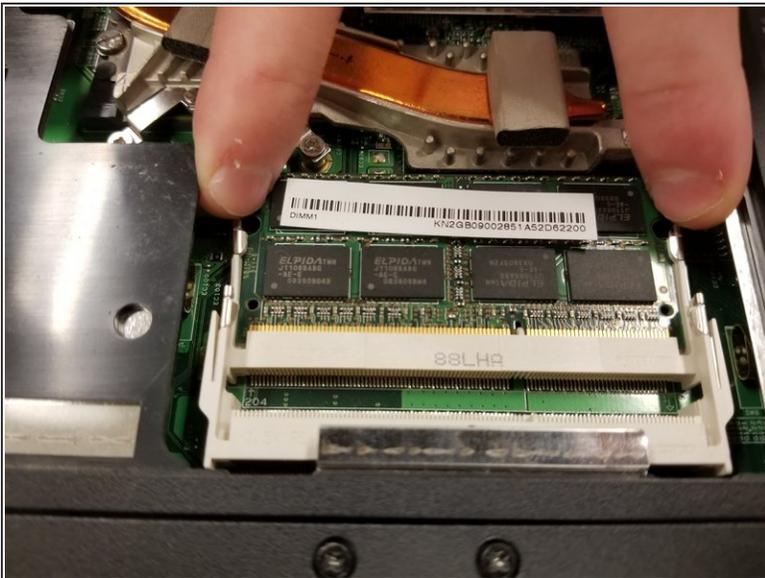

- Push the lower RAM module's two pins outwards at the same time.
- If done correctly, the module should have lifted.

To reassemble your device, follow these instructions in reverse order.