



# Harman Kardon Esquire Mini Buttons and Charging Indicator Lights's

Buttons can wear out over time or stop working. This guide will help you replace the buttons.

Written By: yousef aljeemaz



## INTRODUCTION

This guide will help you replace the buttons or the charging indicator. Buttons can wear out over time or stop working. Charging indicators might not light for electrical wiring reasons. A plastic opening tool and a PH0 screwdriver will be needed to remove the buttons/charging indicators.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Panel



- Using the plastic opening tool, to open the back panel of the device. Start on the longer sides to avoid bending the metal frame at the plug ports.
- Push down on the plastic opening tool, and push the back panel, repeat this for the 4 sides of the device.

## Step 2

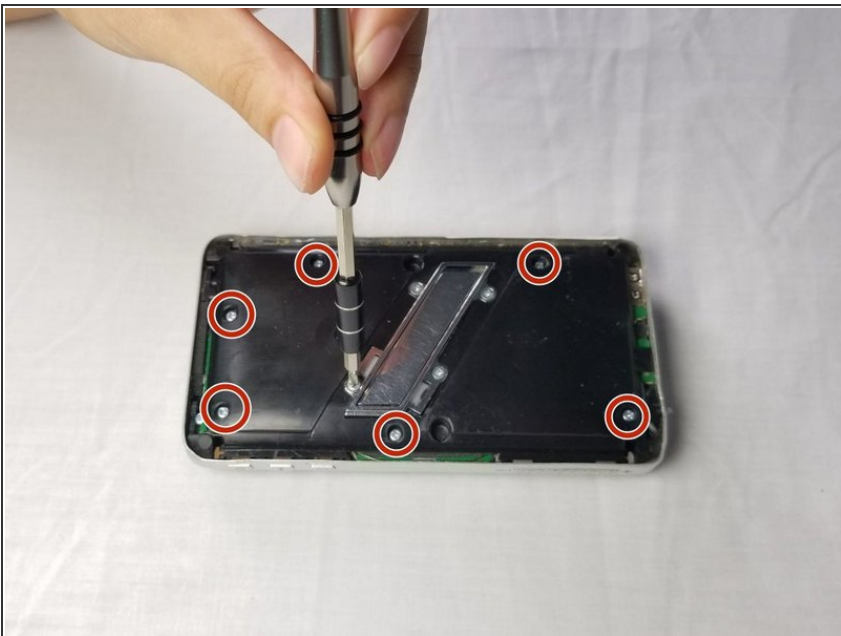


- Using the PH0 screw driver, remove the 7.5 mm screws by turning in a counter-clockwise direction. There are 6 screws on the front panel.
- Remove all of the 7.5 mm screws, by repeating the same step above. It is not necessary to remove the stand-leg.
- After unscrewing the 7.5 mm screws, just lift the plastic and you will see the motherboard.

### Step 3 — Buttons and Charging Indicator Lights's



 - The buttons will be on the side of the device, use the plastic opening tool to remove it from its actual place no need to use any screwdrivers.

### Step 4

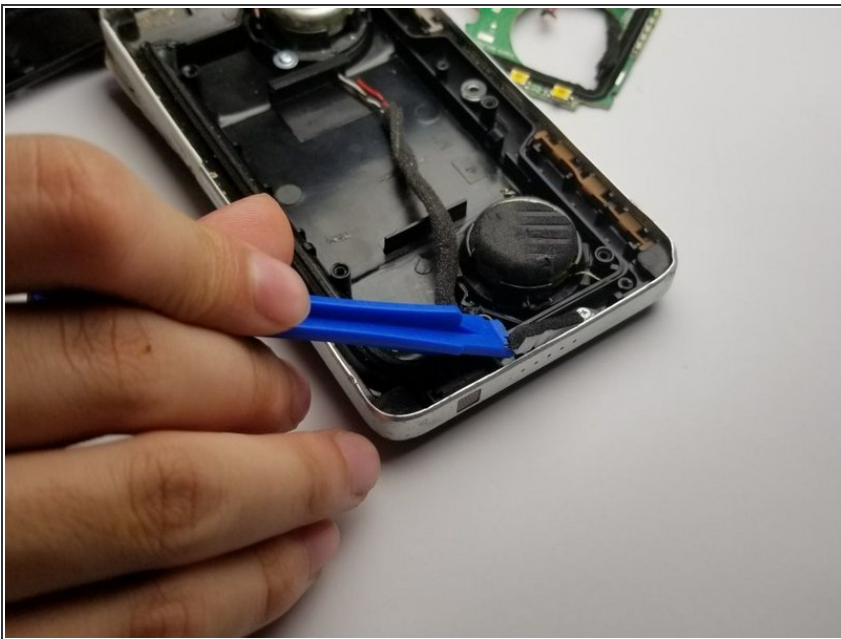

- Use the plastic opening tool to remove the indicator lights and replace them by new ones.

To reassemble your device, follow these instructions in reverse order.