



# Toshiba CB35-C3300 Chromebook 2 Back Cover Replacement

How to remove back cover of Toshiba CB35-C3300 Chromebook 2.

Written By: Jillian Thomas



---

## INTRODUCTION

Removing the back may be the easiest thing to do, however do not forget about the screws hidden under the rubber foot pads!



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



- Remove the 2 rubber foot pads from the bottom (opposite the hinge) with the small Plastic Opening tool.

## Step 2




- Remove the 10 7.1 mm screws using Phillips #1 screwdriver.

## Step 3



- Loosen the back cover by using a plastic opening tool all the way around the device.
- ⓘ There are areas all along the sides of the device that help aid in this.
- ⚠ Be careful when prying, and go slow. The silver plastic frame around the dull gray plastic bottom is fragile and easily dented from prying pressure.

## Step 4

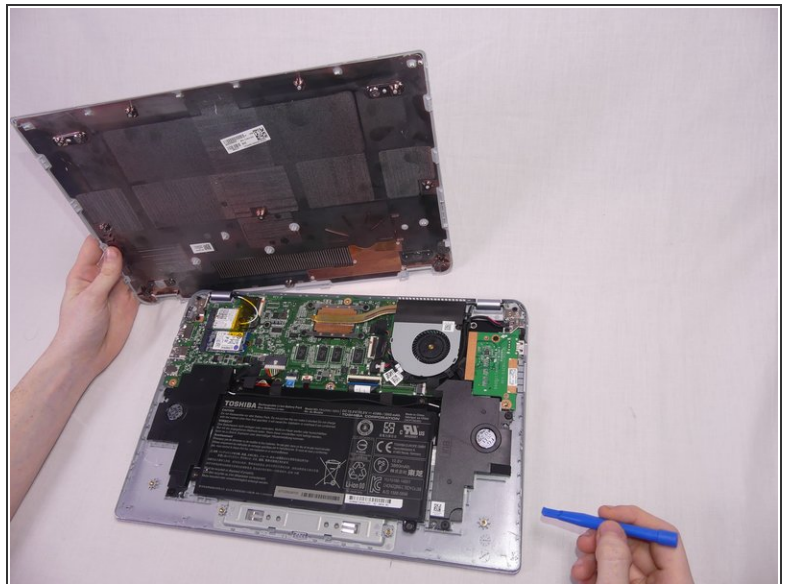

- Remove the back cover by gently lifting up on one side of the device.
- ⓘ The easiest side to lift up on is the one with the removed rubber foot pads.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:21:41 AM (MST).

