



# Acer Chromebook C740-C4PE LCD Screen Replacement

This guide shows you how to replace LCD Screen on an Acer Chromebook C740-C4PE.

Written By: Sang Huynh



## INTRODUCTION

When an Acer Chromebook C740-C4PE screen does not function as it should (including black circles, colored lines, black screen, etc) the best solution is to replace the screen with a new one. This guide helps you to remove the old screen with all of the components that hold it, and install the new screen and secure it.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:


- [11.6" Chromebook LCD N116BGE-EA2REV.C1](#) (1)

## Step 1 — LCD Screen



- Turn off the Acer Chromebook, remove it from the charger, and disconnect the battery adapter.


## Step 2

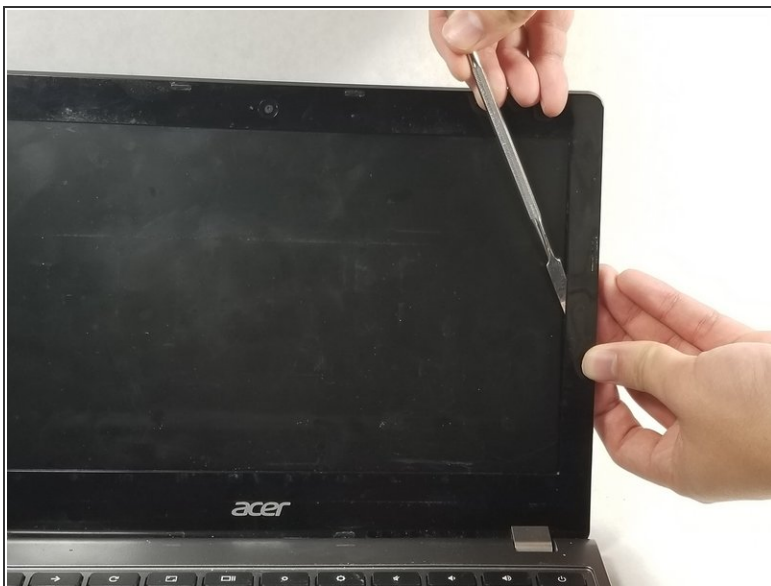

- Remove the black frame off the screen by using a spudger.
- ⓘ It is recommended to start removing the frame from the top corner.



## Step 3

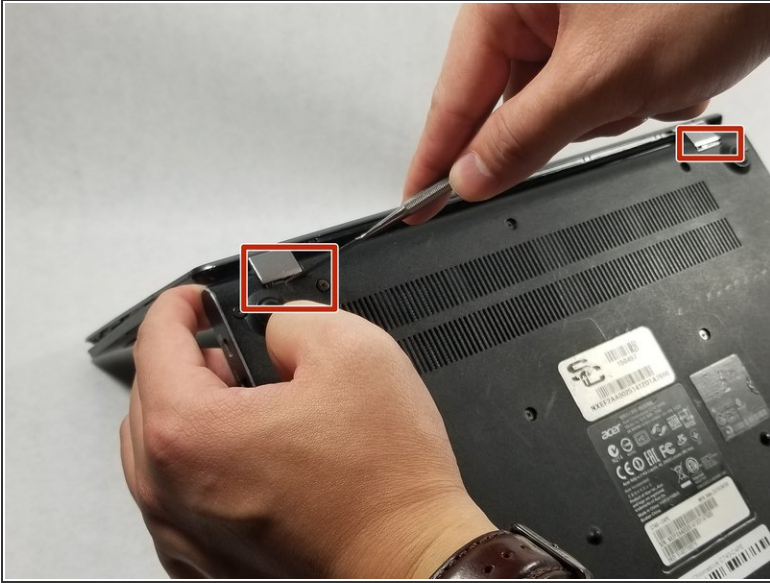


- Use the spudger to open the two hinges that connect the screen frame to the bottom of the Chromebook.
- Move the spudger along the bottom of the screen frame until you can pull the frame out entirely.

## Step 4



- Remove the four 3.4 mm screws by using the Phillips #0 screwdriver.

## Step 5

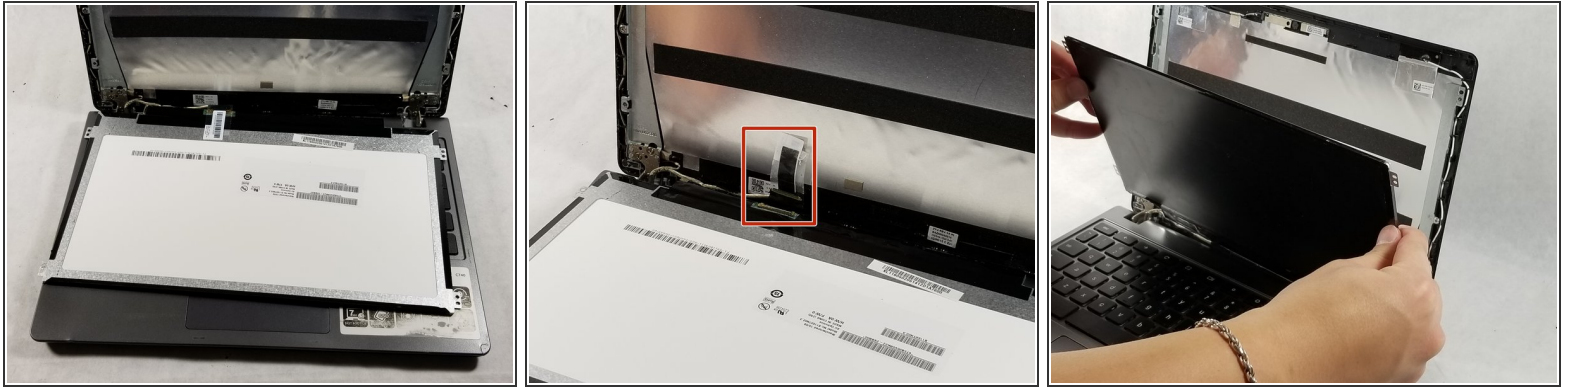

- Place the LCD screen on top of the keyboard.
- Lift the tape that holds the back of the LCD screen to the connector, and unplug the connector.
- Remove the LCD screen and replace it with the new one.

To reassemble your device, follow these instructions in reverse order.