




Acer Chromebook C740-C4PE Battery Replacement

This guide will demonstrate how to remove the battery in an Acer C740-C4PE.




Written By: Jacob Kahn

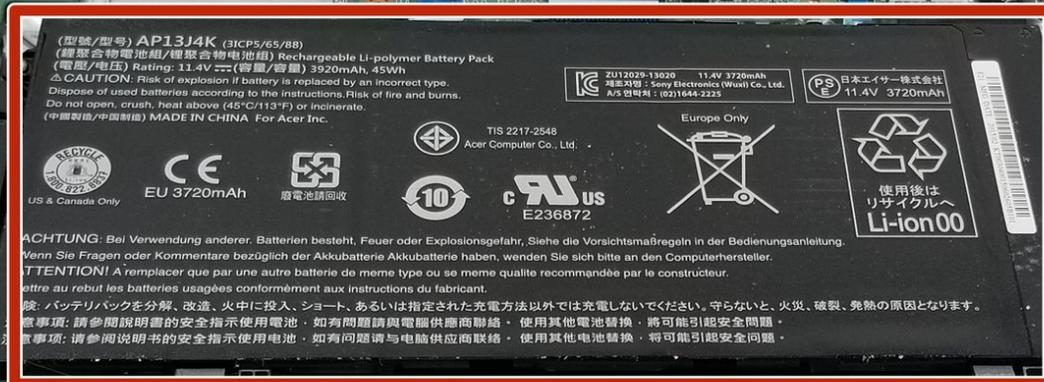

 **TOOLS:**

- Phillips #0 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Battery

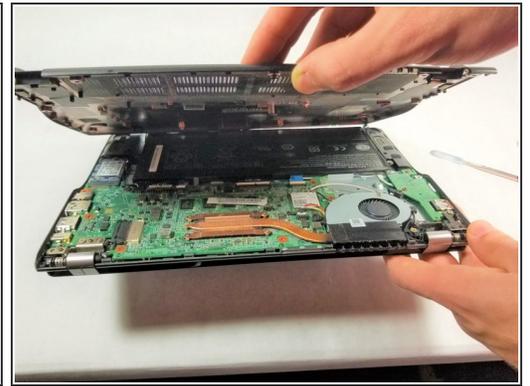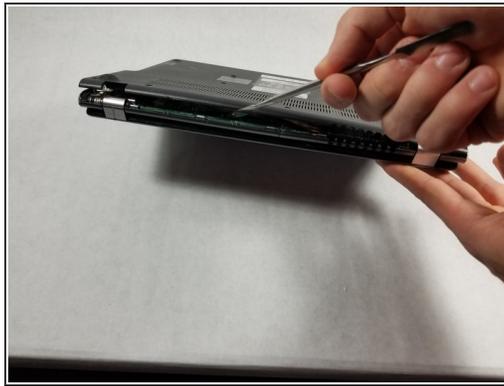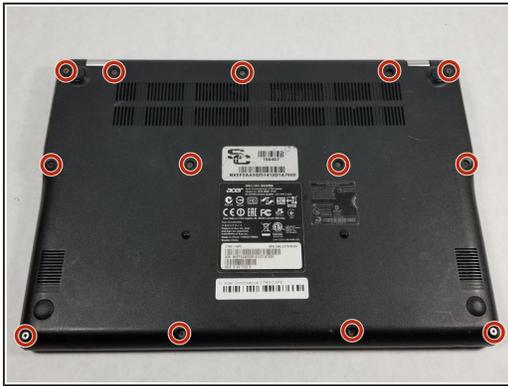

- ⓘ Make sure the laptop is turned off and unplugged before starting.
 - Unscrew the thirteen 10mm screws on the back of the computer using the Phillips #0 screwdriver.
 - Using the spudger or other prying tool, gently pry the back off of the device.
- ⚠ Be sure not to pry too hard as it may result in snapping the back plate.

Step 2




- Unscrew the two 5mm battery screws using the Phillips #0 screwdriver.

Step 3



- Gently lift the battery up and away from the hooks on the bottom of the device keeping the battery in place.
- ⚠ Be sure the battery is away from the clips before pulling away so as not to break the clips.

Step 4

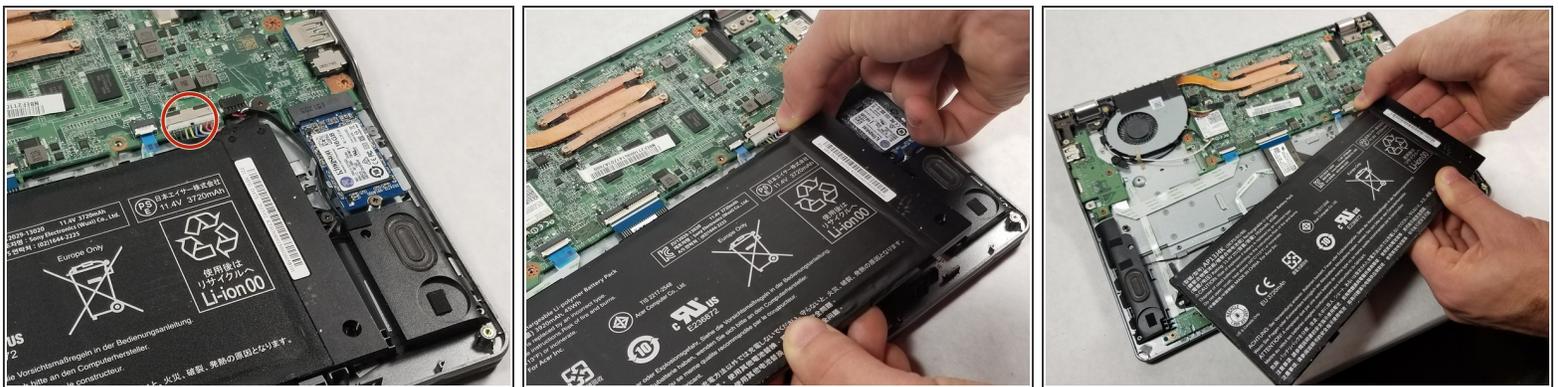

- Detach the connecting cable from the motherboard by pulling away.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.