




# Fujitsu Lifebook Stylistic Q584 Inner Back Shield Replacement

Remove the inner shield from the back of the Fujitsu Lifebook Stylistic Q584.

Written By: Spencer Bacon

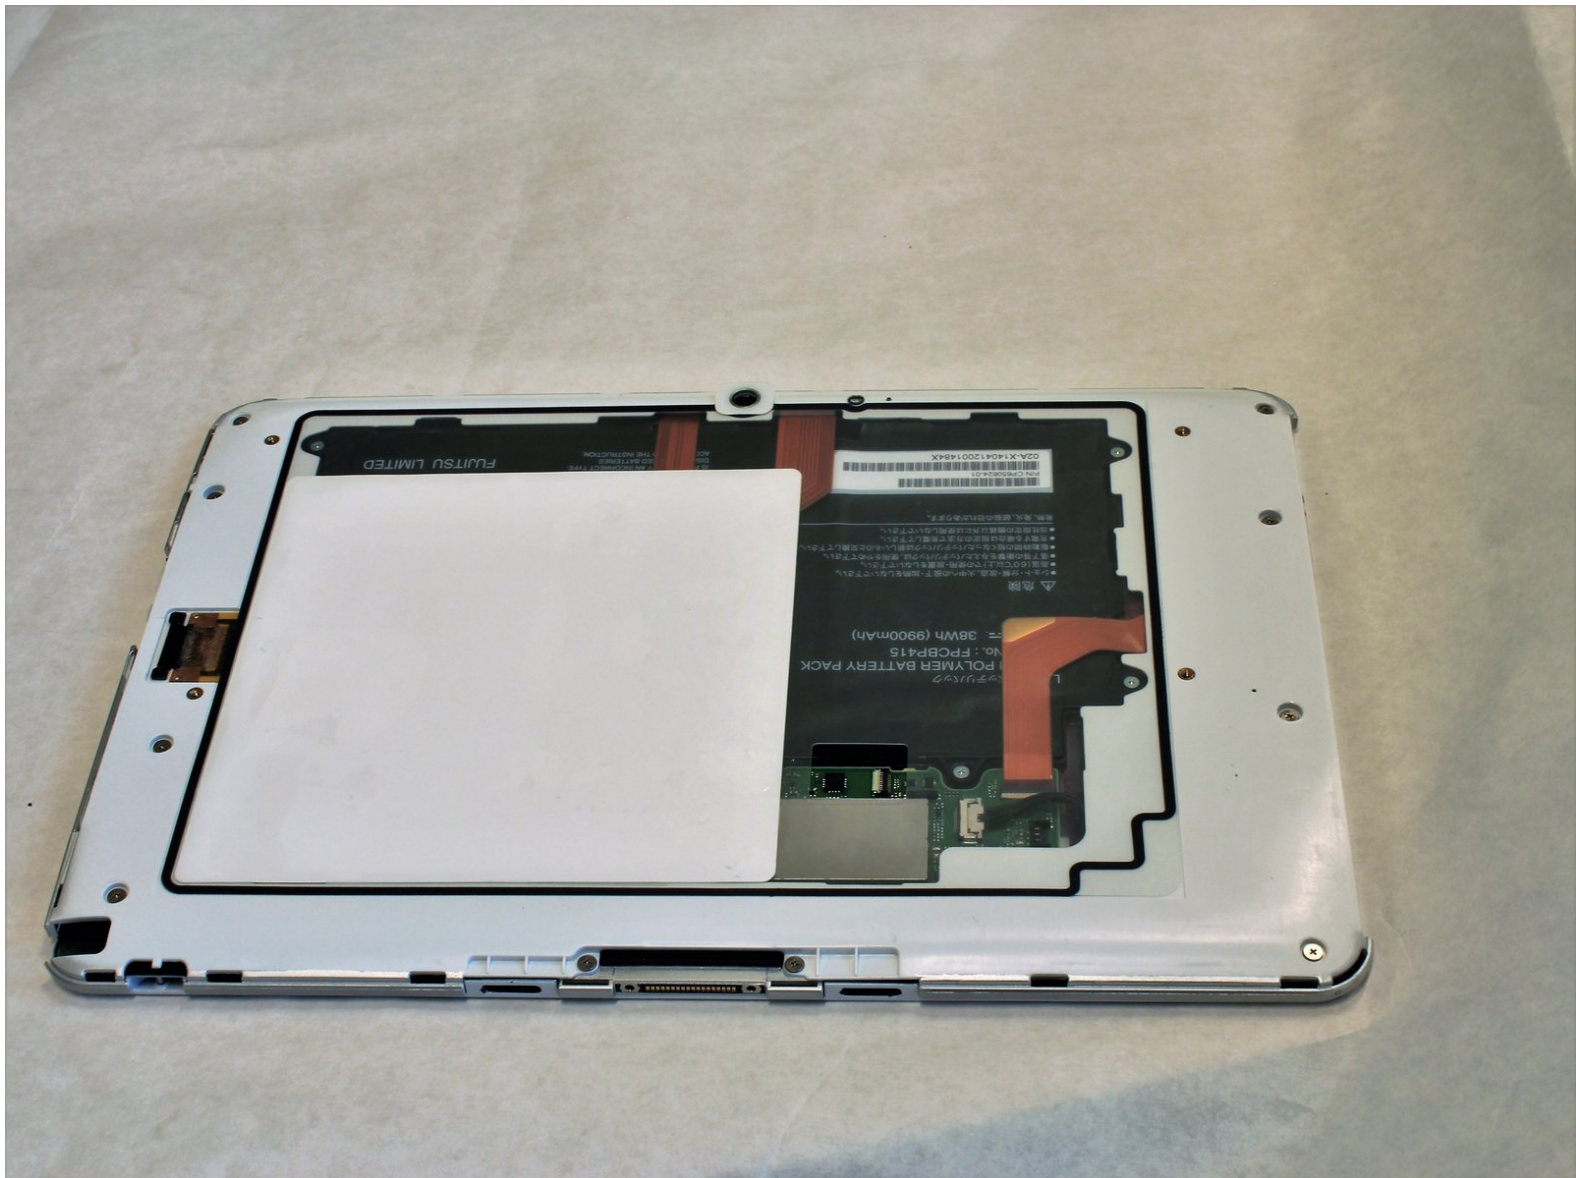

## INTRODUCTION


This is another protective layer you will need to remove prior to accessing the internal parts of the device.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Case

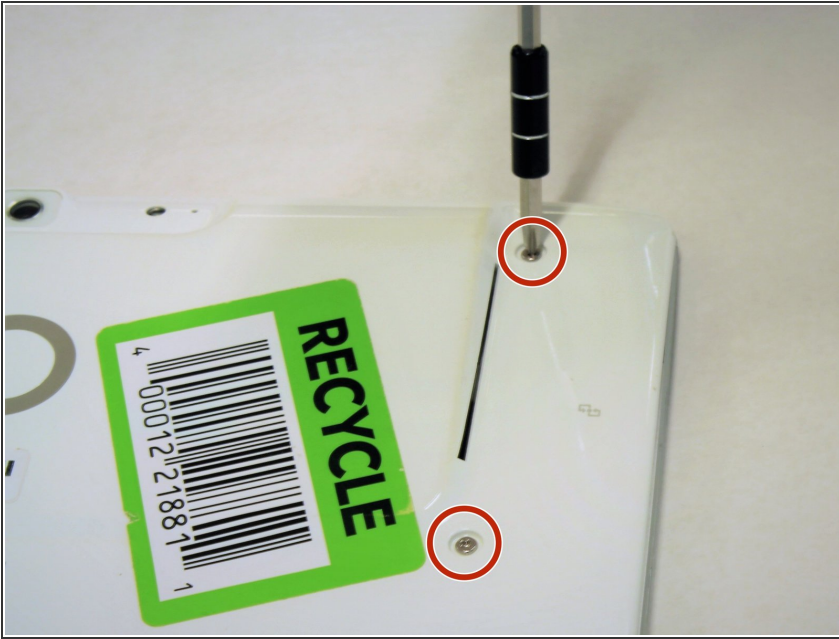

- Remove the white sticker covering the screws *(if applicable)*.
- Use the PH1 screwdriver to remove the four 2 mm screws from the the backside of the device.


## Step 2



- Insert the plastic opening tool along the seam of the back case.
- Gently slide the plastic opening tool along the entire seam popping the clips free.




### Step 3

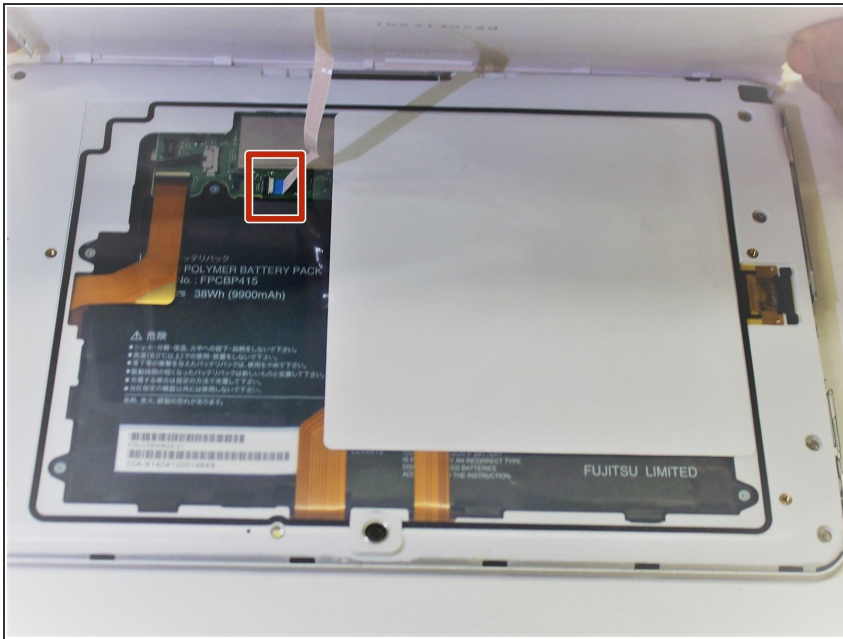


- Carefully lift the back case and remove the smartcard ribbon from the motherboard.

### Step 4 — Inner Back Shield

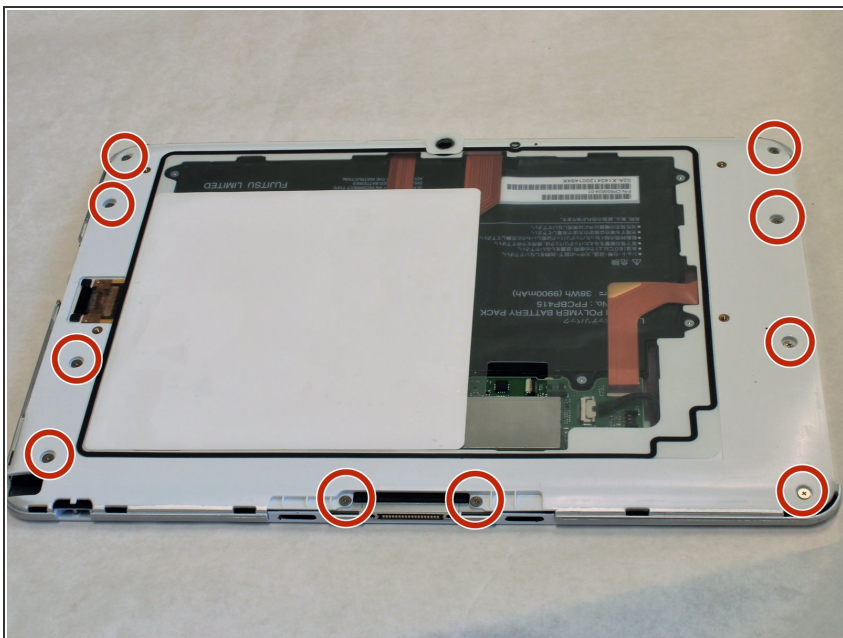


- Remove the ten 3mm screws with a PH00 screwdriver from the shield.

## Step 5

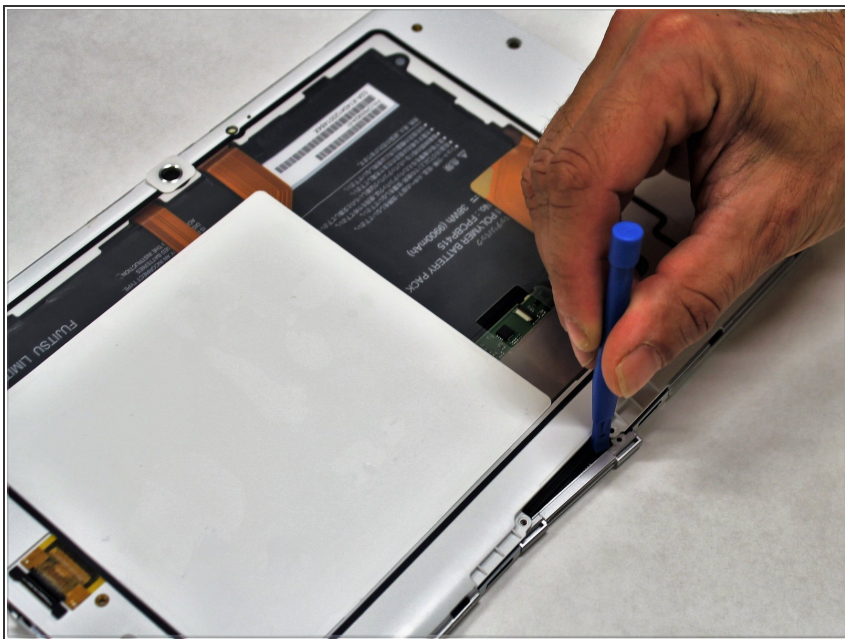

- Remove the grey docking station port cover.

## Step 6

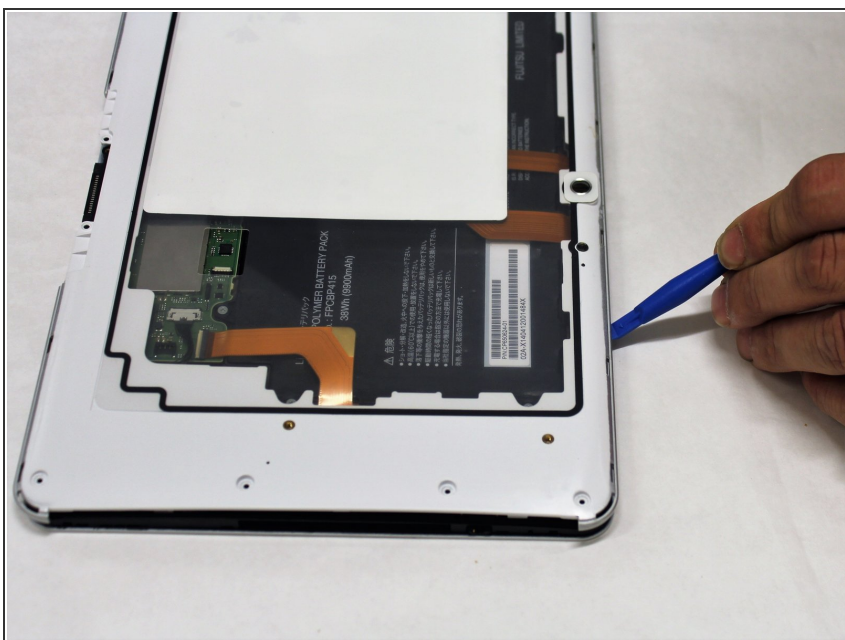

- Gently slide the plastic opening tool along the entire seam popping the clips free.

## Step 7



- Lift the shield away from the device and remove the fingerprint scanner's ribbon from the motherboard.

To reassemble your device, follow these instructions in reverse order.