


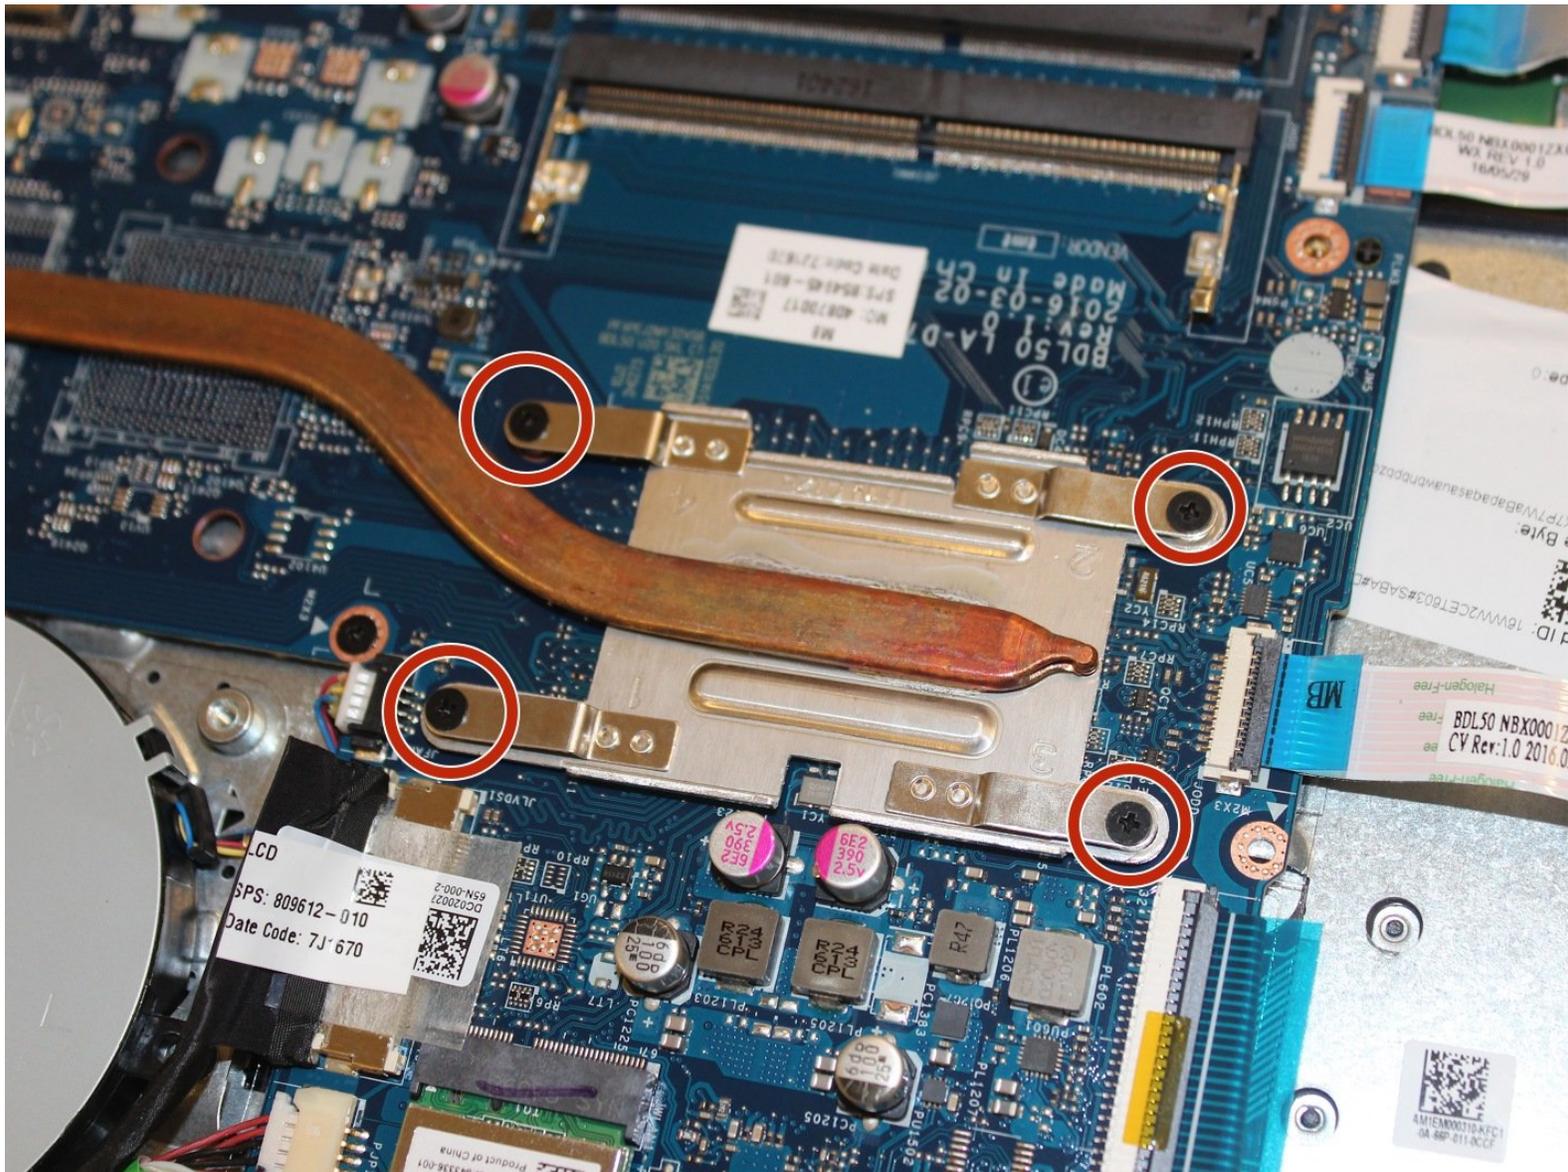

# HP 15-ay014dx Heat sink Replacement

Removal and replacement of the heat sink on a HP 15-ay014dx laptop.

Written By: Drake Scoville



---

## INTRODUCTION


This guide will teach you how to safely remove the heat sink on a HP 15-ay014dx laptop for maintenance or replacement.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

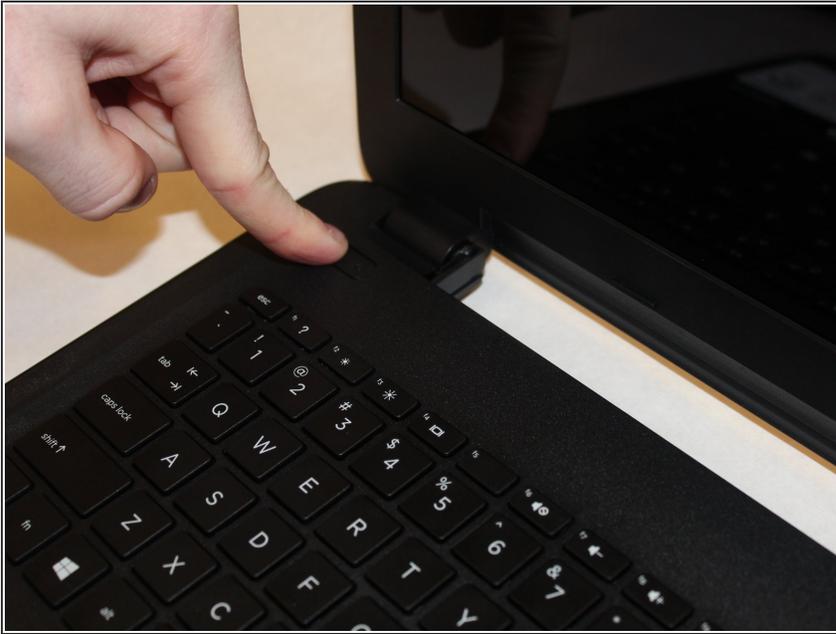

 Disconnect device from power source and power down.

## Step 2



- With the device turned upside down, use your index fingers to push the battery latches in towards each other.

### Step 3



- **i** The latch on your left will stay at the inward position, while the latch on the right will slide back out.
- Gently grasp the battery and pull it back away from the device and yourself.

### Step 4 — Optical Drive



- Close the laptop and lay it down with the bottom facing up.
- Using a size #00 Phillips screw drive remove the screw holding in the optical drive.

## Step 5



- Grip the optical drive and gently pull it out.

## Step 6 — Wireless Card




- Remove the 11 screws holding the body of the laptop together with a size #00 Phillips screwdriver.

## Step 7



- Using the spudger, push in the tabs in the back that hold the body together. Carefully pry the body apart by working the spudger around the body.

## Step 8

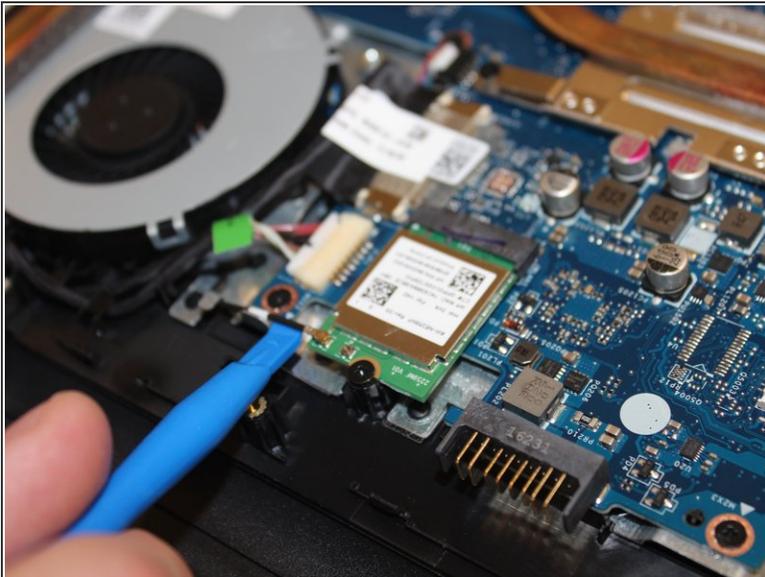


- Using the spudger, carefully pry the wire connecting the wireless card to the motherboard off of it.

## Step 9




- Using the size #00 Phillips screwdriver remove the single screw holding it in place.

## Step 10

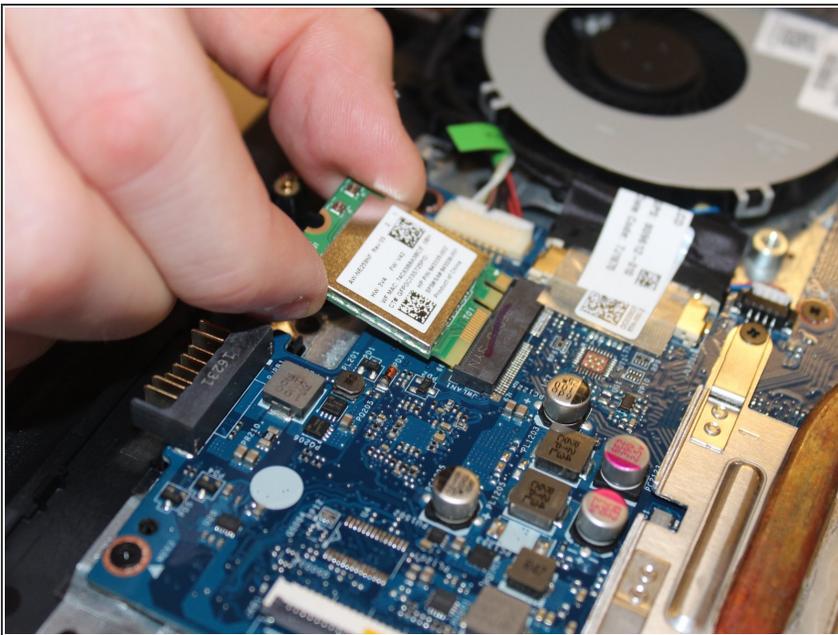


- carefully pull the card of its slot.

## Step 11 — Heat sink

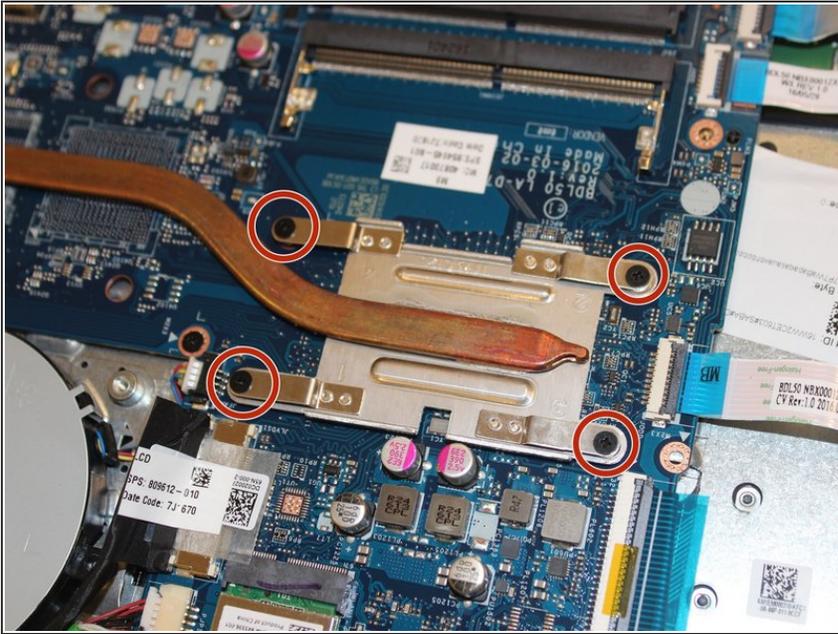

- Remove the four screws holding the heatsink on.

## Step 12

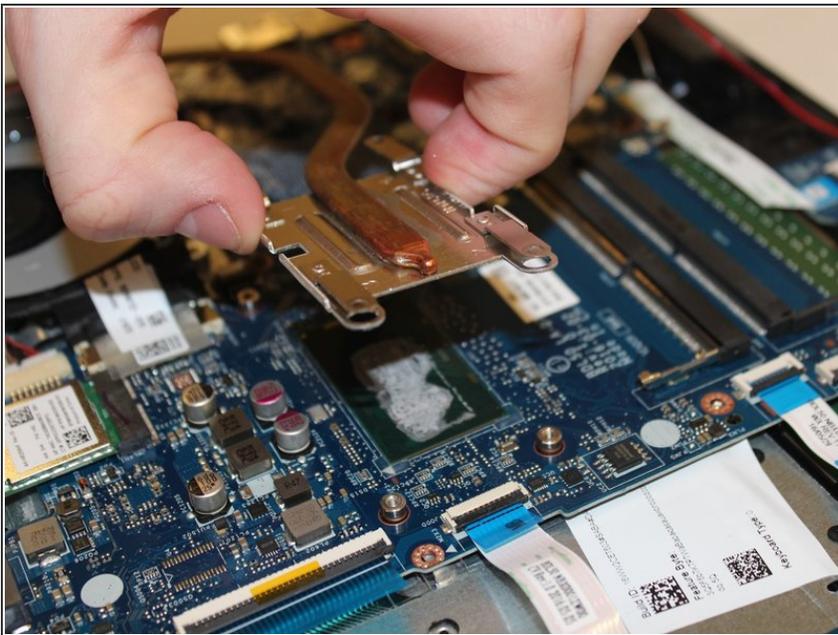

- Carefully pry the heat sink up and out of position to un-stick it from the thermal paste.
- ⓘ When reassembling, follow these steps on [How to Apply Thermal Paste](#) underneath the heatsink.

To reassemble your device, follow these instructions in reverse order.