




# Asus X54C-RB92 RAM Replacement

This guide will show the steps for the replacement of the RAM.

Written By: Julia Huang

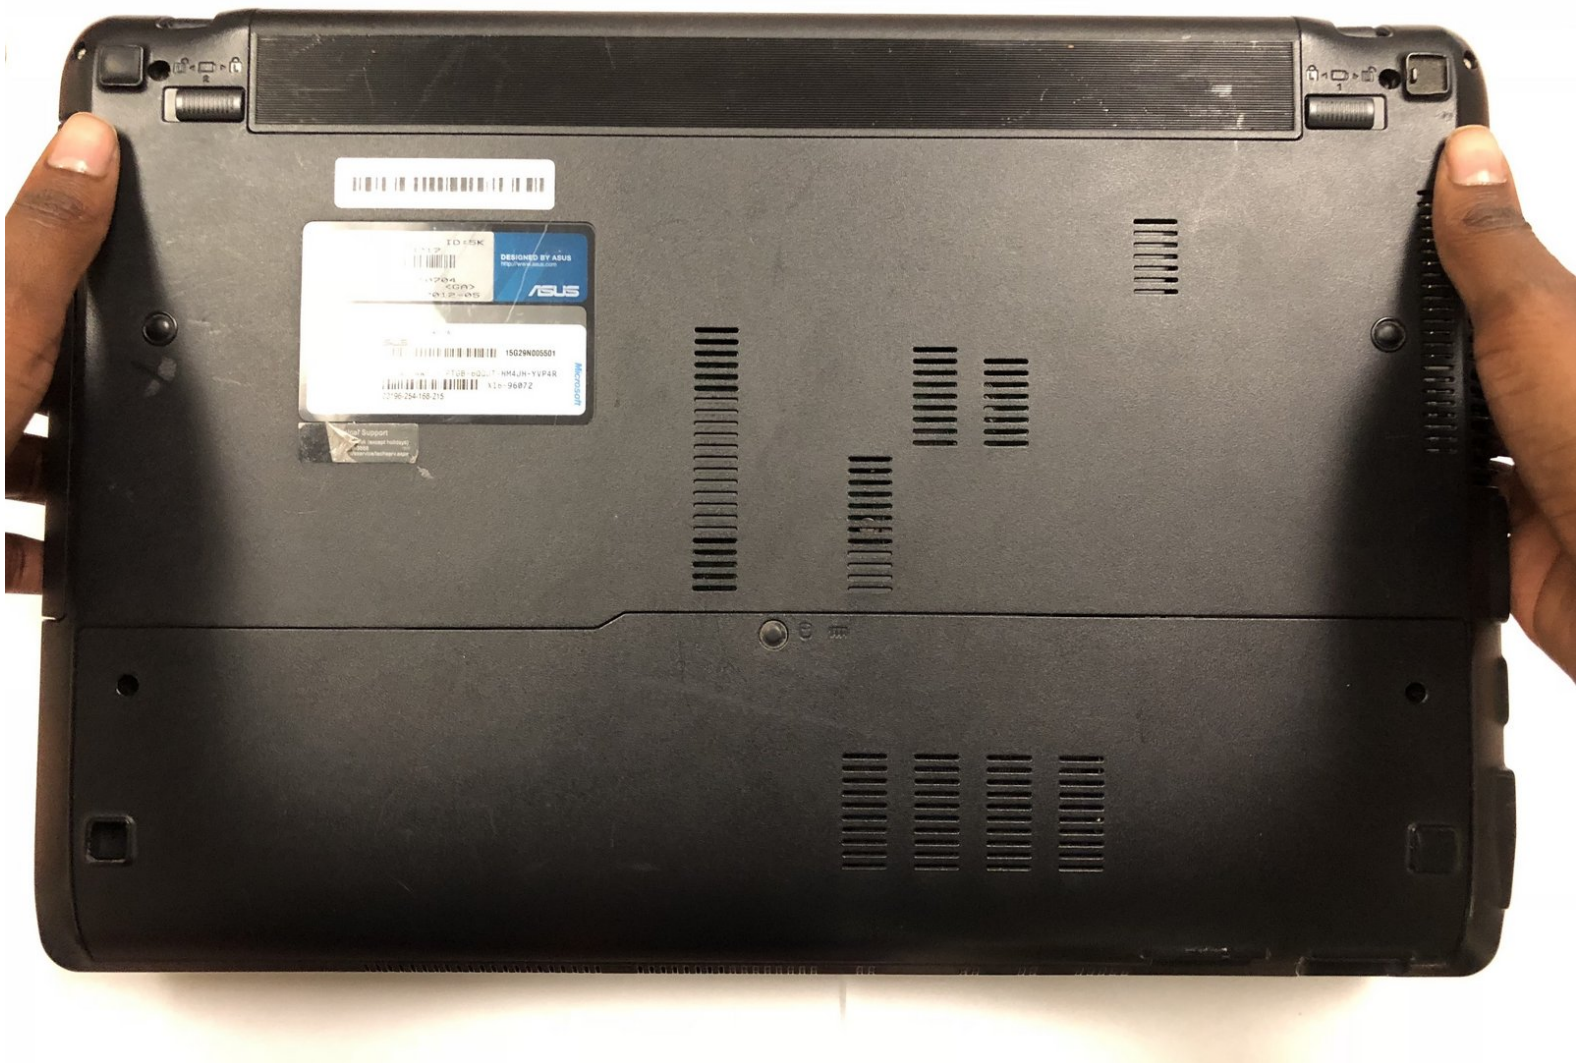

---

## INTRODUCTION

Is your computer crashing and is all your information lost? It may be time to replace your RAM.

---



### TOOLS:



- [iFixit Phillips #00 Screwdriver](#) (1)
-

## Step 1 — RAM



- Hold the laptop upright with both hands.

## Step 2

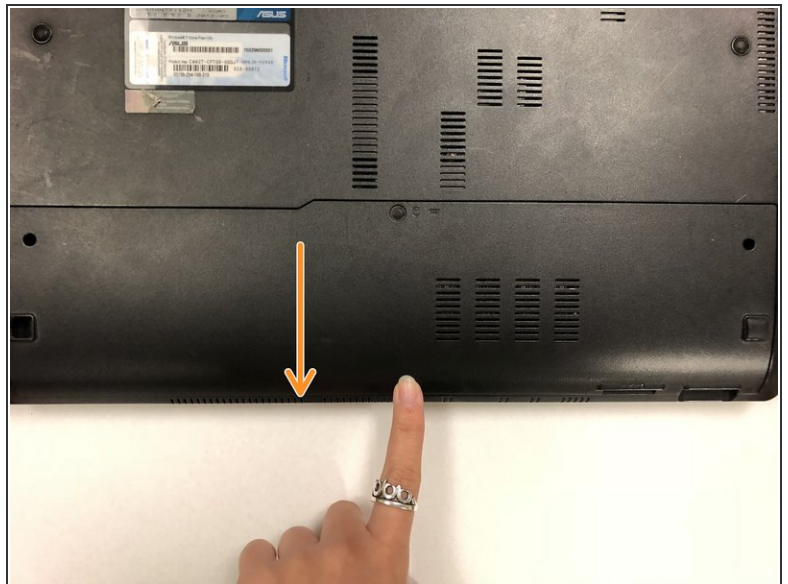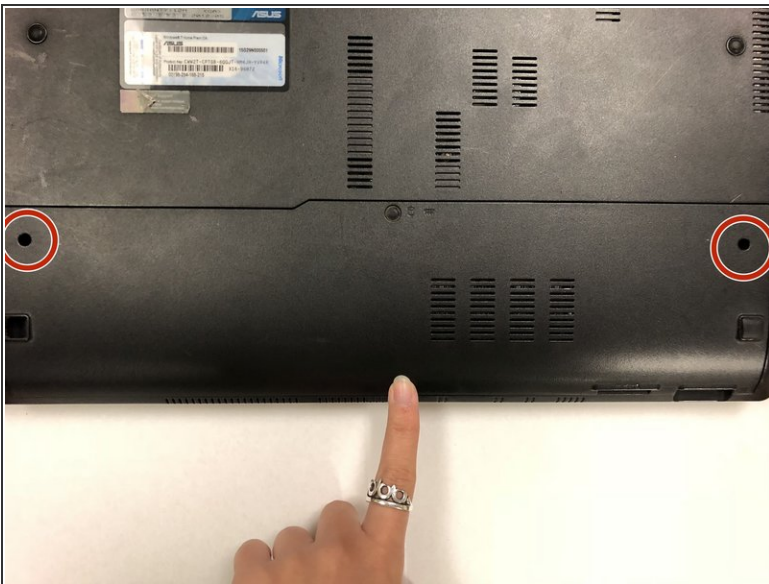

- Locate and remove the 12 mm screws at the base of the laptop.
- Slide downward to remove the base of the laptop, revealing the RAM.



### Step 3




- Locate the RAM as shown in the image.

### Step 4



- Push the silver retaining brackets outwards to free the RAM stick(s).

## Step 5

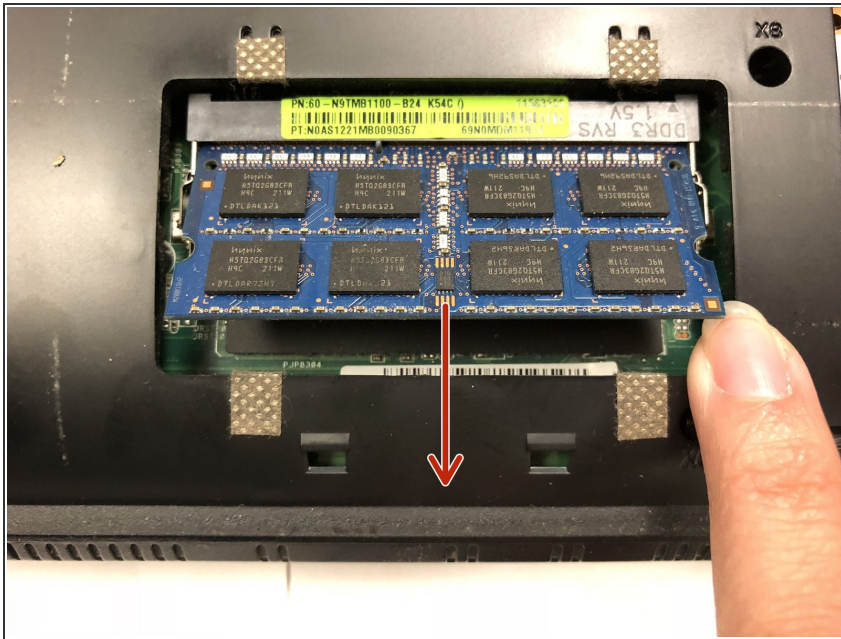

- Pull the RAM outwards after the RAM is lifted to remove the RAM.

To reassemble your device, follow these instructions in reverse order.