



Dell Chromebook 3180 LCD Replacement

This guide shows you how to replace the LCD panel for a Dell Chromebook 3180.

Written By: Jon



INTRODUCTION

This guide shows you how to replace the LCD panel for a Dell Chromebook 3180.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Dell Chromebook 11 3180 LCD Bezel](#) (1)

Step 1 — Prepare CB for LCD Bezel Removal



- Open the chromebook until its completely flat on the table
- Remove both the left and right hinge caps
- Remove a total of 4 screws. One in each corner.

Step 2 — Remove the LCD Bezel




- Use a plastic pry tool or blade and start in the top left corner or first left plastic ridge.

Step 3 — Remove LCD screen



- Remove a total of 4 screws. One in each corner
- Lift up the LCD screen from within the LCD assembly frame.
- On the back of the LCD screen, remove the tape and LCD connector

Step 4 — Install New LCD Screen

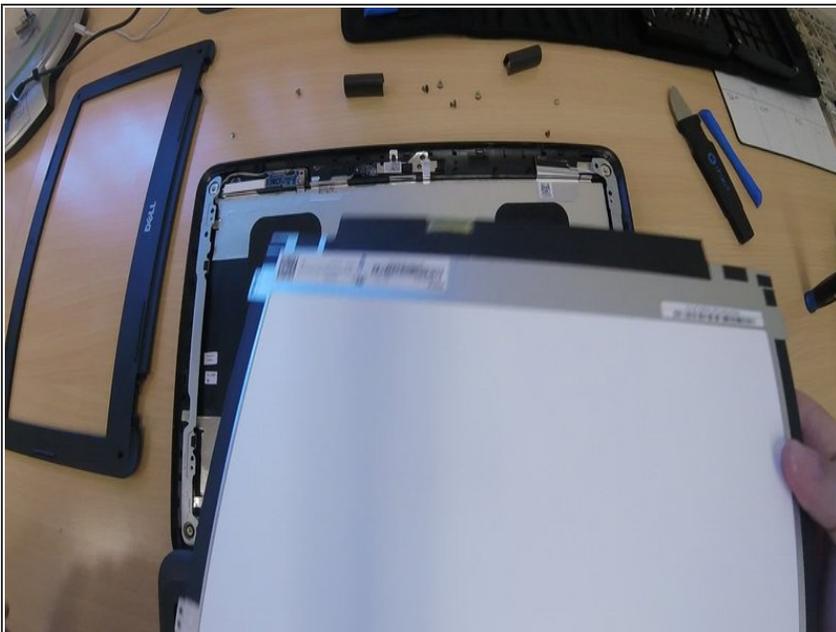

- Attach the LCD connector
- re-apply the tape to the LCD connector
- Set the new LCD screen into the LCD assembly frame while matching up the screw ports in each corner

Step 5 — Reinstall LCD Bezel



- When installing the LCD bezel, look for the plastic hinge outlines on each side and match them up with the metal hinges on the chromebook.
- Snap the LCD bezel in place until it is flush with the entire LCD assembly

To reassemble your device, follow these instructions in reverse order.