



# VTech InnoTab 2 Back Panel Replacement

Replace or clean stuck buttons to restore functionality to VTech InnoTab 2.

Written By: Roberto Valdes



## INTRODUCTION

A quick guide on how to remove stuck or clean buttons for your VTech InnoTab 2. If you are having trouble with the buttons on your InnoTab 2 feeling stuck or unresponsive follow these steps below.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS #0 Screwdriver](#) (1)

## Step 1 — Battery



- Apply slight pressure and slide the button above the battery cabinet to the right to open.
  - Remove battery cabinet cover by sliding away from the center of device.
- i** This device requires 4AA batteries to function without the AC adaptor.

## Step 2 — Back Panel



- Remove all nine plastic caps from the back of the device using the plastic opening tool.
- !** These covers are made of hard plastic so they may be difficult to remove.

### Step 3



- Remove the hard rubber tab located by the cartridge slot using the plastic opening tool.

 Be careful not to apply excessive force.

- Once the rubber tab is removed unscrew the single 7 mm screw using a J0 screwdriver.

### Step 4



- Remove all ten 7mm screws from the back panel of the device using a JO bit screwdriver.

 Do not use excessive force while removing the screws to prevent damaging the plastic case.

## Step 5



- Using the plastic opening tool, detach the back plate from the front piece.
- ⚠ Do not use excessive force. If the back plate does not gently come on double check that all screws were removed.
- ℹ Once the back panel is removed, you will be able to see the motherboard and other components within the device.

To reassemble your device, follow these instructions in reverse order.