




# Alienware 17 R2 Power-Button Board Replacement

In this guide, I will show you how to remove and replace the power button board.


Written By: Terrence15

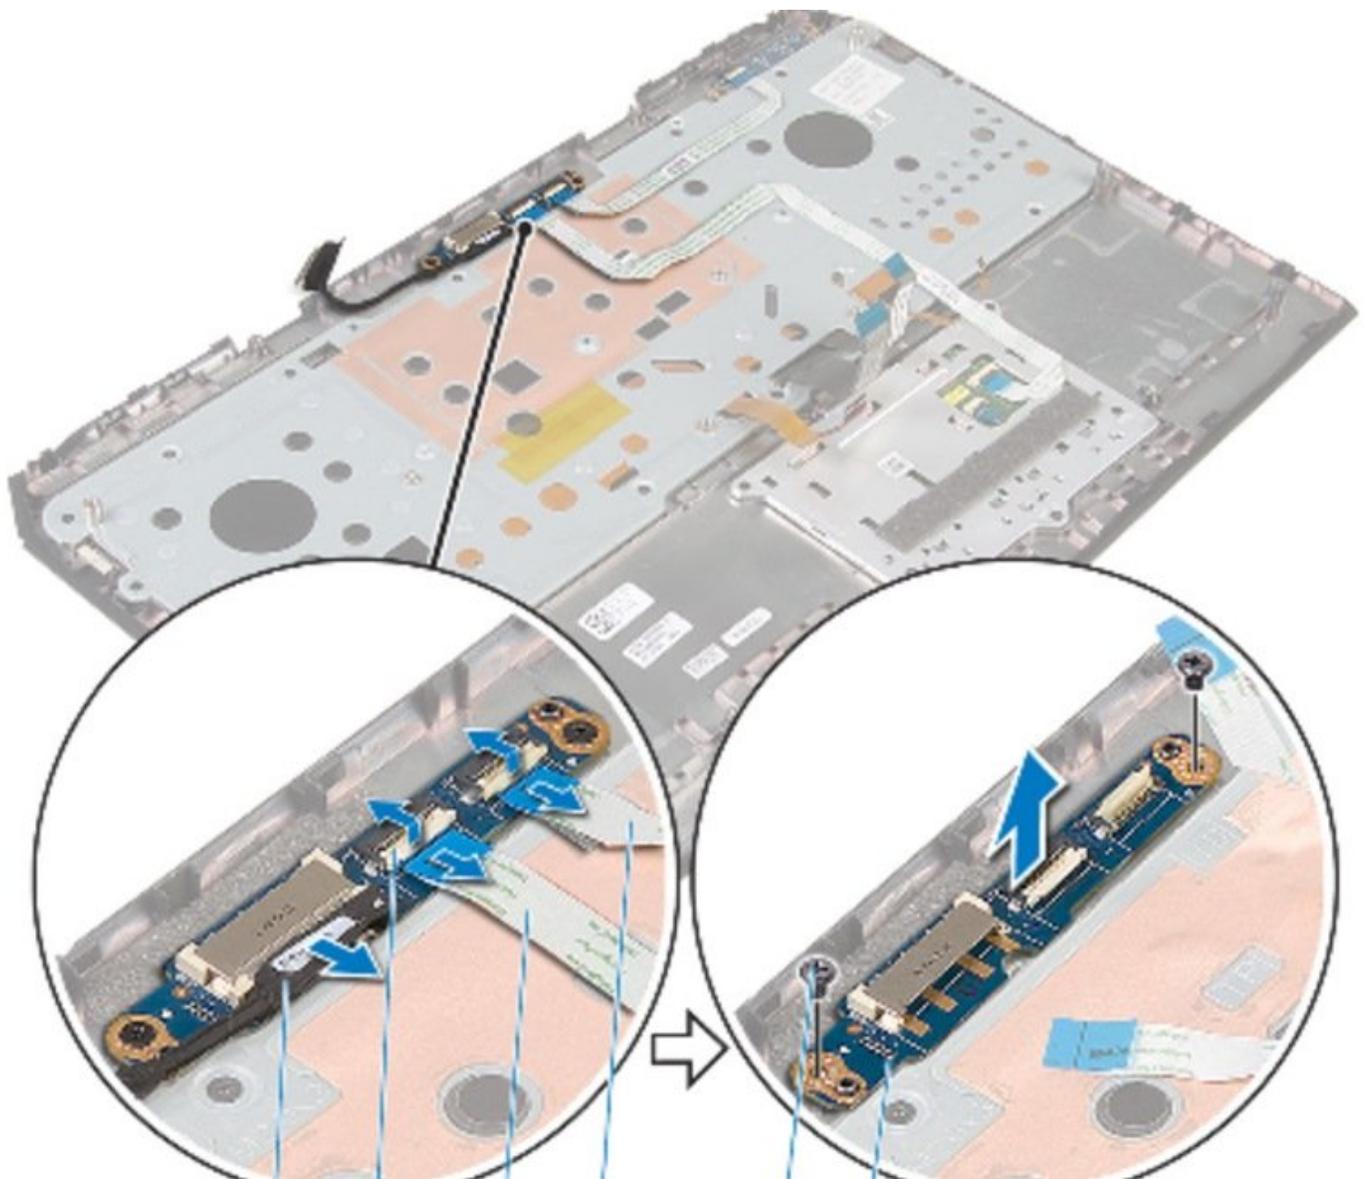

## **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Removing the Base Panel

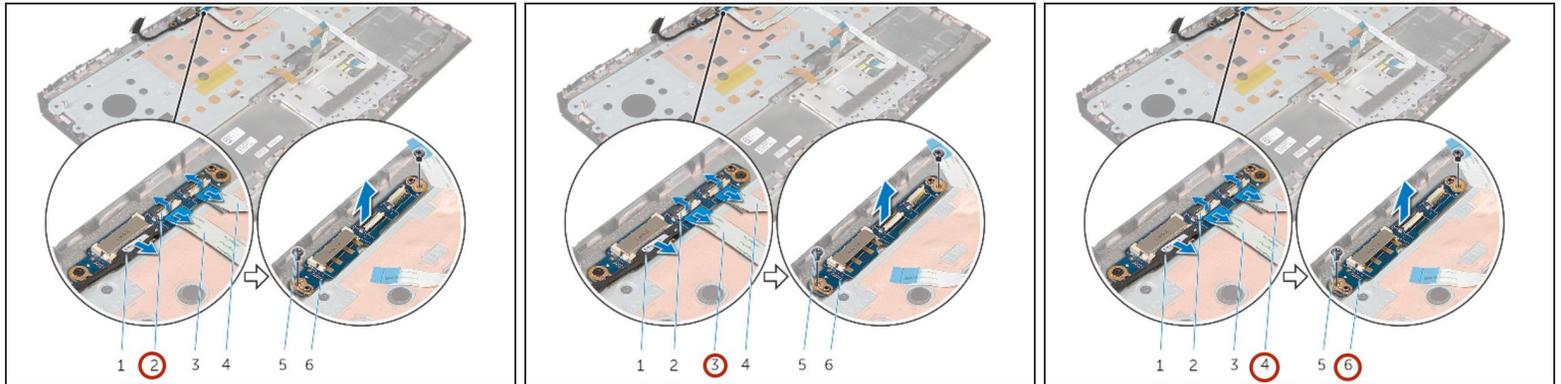

**⚠ WARNING :** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

- i** Make sure the base panel is removed.
- i** Make sure the [palm rest](#) is removed too.
- Lift the latches and disconnect the touch-pad cable and the status-light cable from the power-button board.

## Step 2 — Disconnecting the Power-Board Cable

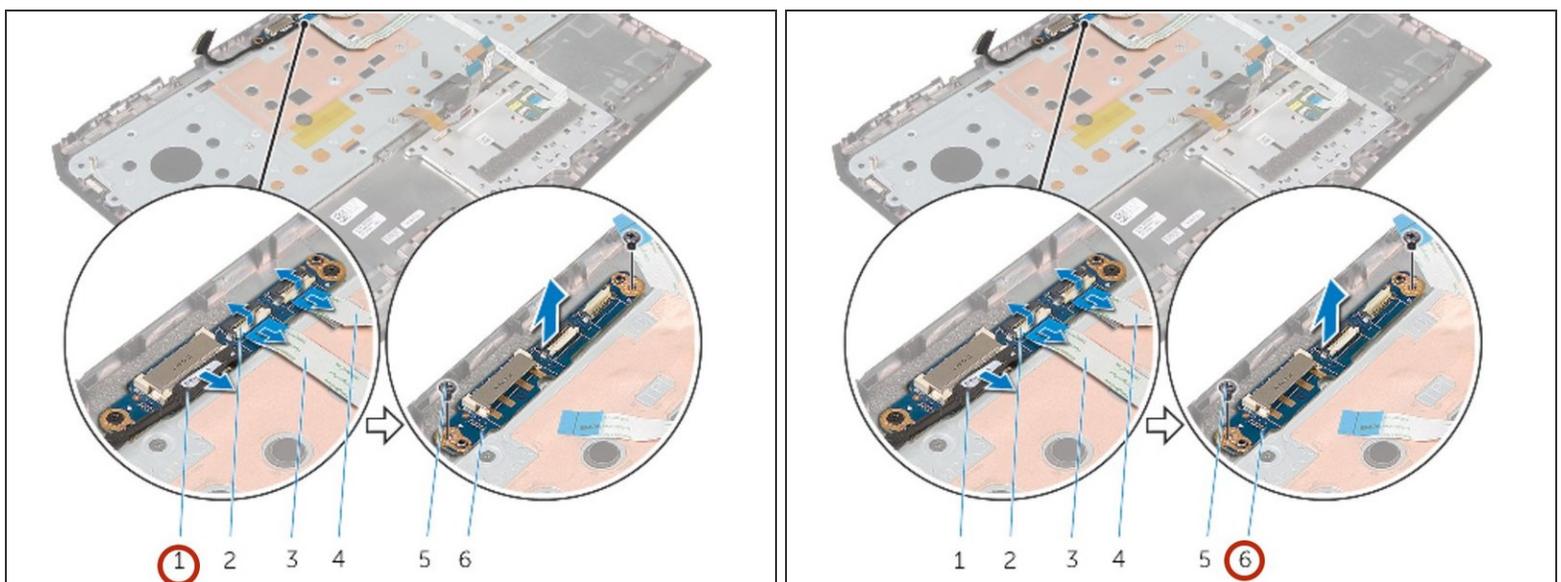

- Disconnect the power-button cable from the power-button board.

### Step 3 — Screw Removal



- Remove the screws that secure the power-button board to the palm-rest assembly.

### Step 4 — Lifting the Power-Button Board



- Lift the power-button board off the palm-rest assembly.

## Step 5 — Aligning the Screws



- Align the screw holes on the power-button board with the screw holes on the palm-rest assembly.

## Step 6 — Replacing the Screws



- Replace the screws that secure the power-button board to the palm-rest assembly.

## Step 7 — Connecting the Power-Button Board Cable



- Connect the power-button board cable to the power-button board.

## Step 8 — Securing the Cables



- Slide the touch-pad cable and the status-light cable into their respective connectors on the power-button board and press down the latches to secure the cables.

To reassemble your device, follow these instructions in reverse order.