



Toshiba Satellite M35X-S149 RAM Replacement

This guide will show you how to replace the RAM

Written By: Aiden Baker



INTRODUCTION

This guide will show you how to replace the RAM



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Slide the lock slider into the unlocked position.
- Slide the battery release.
- While holding the slider, remove the battery.

Step 2 — RAM



- Loosen 1 PH1 Philips screw.
- Remove the cover.
- push the metal tabs

Step 3



- Remove the RAM.

To reassemble your device, follow these instructions in reverse order.