



Instant Pot IP-DUO80 V2 Float Valve Replacement

How to replace the float valve on the Instant Pot IP-DUO80 V2.

Written By: Kayla Meacham



INTRODUCTION

How to replace the float valve on the Instant Pot IP-DUO. This procedure and part is the same for the following models: IP-DUO50, IP-DUO60, and the IP-DUO80.



PARTS:

- [Float Valve](#) (1)
-

Step 1 — Float Valve



- Remove the lid by twisting it counter-clockwise.

Step 2




- Place the lid upside down on a stable surface.

Step 3



- Remove the white rubber cover from the red float valve by pulling it off gently.

 The red float valve will fall once the white cover is removed.

To reassemble your device, follow these instructions in reverse order.