



# Palm Pre 2 Battery Replacement

This guide will show how to safely remove and replace a battery in a Palm Pre 2.

Written By: Elliott Van Hoy



---

## INTRODUCTION

The following guide will show the reader how to properly remove the battery from the Palm Pre 2.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
-


## Step 1 — Battery




 Make sure your Palm Pre 2 is turned off before taking apart the phone.

- Use a plastic opening tool to remove the rear cover. Slide the opening tool along the slit to release the plastic tabs.

## Step 2

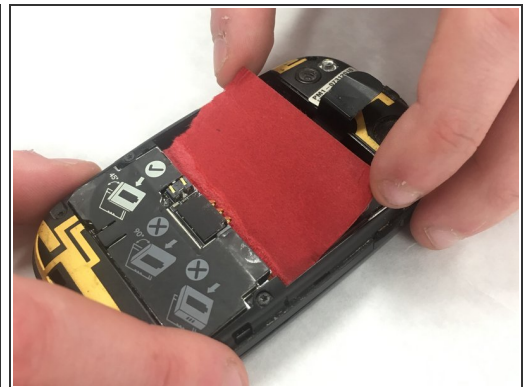

- Pull on the tab to remove the battery.

 If the battery will not connect, insert a thin piece of cardboard between where the battery lies and the phone.

To reassemble your device, follow these instructions in reverse order.