



Shark Rocket Professional Dust Cup Replacement

This guide will demonstrate how to remove the dust cup on the Shark Rocket Professional for replacement or emptying.

Written By: Theo Watkins



INTRODUCTION

This is a very simple guide demonstrating how to remove the dust cup of the vacuum. Despite its simplicity, this guide is important as removing the dust cap gives us access to a number of other parts.

Step 1 — Dust Cup



- First, locate the button that says "Dust Cup". It is right next to the power button at the base of the handle.
- Press the button down completely; you should feel a click.

Step 2



- Grab the handle of the dust cup, then pull up and away from the vacuum.
- ⓘ You must press the button and pull the dust cap simultaneously at first to release the latch.

To reassemble your device, follow these instructions in reverse order.