



Hoover WindTunnel 2 Rewind Dust Cup Assembly Replacement

This guide will walk through the steps required to completely disassemble the dust cup assembly on the Hoover Windtunnel 2 Rewind.

Written By: Chino Cruz



This document was generated on 2020-11-28 06:25:57 AM (MST).

INTRODUCTION

Replace your dirty or broken dust cup filter with these easy steps!



TOOLS:

- [Phillips #3 Screwdriver](#) (1)



PARTS:

- [Dust Cup Assembly](#) (1)

Step 1 — Primary Air Filter



- Press button on the top of the dust cup and pull back.
- Remove dust cup from vacuum

Step 2



- Pull back on black lever and rotate dust cup lid back.

Step 3



- Lift up on fabric flap to remove filter from vacuum
- If you wish to clean the filter rather than replace it, it can be washed under a faucet.
- ☑ If washing the filter, make sure it fully dries out before re-installing.

Step 4 — Dust Cup Assembly



- Holding onto both the top handle and dust cup body, twist the two components apart following the instructions printed on the back.

Step 5



- Unscrew the three 4 cm Phillips #3 screws located inside the dust filter compartment to detach the dust filter system.

To reassemble your device, follow these instructions in reverse order.