



# Bissell OptiClean Cyclonic Vacuum Flex Hose Replacement

Use this guide to replace the flex hose with handle on your Bissell OptiClean Cyclonic Vacuum.

Written By: Devin Rojo-Cagadoc



## INTRODUCTION

A damaged flex hose on your Bissell OptiClean Cyclonic Vacuum could be a reason that suction power is lost or low. If this is the case, it will be necessary to replace the damaged flex hose with a new one. This guide will teach you how to detach and replace the flex hose with handle on your Bissell OptiClean Cyclonic Vacuum.

## Step 1 — Flex Hose with Handle



- **Grab hold** of both the flex hose handle and the extension wand.
- **Pull straight out** to detach the handle from the extension wand.

## Step 2



- **Locate the lock clip** on the other end of the flex hose.



### Step 3



- **Hold down the lock clip** to unlock the flex hose from the vacuum.
- **Remove** the flex hose from the vacuum.

To reassemble your device, follow these instructions in reverse order.