



# Dell Inspiron 15z 5523 CD Drive Replacement

If you are having trouble with your computer reading your disk the problem could be you CD Drive itself.

Written By: Christian Chavez



---

## INTRODUCTION


Teaching the disassembly of the CD Drive and replacement of a new part to allow for full function.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — CD Drive

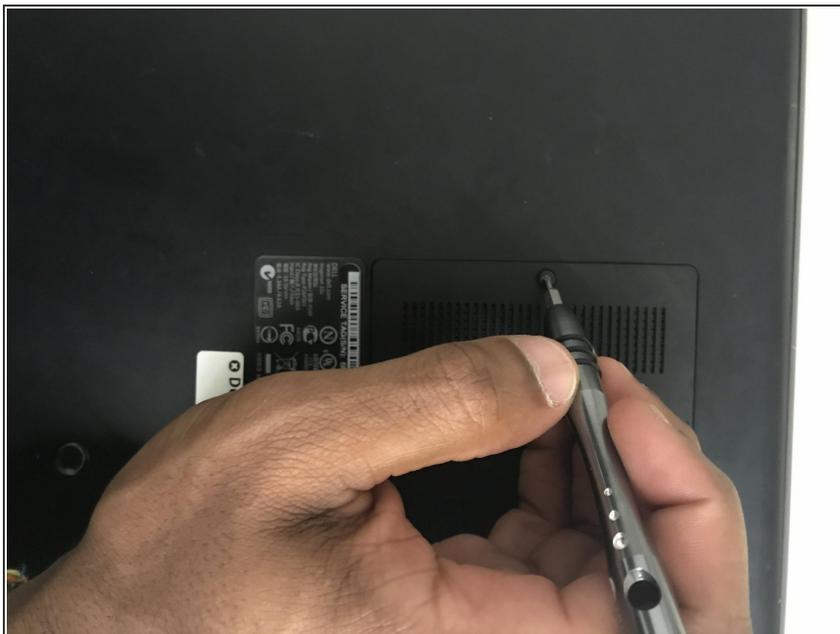

- Start by flipping your computer over. Then using a small screw driver unscrew the back-plate.

## Step 2



- Remove the back-plate from the computer by grabbing it and pulling up.

### Step 3



- Once the Back-Plate is off use your fingers to grab onto the CD Reader and pull straight out.

To reassemble your device, follow these instructions in reverse order.