


Dell Alienware 13 R3 Wireless Card Replacement

In this guide, we will show you how to remove and replace the wireless card.

Written By: Terrence15

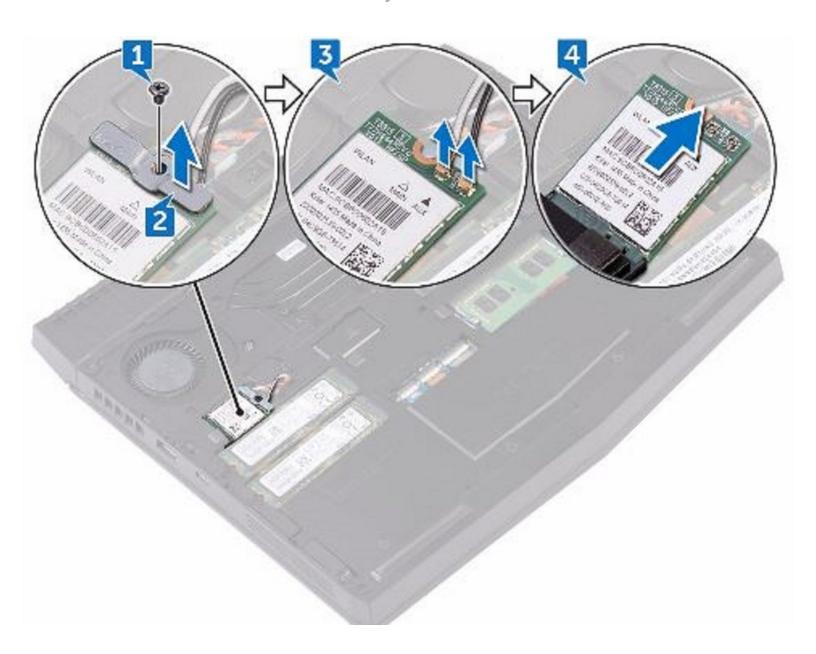

This document was generated on 2020-11-22 07:38:32 AM (MST).

INTRODUCTION


In this guide, we will show you how to remove and replace the wireless card.



F TOOLS:

Pro Tech Toolkit (1)

Step 1 — Loosen the Screws

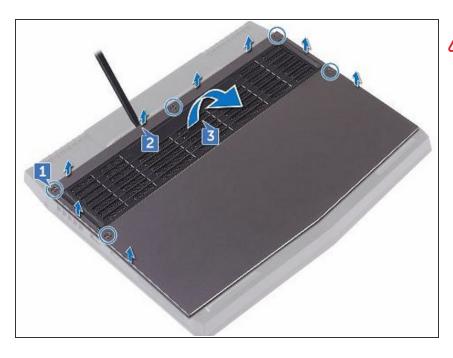


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
- Loosen the five captive screws that secure the base cover to the computer base.

Step 2 — Pry the Base Cover



 Using a plastic scribe, gently pry the base cover to release the tabs on the base cover from the slots on the computer base.

Step 3 — Lift the Base Cover

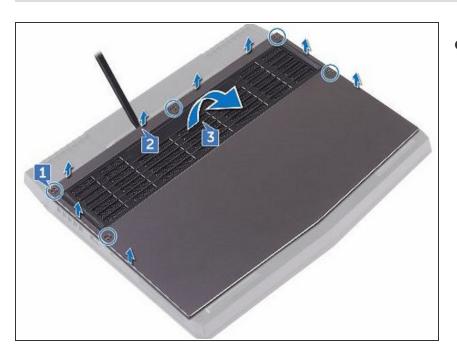


 Lift the base cover off the computer base.

Step 4 — **Disconnect the Battery Cable**




 Using a plastic scribe, disconnect the battery cable from the system board.

Step 5 — **Press and Hold the Power-Button**

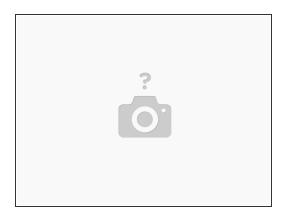


Press and hold the power button for five seconds to ground the system board.

Step 6 — Connect the Battery Cable

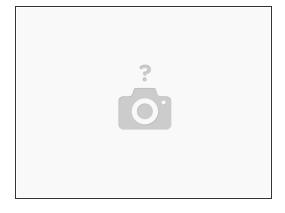


Connect the battery cable to the system board.

Step 7 — Slide the Tabs

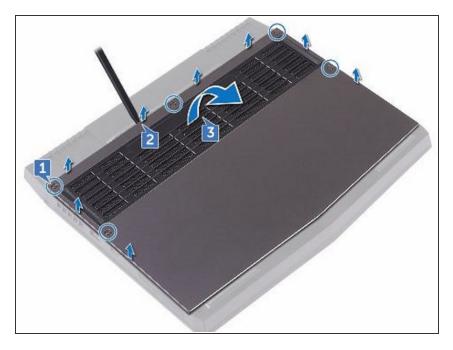


 Slide the tabs on the NEW base cover into the slots on the computer base and snap the base cover into place

Step 8 — Tighten the Five Captive Screws

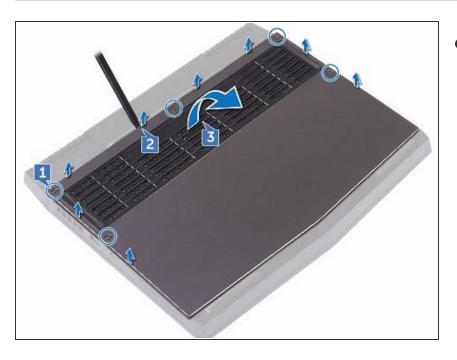


 Tighten the five captive screws that secure the base cover to the computer base.

Step 9 — Align the Notch

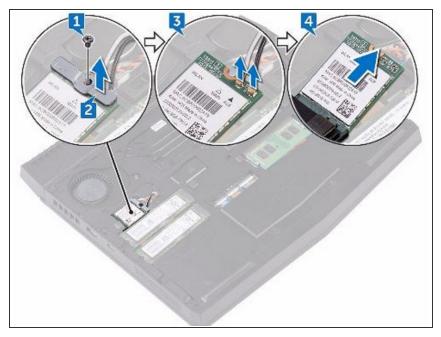


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
- CAUTION: To avoid damaging the wireless card, do not place any cables under it.
- Remove the screw (M2x3) that secures the wireless card and bracket to the computer base.

Step 10 — Lift the Wireless-Card Bracket

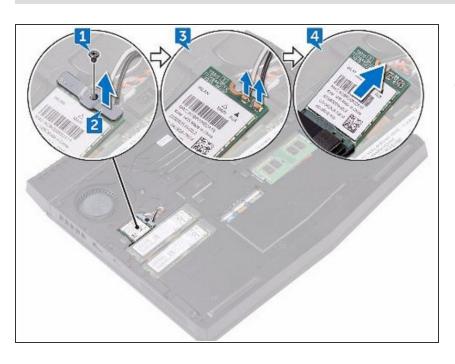


 Lift the wireless-card bracket off the wireless card.

Step 11 — Disconnecting the Antenna Cables

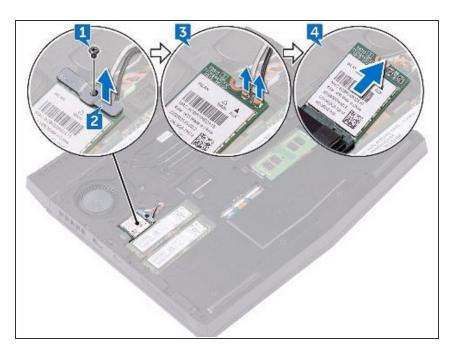

 Disconnect the antenna cables from the wireless card.


Step 12 — Align the Notch

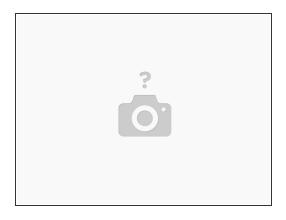

CAUTION: To avoid damaging the wireless card, do not place any cables under it.


Align the notch on the wireless card with the tab on the wireless-card slot.

Step 13 — Slide the Wireless Card

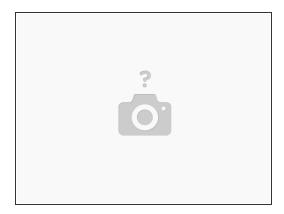


Slide the NEW wireless card at an angle into the wireless-card slot.

Step 14 — Connect the Antenna Cables

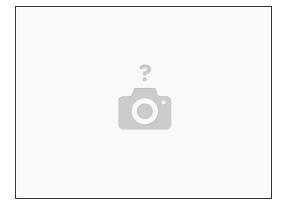


Connect the antenna cables to the wireless card.

Step 15 — Align the Screw Hole

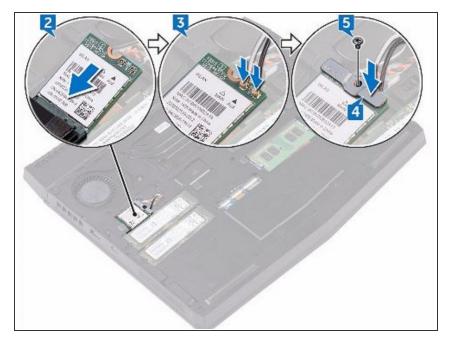

 Align the screw hole on the wirelesscard bracket with the screw hole on the wireless card and the computer base.

Step 16 — Replace the Screw

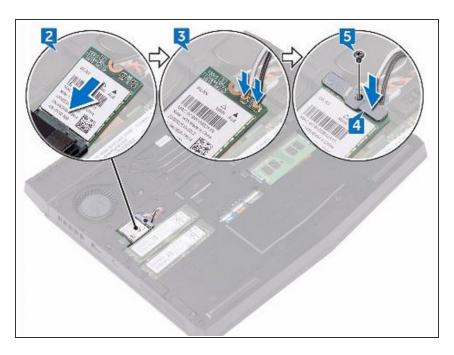

 Replace the screw (M2x3) that secures the wireless-card bracket to the wireless card and the computer base.

To reassemble your device, follow these instructions in reverse order.