




# ASUS N550JK-DS71T Laptop RAM stick Replacement

This guide will show how to remove and replace the RAM on your Asus N550JK-DS71T laptop.

Written By: Steven Hahn

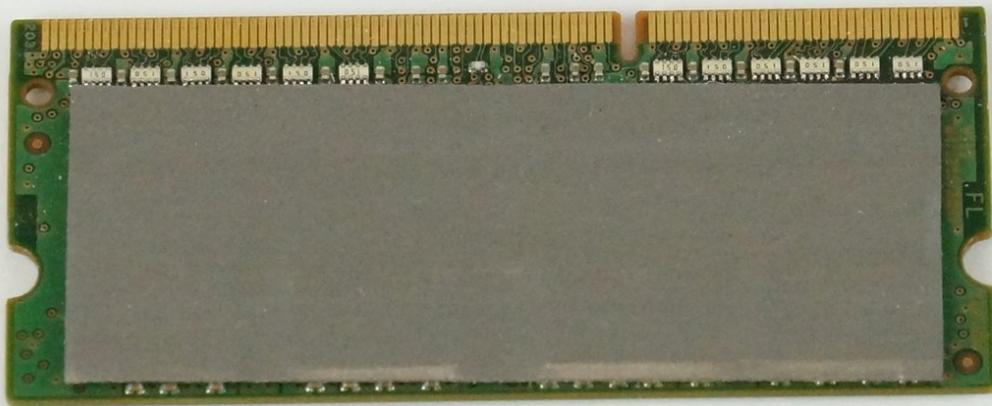

## INTRODUCTION

This guide will show how to remove and replace the RAM on your Asus N550JK-DS71T laptop.

---

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [JIS #0 Screwdriver](#) (1)
  - [Anti-Static Wrist Strap](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Case





- Turn the laptop off and unplug all cables.
- Flip over so the bottom is facing you.
- Remove the ten 3mm Torx T5 screws from the bottom cover.

## Step 2





- Use a spudger to wedge between the laptop and bottom cover—lift upwards to pry open.
- Run the spudger along the perimeter of the bottom cover to remove.

## Step 3 — Battery

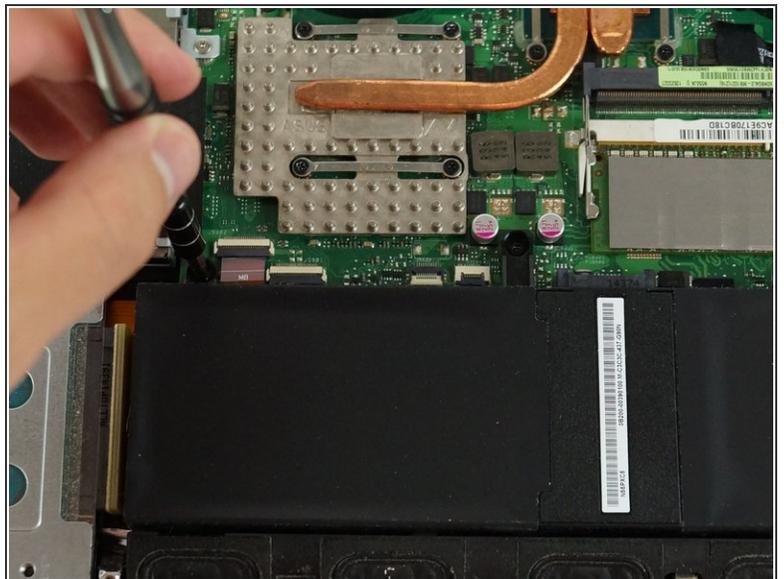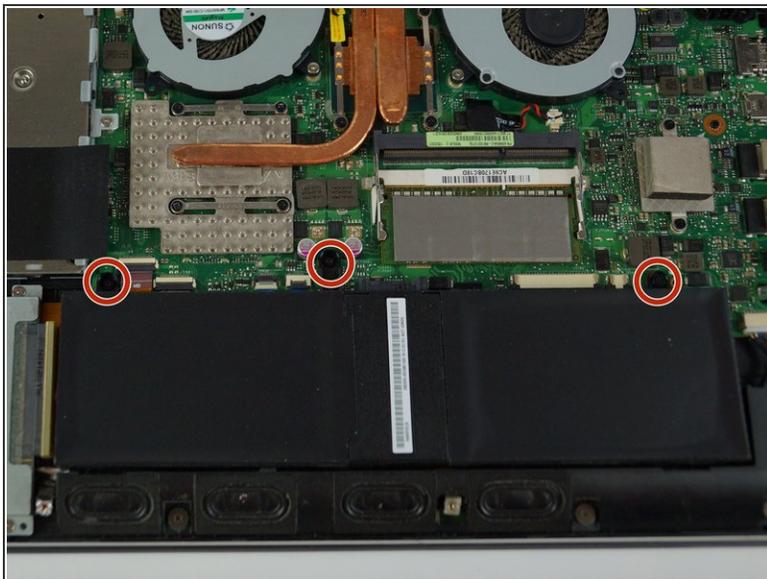

- Remove the three 4mm JIS #0 screws from the battery.

## Step 4

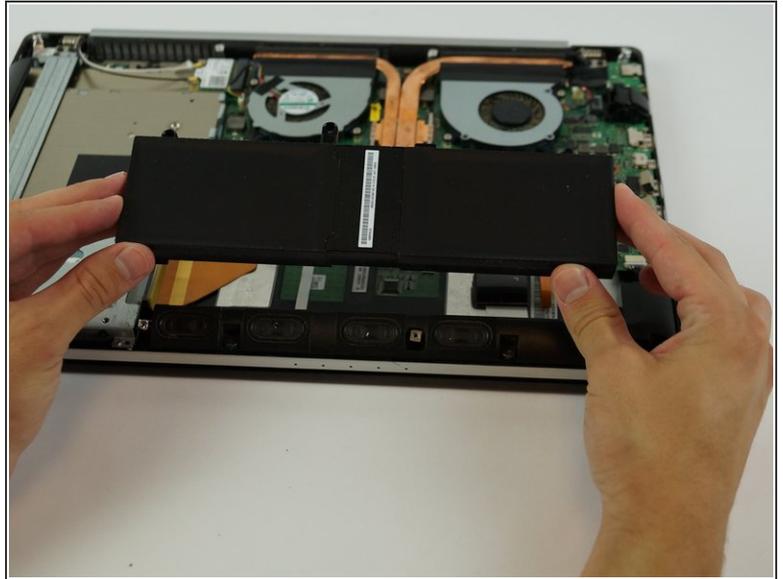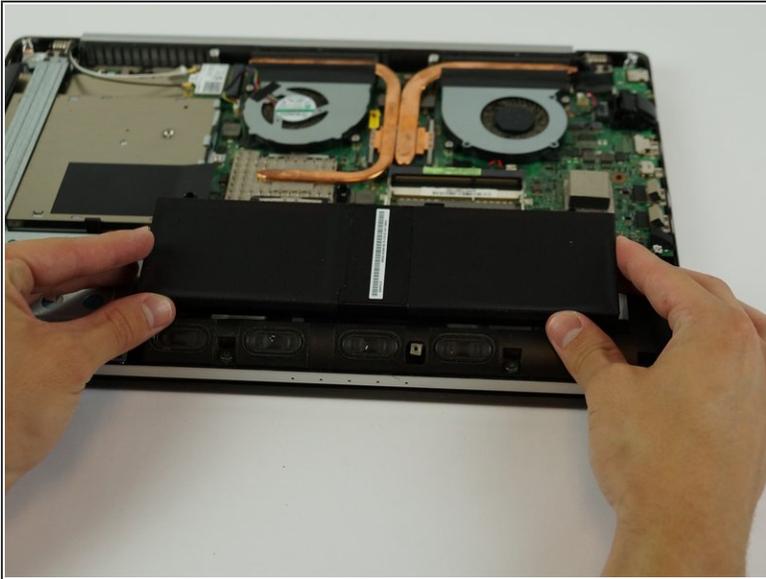

- Using both hands, lift the battery vertically out of the device.

## Step 5 — RAM Stick



- Put on anti-static wristband and attach clip-end to any metal screw insert.
- ⓘ The wristband is recommended when working closely with circuit boards due to potential static discharge.

## Step 6



- The RAM will be secured by two metal clips surrounded by white plastic.
- Spread the metal clips and the RAM stick will pop up. Then gently remove the RAM stick.

To reassemble your device, follow these instructions in reverse order.