



# Dell Inspiron 15-5552 Memory Replacement

The following guide will give instructions on how to properly replace the RAM/Memory on your Dell Inspiron 15-5552.

Written By: Chandler Champion



---

## INTRODUCTION

The following guide will give instructions on how to properly replace the RAM/Memory on your Dell Inspiron 15-5552.



### TOOLS:


- [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Battery




- Make sure the laptop is powered down before you remove the battery.

## Step 2

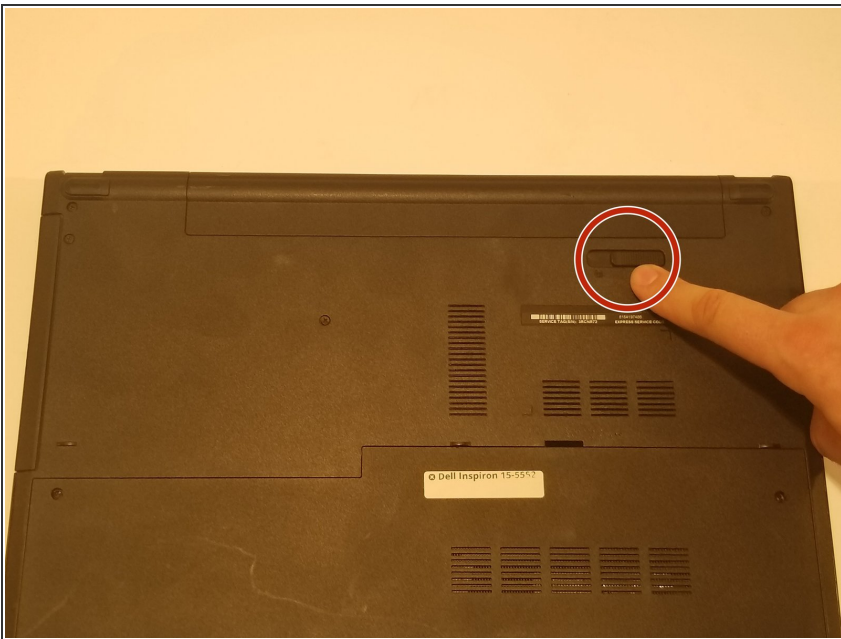


- Locate the battery release switch on the bottom of the laptop.

### Step 3

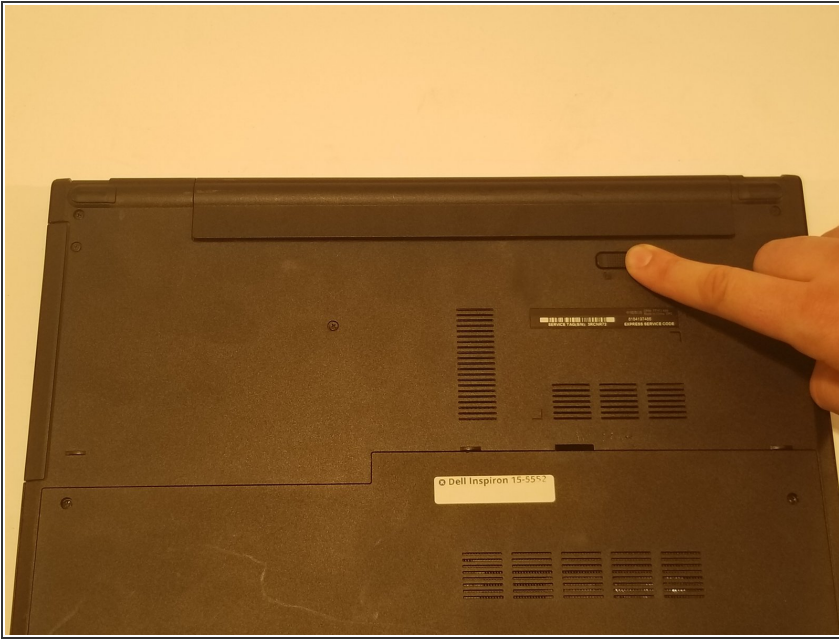

- Slide the battery release switch away from the lock symbol towards the “unlock” position.
- ❗ You can tell that the battery is unlocked once you hear a “click.”

### Step 4

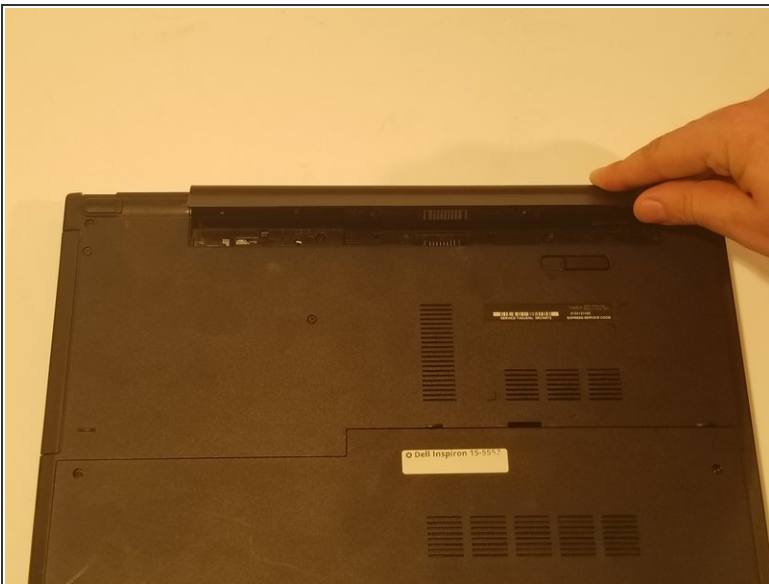

- Rotate the battery outward by lifting the bottom lip that pops out.
- Continue rotating the battery towards the top of the laptop until the battery is completely removed.

## Step 5 — Screw Location




- Flip the device on its back, locate the screws circled.

## Step 6 — Screw Removal




- Use a J0 screwdriver to unscrew the two, 6mm Phillips screw on the rear-cover.

## Step 7 — Removing Cover

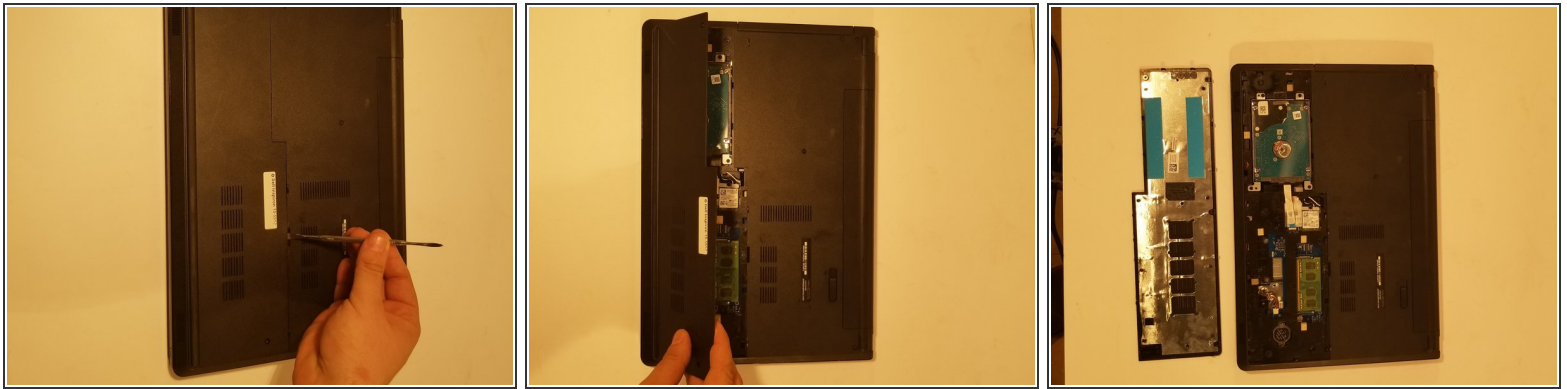


- Using a spudger, Lightly lift the rear-cover up and at an angle, away from the computer.

## Step 8 — RAM Removal

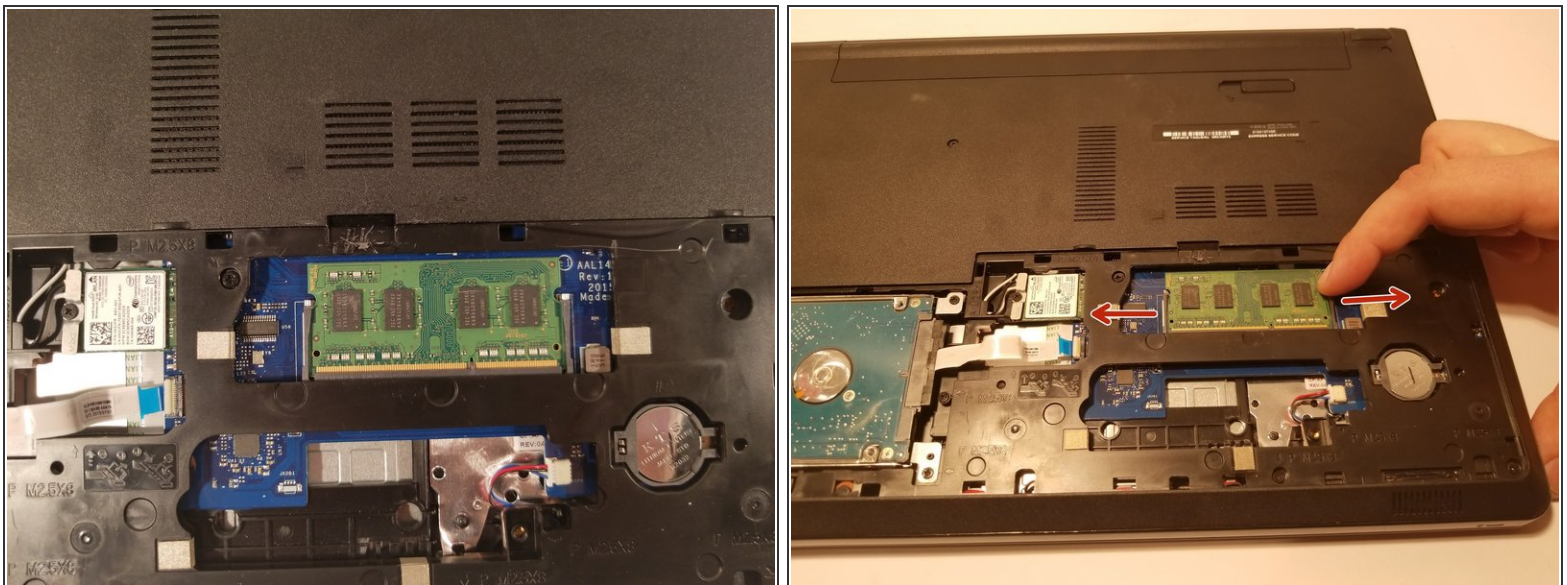

- Use your fingers to carefully pull the securing clips on the RAM away from each other.
- ⓘ The RAM should pop up when the clips are released.

## Step 9 — RAM Removal Contiuned

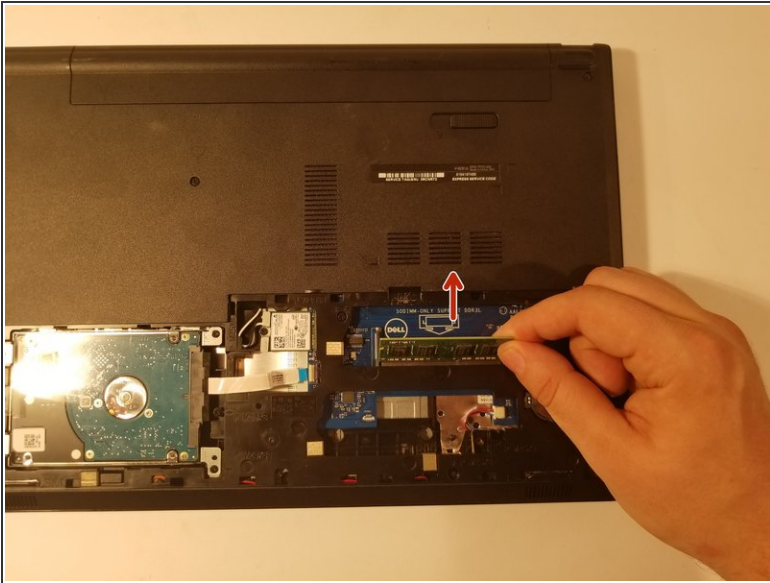

- Remove the dislodged up RAM by pulling it away from the connection.
  - ⓘ If it does not pop up, pry it out in a steady and straight direction.

To reassemble your device, follow these instructions in reverse order.