



# Panasonic Lumix DMC-FX37 Battery Replacement

This replacement guide shows the steps on how to replace camera's battery.

Written By: Ben DuBose



## INTRODUCTION

This is a very simple guide demonstrating how to remove the camera's battery. No prior knowledge of disassembly or reassembly is required.

## Step 1 — Battery



- Slide Battery door lock from "Lock" to "Open".
- ⓘ When closing the door the lock slide will need to be pushed back into the "lock" position.

## Step 2



- Slide the battery lock to the right and remove battery.

To reassemble your device, follow these instructions in reverse order.