



# Swann Doorphone Video Intercom Camera Replacement

This guide can be used to replace the camera on your Swann Doorphone Video Intercom.

Written By: Emily Stenke



---

## INTRODUCTION


This guide will provide instructions on how to replace the camera on your Swann Doorphone Video Intercom to ensure the image appears clear on your LCD monitor.

---

### TOOLS:


- [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Camera

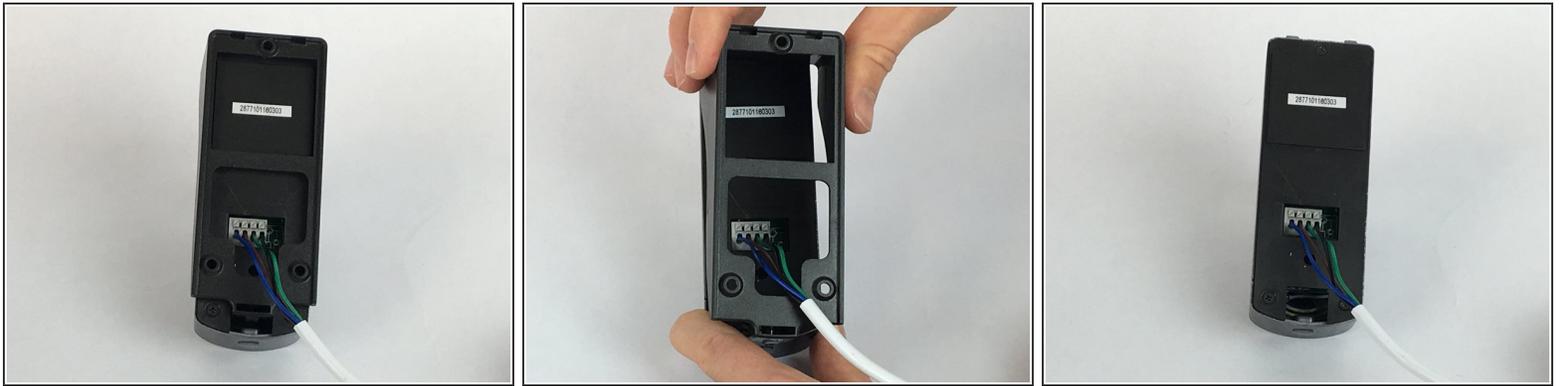

- Flip the outdoor camera over so that the underside is facing up.
- Remove the back cover by grabbing the sides of the camera and pulling towards your body.

## Step 2

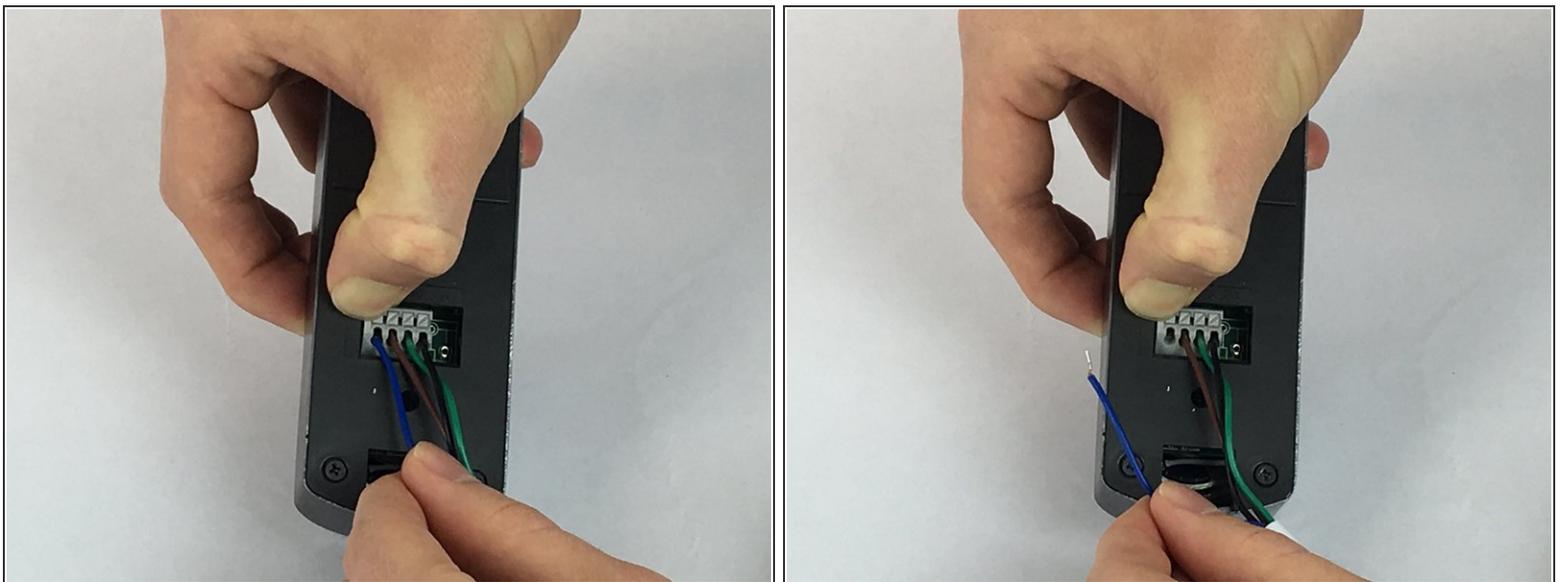

- With the back cover of the outdoor camera off, press the first gray button, with blue wire underneath, down as shown in the picture.
  - While pressing the gray square button, remove the blue wire from the first opening under the button.
- Be sure to remove the same color wire for the outdoor camera as was used for the indoor video intercom.

### Step 3



- Remove the other wires using the same steps as the blue wire.
- Using the JIS #0 screwdriver, remove the 2mm screws from the back plate.
- Remove the back plate by pulling the plate away from the device.

### Step 4




- Using the JIS #0 screwdriver, remove the 1mm screws from behind the camera.

## Step 5



- Using one of the tweezers from the Precision Tweezers Set, gently place them around the wire connector attached to the camera.
- Pull slowly in the direction of the cables until the connector is no longer attached.

## Step 6

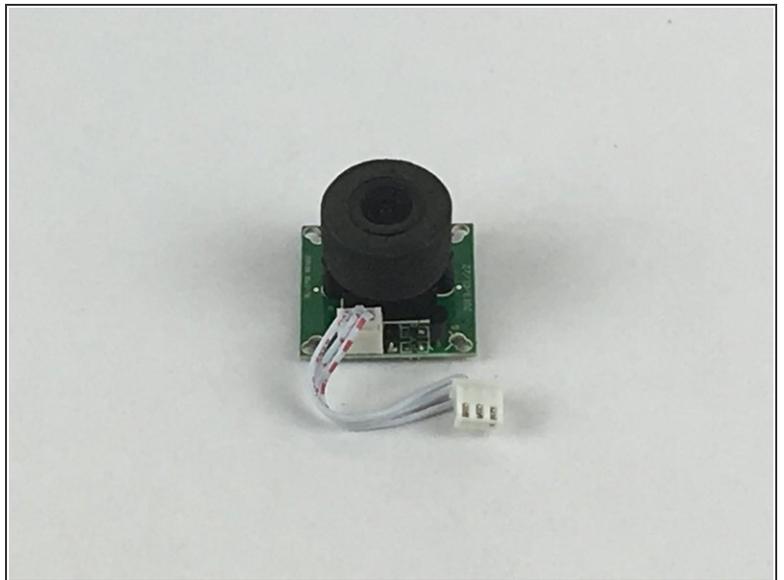

- Remove the camera from the device.

To reassemble your device, follow these instructions in reverse order.