



# Dell Inspiron 11-3164 Battery Replacement

This guide will allow you to replace the battery in your Dell Inspiron 11-3164 laptop.

Written By: Michael Kendziora



# INTRODUCTION

This guide will require one screwdriver with a Phillips bit from the approved iFixit toolkit.



## TOOLS:

- [JIS #1](#) (1)
- [Metal Spudger](#) (1)



## PARTS:


- [Dell Inspiron 11 Battery](#) (1)

## Step 1 — Battery



- Start by placing the laptop upside down to expose the first set of screws on the bottom of the laptop. Use your J1 Phillips head screwdriver bit to unscrew the 8 size 6 mm screws.
- Remove the plastic cover to unveil the final screw holding the front and back frame together.
- Remove this last screw of size 6mm with the J1 phillips head bit found in the approved iFixit toolkit.


## Step 2

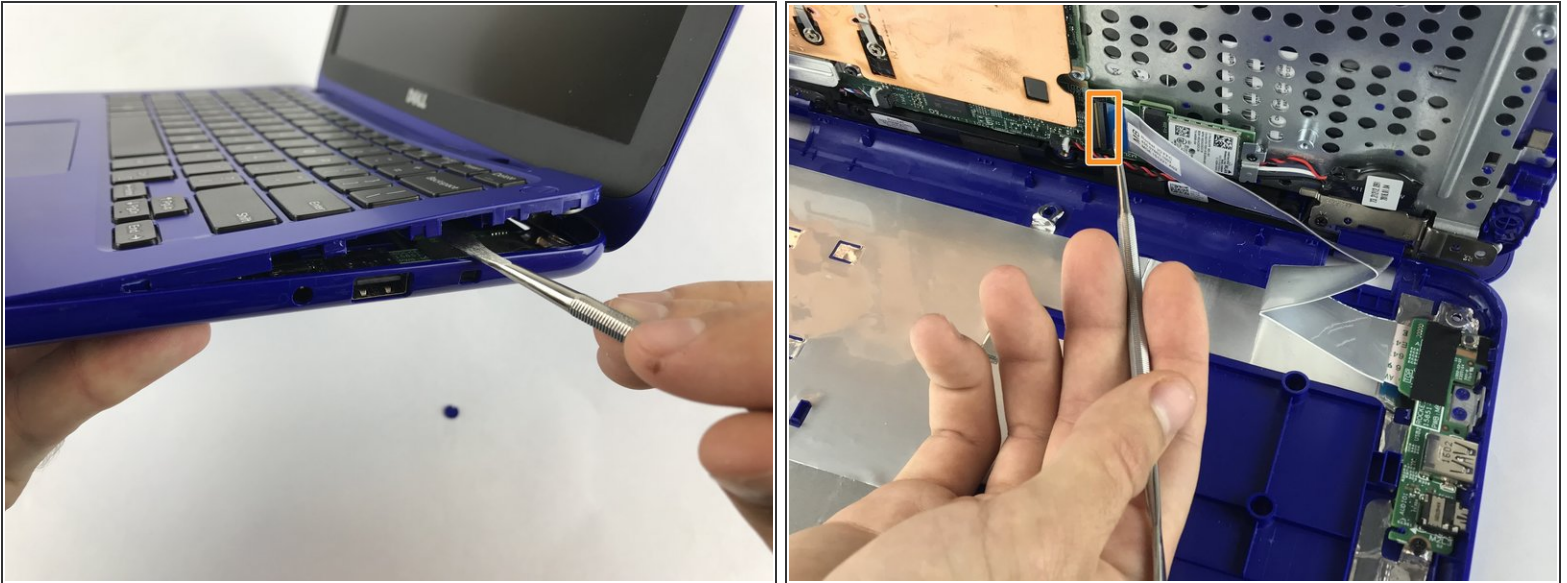

- Using your metal pry tool, slowly pry the two halves apart by gently moving your tool around the laptop . Once all the way around the top and bottom half will separate.
- ⓘ When pulling the laptops apart be careful to hold them together at first due to the sensitive ribbon cable inside.
- Use your metal pry tool again to push the ribbon holding clip up and remove the ribbon cable.




## Step 3

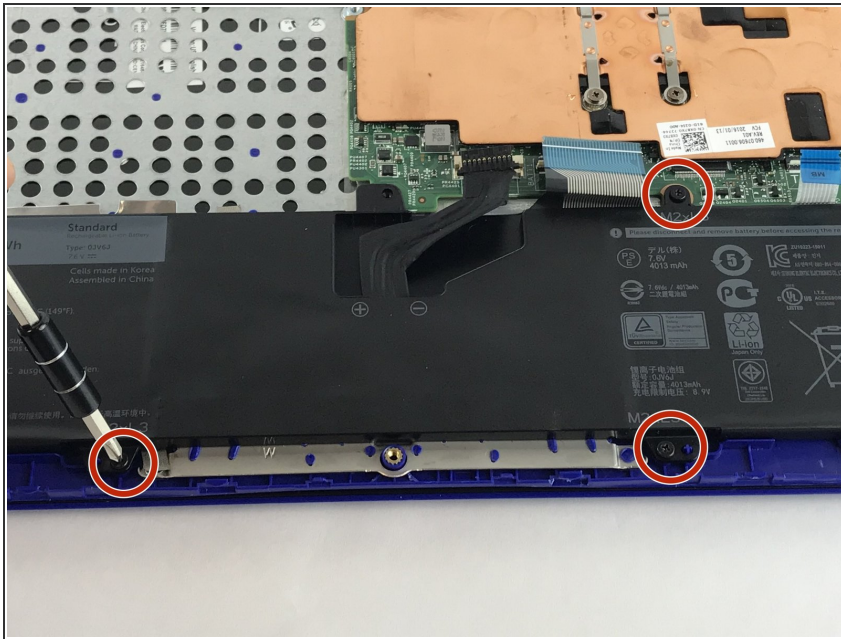

- Use the J1 screw driver bit from earlier and unscrew the three size 4mm battery screws.

## Step 4

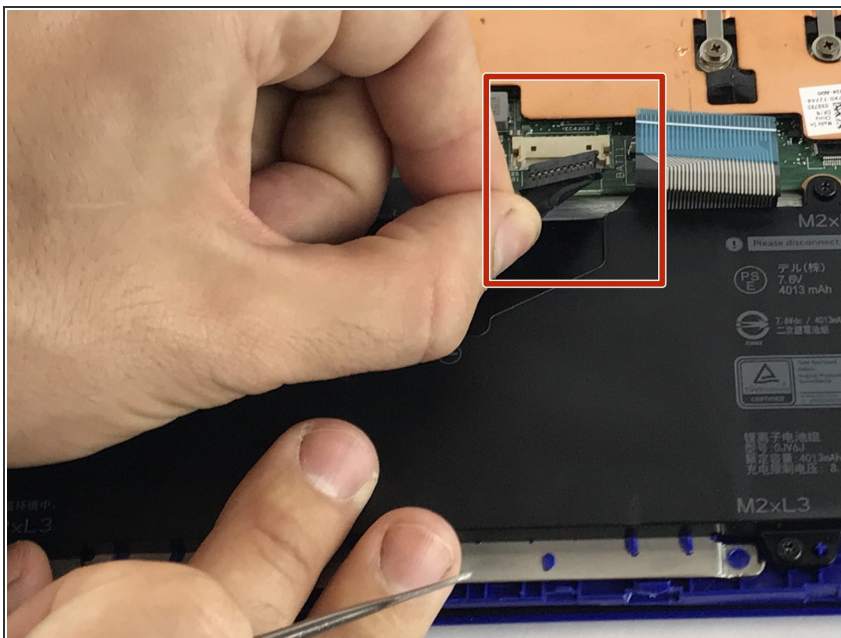

- While using one hand to hold the laptop grab the power wire with the other hand and pull it out of it's port.
- Carefully remove the battery pack from the case.

To reassemble your device, follow these instructions in reverse order.