



# HP Deskjet 1000 J110a Power Button Replacement

How to replace the power button on an HP Deskjet 1000 J110a.

Written By: Colin Tourjee



---

## INTRODUCTION

The one and only button on the HP Deskjet 1000 is the power button. If the power button is broken, you will be unable to turn the machine on. This guide will show you how to remove the button and then how to replace it.



### TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Cover Removal



- Remove the two 13 mm screws located on the back of the printer using a screwdriver with the T10 torx bit (star-shaped).

## Step 2




- In the front of the printer, open the tray where the paper comes out and remove the two 13 mm screws located under the top of the printer.

### Step 3



- With the front of the printer facing you, lift and raise the left side of the panel (like opening a book in reverse) until it disconnects from the clip on the right side of the panel.

### Step 4 — Power Button

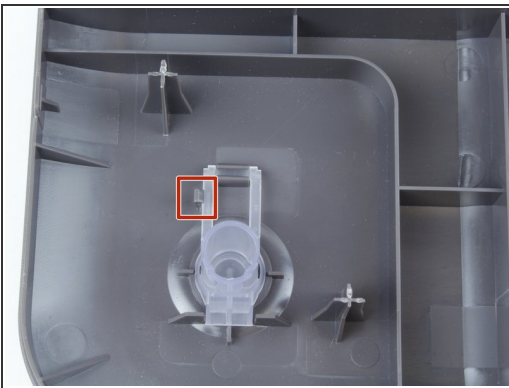

- Carefully hold the small clip back to release the button arm.
- Once the arm is unclipped, gently lift and pull the button until it disconnects at the hinge slot.
- Replace the old power button with a new one.

To reassemble your device, follow these instructions in reverse order.