



Toshiba Satellite S55t-A5389 Optical Drive Replacement

This guide will show you how to remove a malfunctioning optical drive, or a DVD drive, of the Toshiba Satellite S55t-A5389, which uses a SU-208 DVD Writer.

Written By: William Mazanec



This document was generated on 2020-11-28 06:30:58 AM (MST).

INTRODUCTION

If your optical drive is no longer reading CDs, or not ejecting when the button is pressed, then it may be time to replace it. Be sure to try another CD just to check that it is in fact the optical drive malfunctioning, and not a scratched CD being the issue.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Magnetic Project Mat](#) (1)



PARTS:

- [DVD Writer Model SU-208](#) (1)

Step 1 — Optical Drive



- Remove the fourteen 5mm Phillips #0 screws from the bottom of the laptop.

Step 2



- Using the plastic prying tools, go around the edge of the back of the laptop to release the back cover.
- Pull the drive outwards to remove it.

To reassemble your device, follow these instructions in reverse order.