




Dell Vostro 5480 Battery Replacement

Written By: Johnathan Hammond

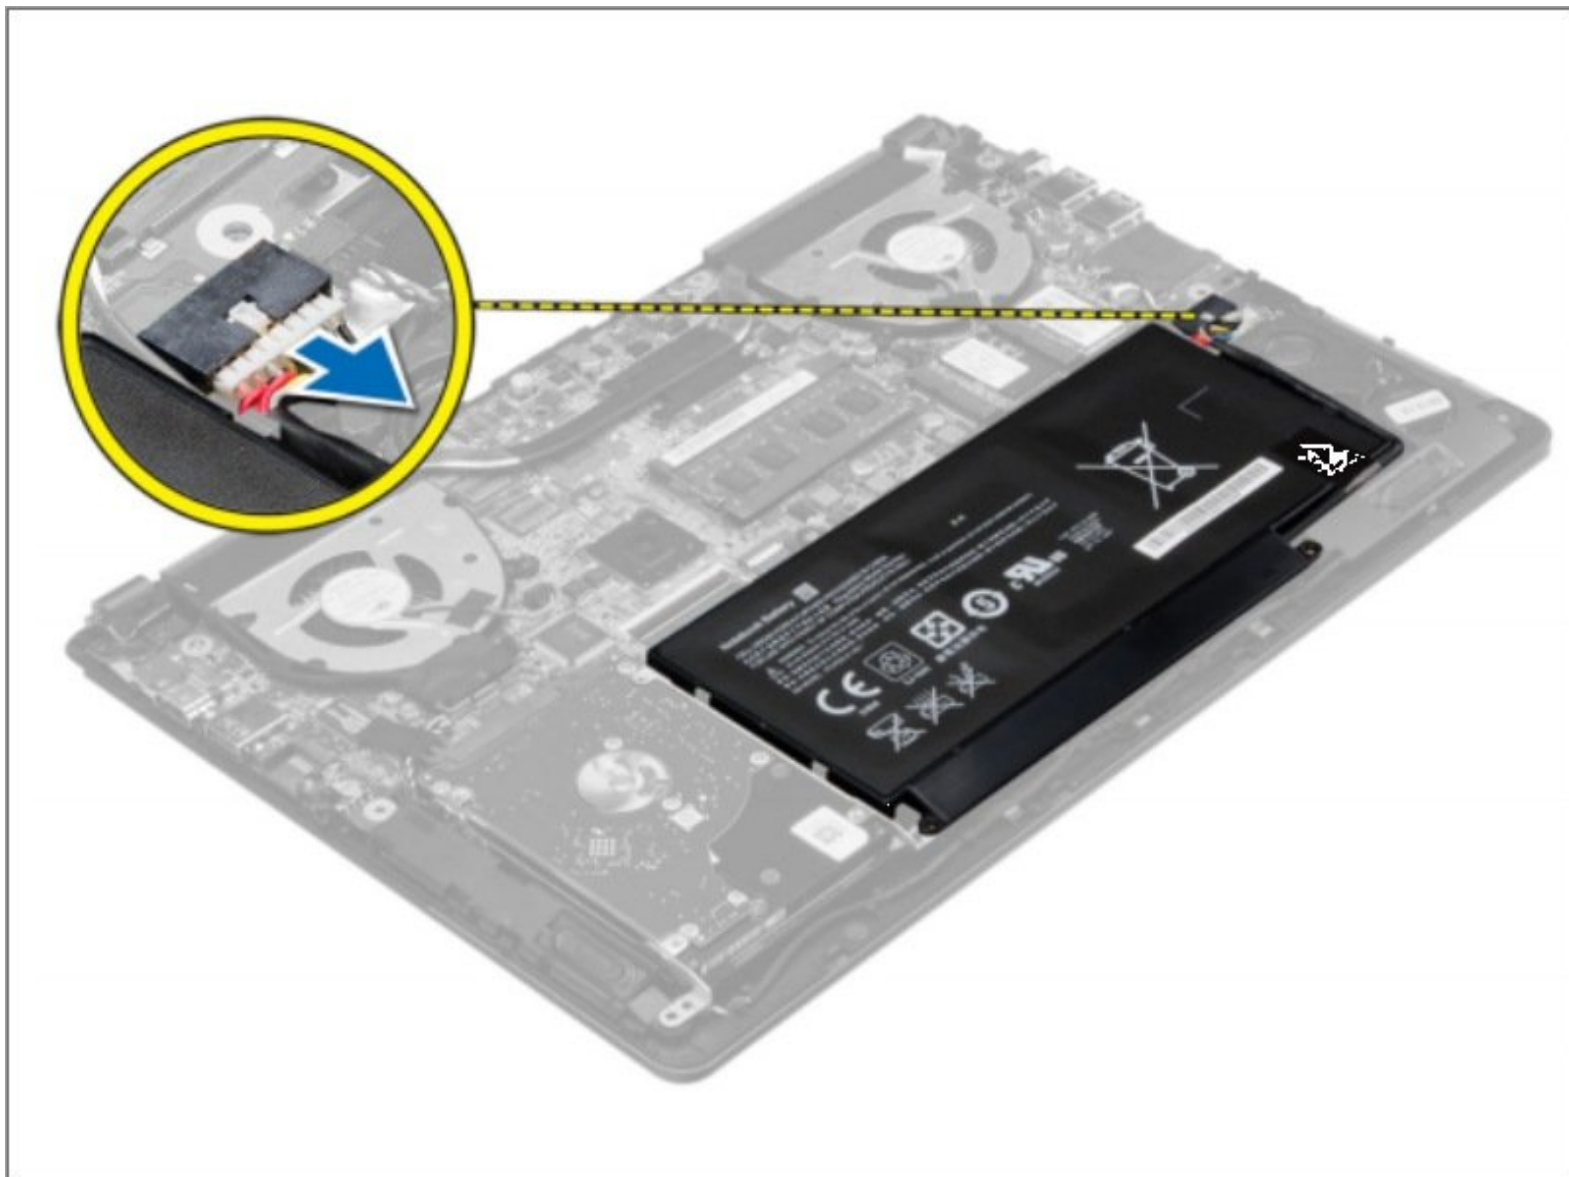

INTRODUCTION


In this guide, we will show you how to remove and replace the Battery.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the Screws

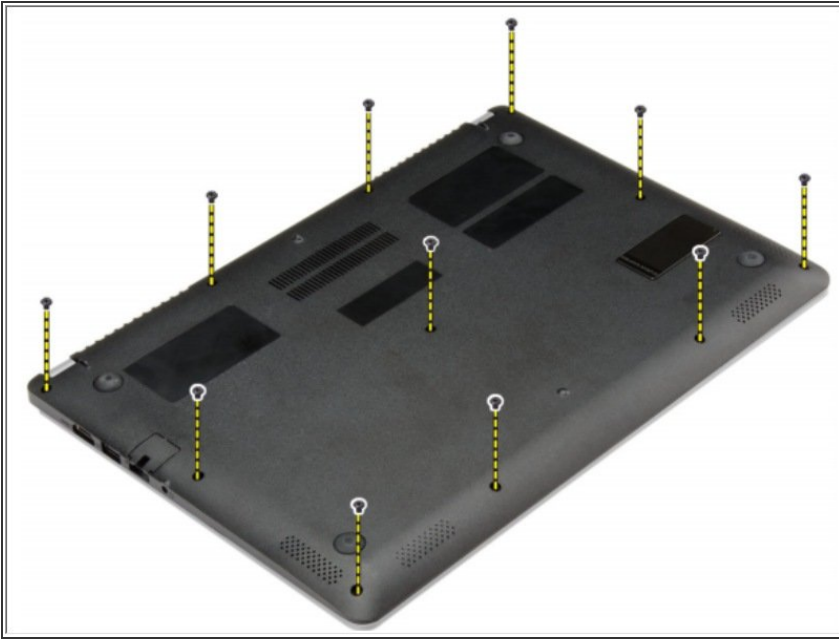

- Remove the screws that secure the base cover to the computer.

Step 2 — Pry the Cover

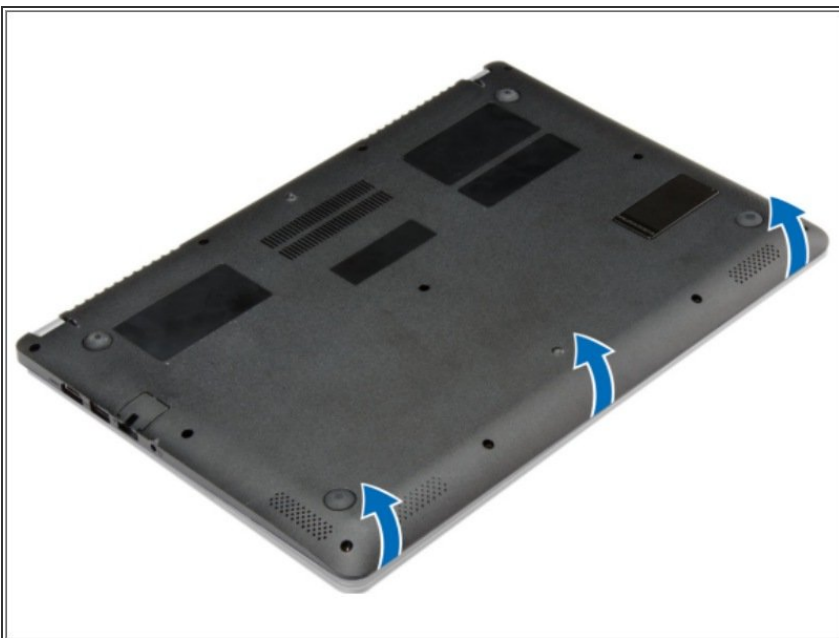


- Pry the base cover along the edges to loosen it.

Step 3 — Removing the Base Cover




- Lift and remove the base cover from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 4 — Disconnecting the Battery Cable

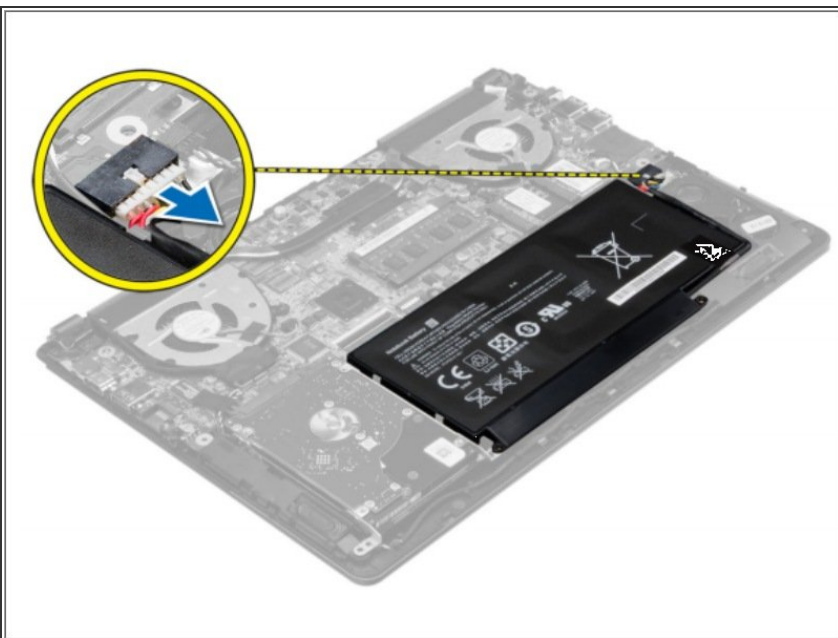


- Disconnect the battery cable from its connector on the system board.

Step 5 — Release the Tabs

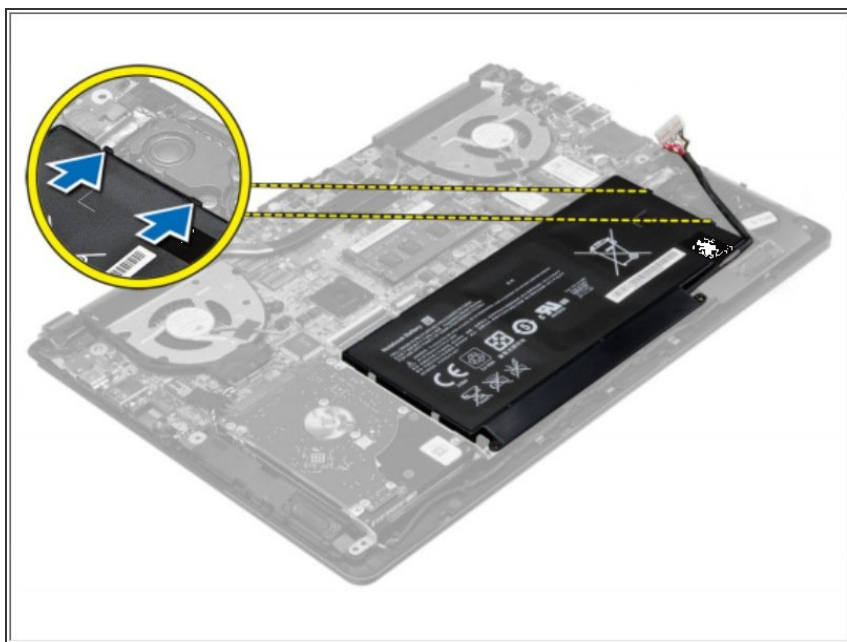

- Release the tabs that secure the battery in the battery bay.

Step 6 — Removing the Battery

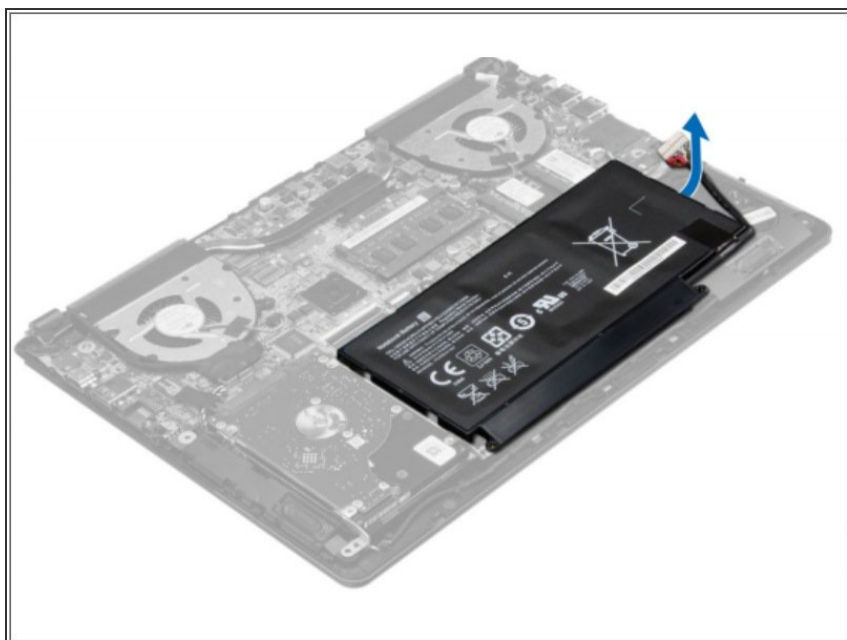

- Lift and remove the battery from the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.