


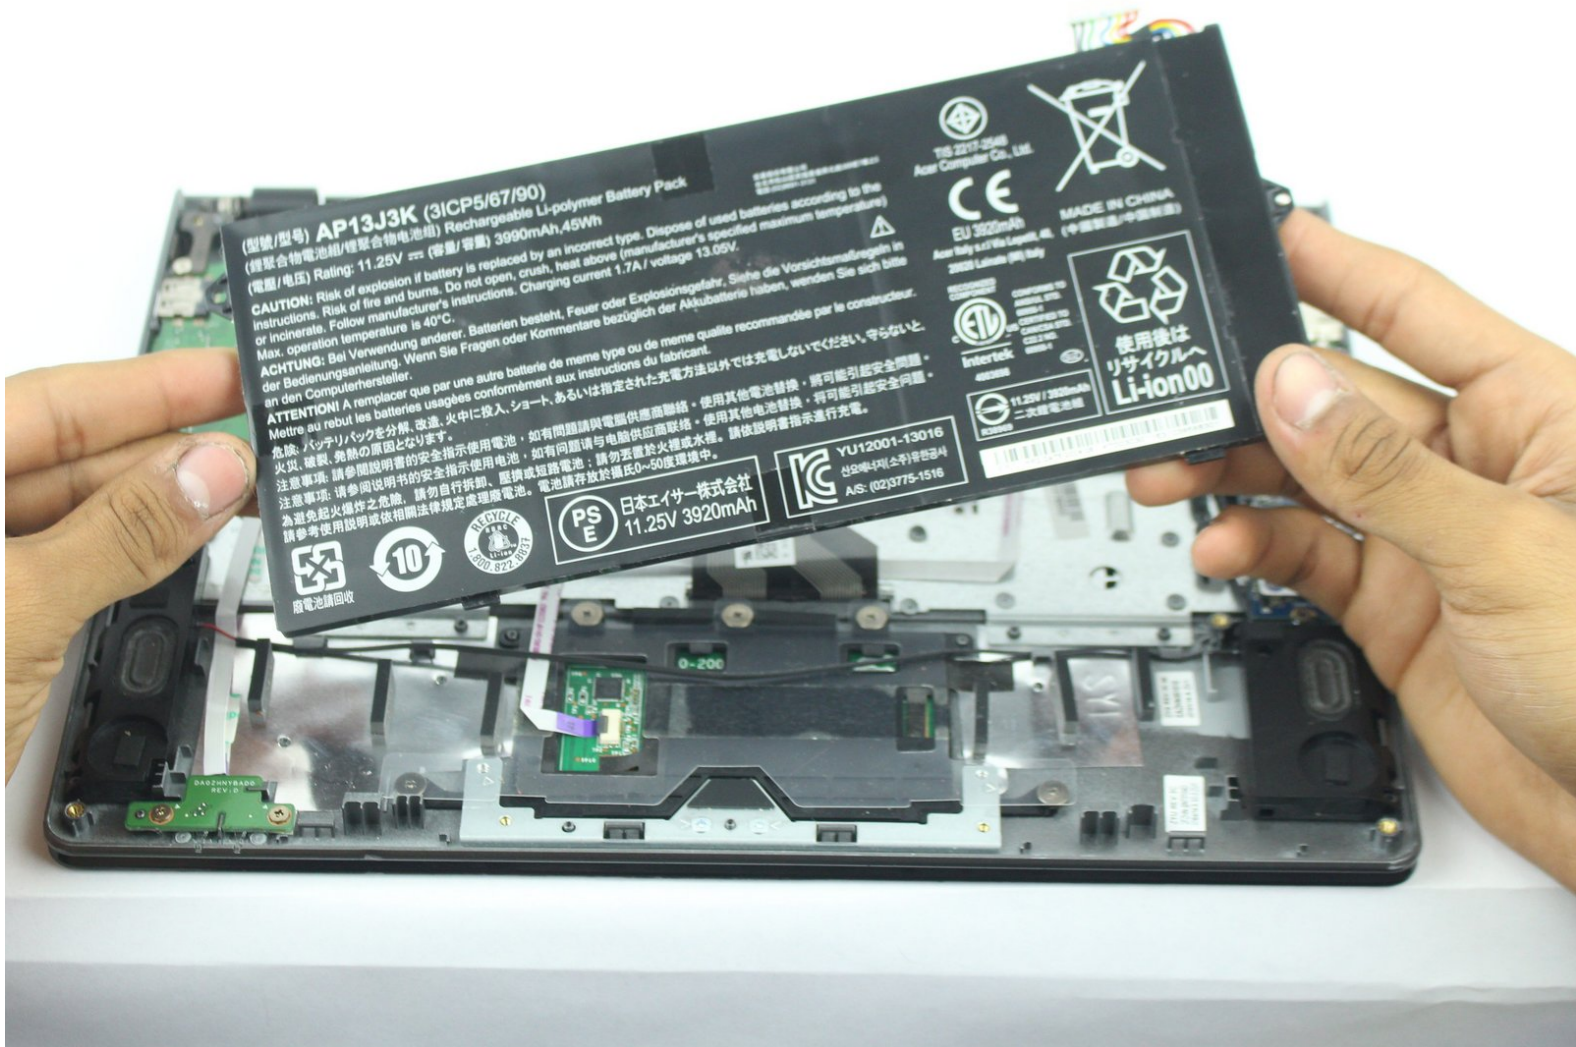

# Acer Chromebook C720-2420 Battery Replacement

Use this guide to replace the battery in your Acer Chromebook C720-2420.

Written By: Jessica Beckford



# INTRODUCTION

This guide will provide you with simple and clear steps on how to replace a dead battery in an Acer Chromebook C720-2420.



## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



## PARTS:

- [Acer Chromebook AP13J7K Battery](#) (1)
- [Acer C720P Chromebook Bottom Cover](#) (1)

## Step 1 — Back Cover Replacement

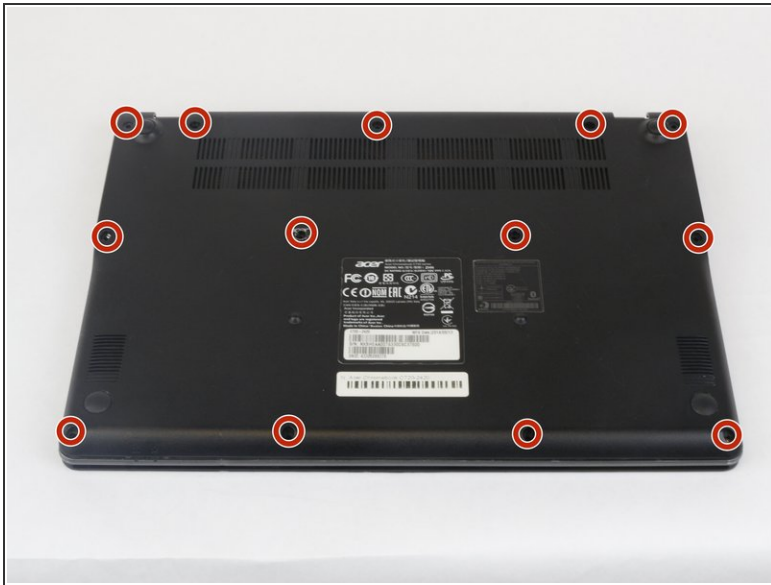

**i** Place your Chromebook upside down.

- Utilizing the precision magnetized Phillips #0 screwdriver, remove all thirteen 6.5 mm Phillips screws that secure the back cover.

**!** Before doing anything, make sure your Acer Chromebook is completely turned off.


## Step 2



- Use the plastic opening tool to carefully remove the bottom.



## Step 3 — Battery

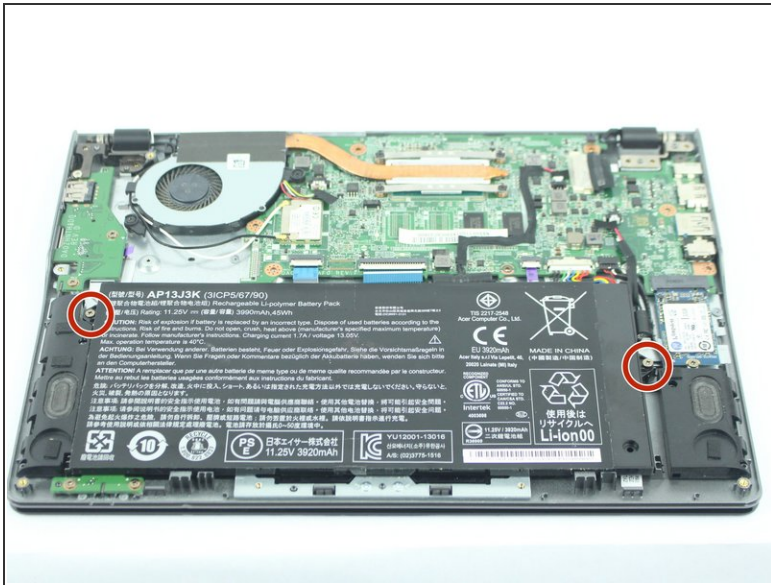


- Remove the two 3.6 mm Phillips screws holding the battery in place.

## Step 4



- Disconnect the connector that attaches the battery to the Chromebook with a pair of pliers or tweezers.
- ① Alternatively, you could use your hands, as it may be difficult to unhook the connector.

## Step 5

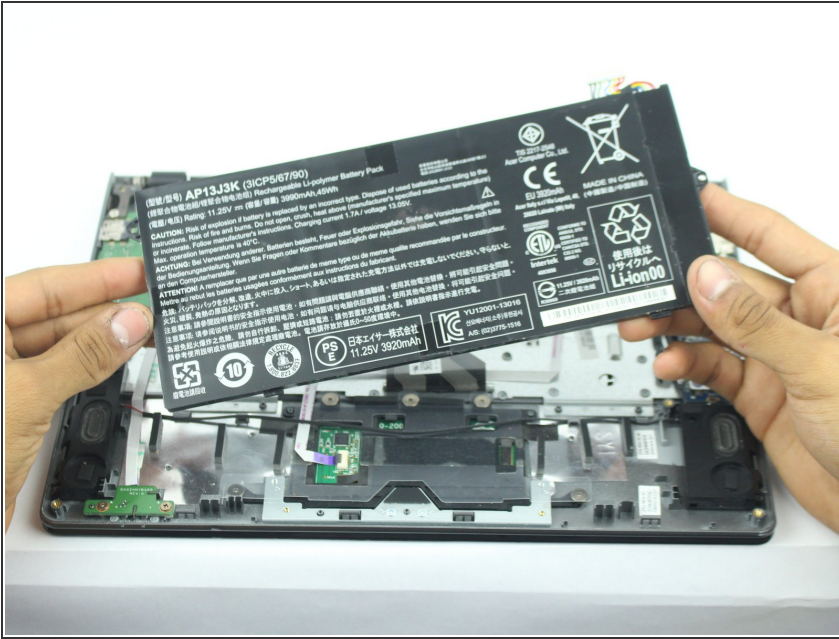

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.