



Canon PowerShot SD1400 IS Battery Replacement

Replace the Canon PowerShot SD1400 IS battery by following the steps listed in this guide.

Written By: Matt Holquist



INTRODUCTION

The battery for this camera may die when used frequently. This guide explains how to replace the battery.



PARTS:

- [Canon PowerShot SD1400 IS Battery](#) (1)
-

Step 1 — Battery



- The battery compartment is located on the bottom of the camera, below the user interface panel.

Step 2



- The hatch covering the memory card will slide open towards the corner of the device.

Step 3



- Once the hatch is slid so the end is overhanging the edge of the camera, you will be able to lift it open.

Step 4



- Once open, you will see a small orange tab near the corner of the camera.
- Push this tab towards the front face of the device, and the battery will freely fall out from the hatch.

To reassemble your device, follow these instructions in reverse order.