




Lenovo IdeaPad Flex 4-1130 Battery Replacement

Removing and replacing the battery on the Lenovo Ideapad Flex4-1130.

Written By: Adrian Miranda

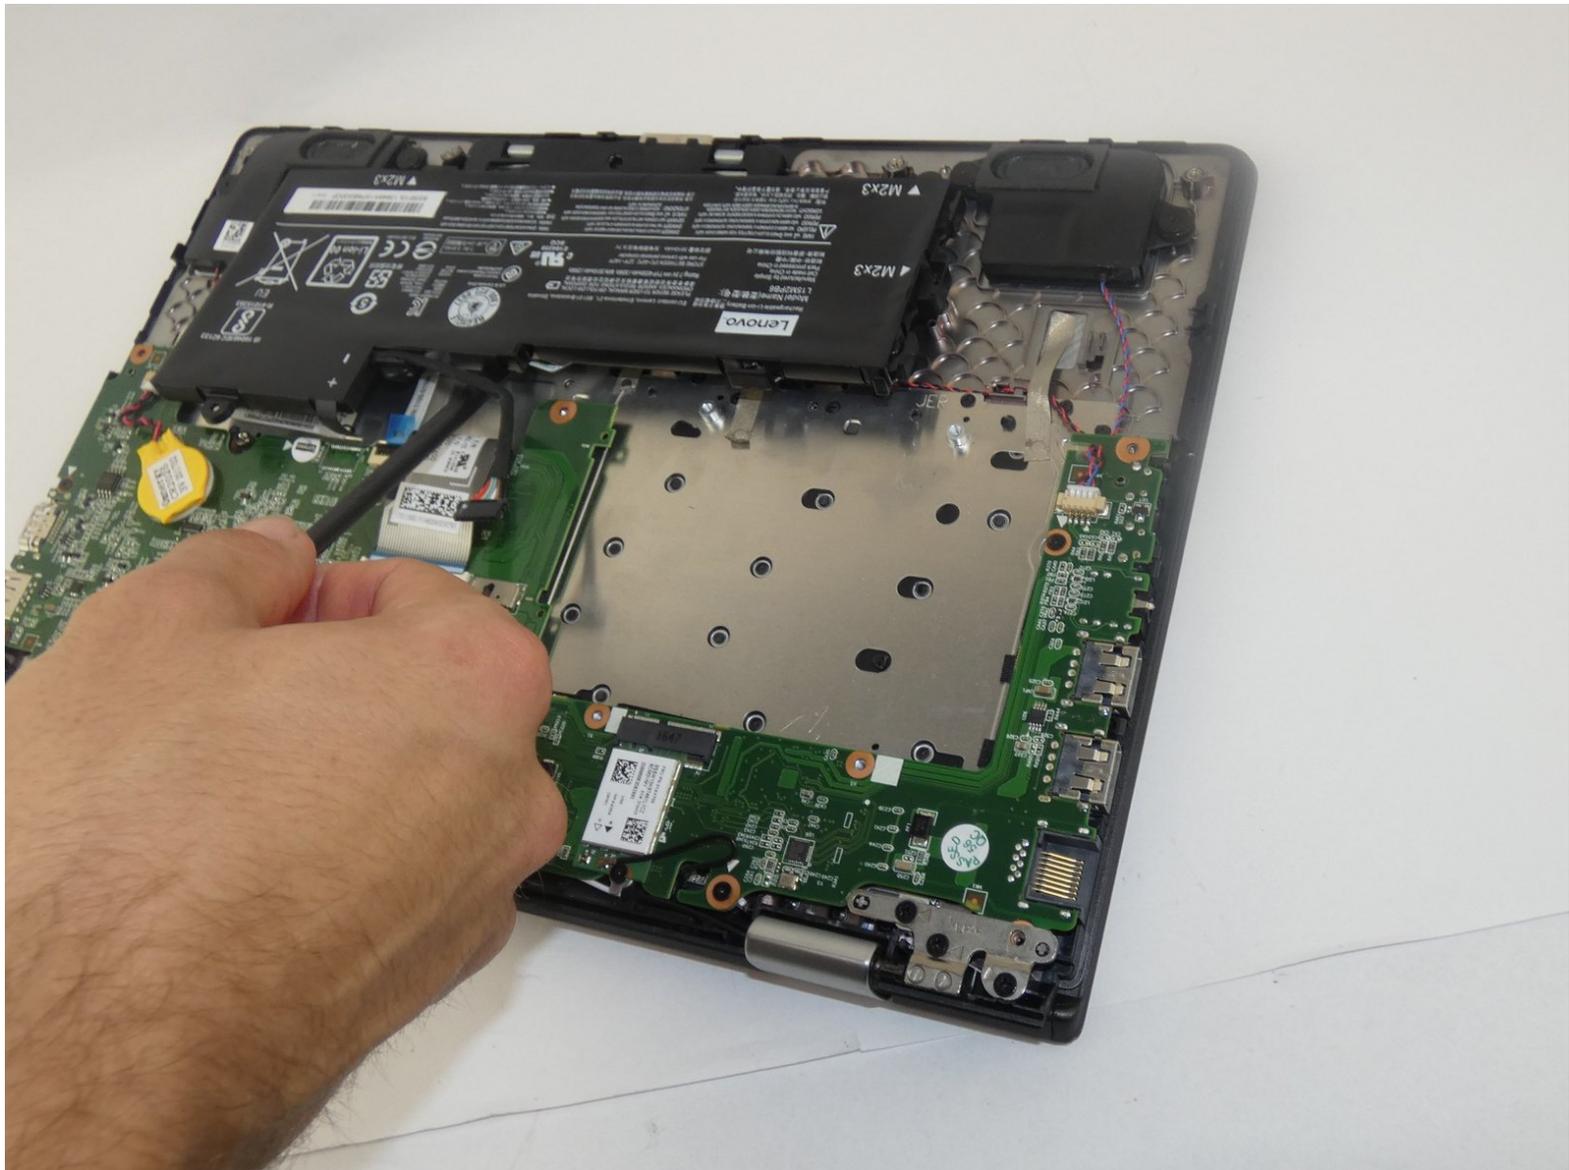

INTRODUCTION

Replacing the battery on the Lenovo Ideapad Flex4-1130 is a relatively simple task with minimal risk of damaging the device. The battery might need replacement if your device is unable to remain on for very long even after being fully charged.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [Lenovo Flex 4 and IdeaPad Yoga 310 Battery](#) (1)

Step 1 — Battery



- ⓘ Power off your Lenovo Ideapad Flex4-1130 before beginning disassembly.
- Remove the ten 4mm screws from the back panel.

Step 2




- Insert the spudger into the groove work your way around the laptop to separate the bottom from the case.
- ⚠ Do not insert the spudger too deep! This could potentially damage a device part.

Step 3



- Remove the connector attaching the battery to the motherboard.

Step 4

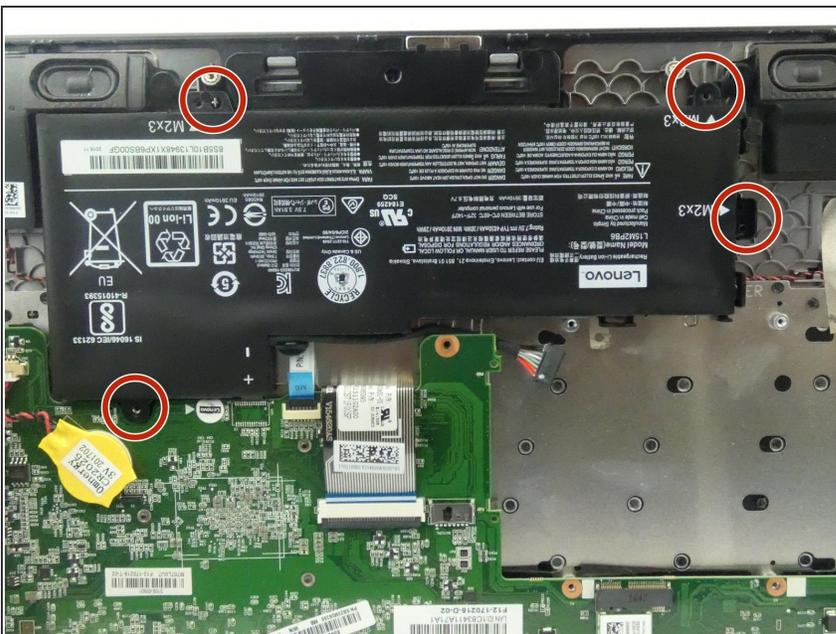

- Remove the four 4mm screws on the battery.

Step 5



- Lift the battery with a spudger and remove.

To reassemble your device, follow these instructions in reverse order.