




Toshiba Satellite L855-S5119 Random Access Memory Replacement

This guide will show how to replace the Random Access Memory for this device.

Written By: Cody Brannen

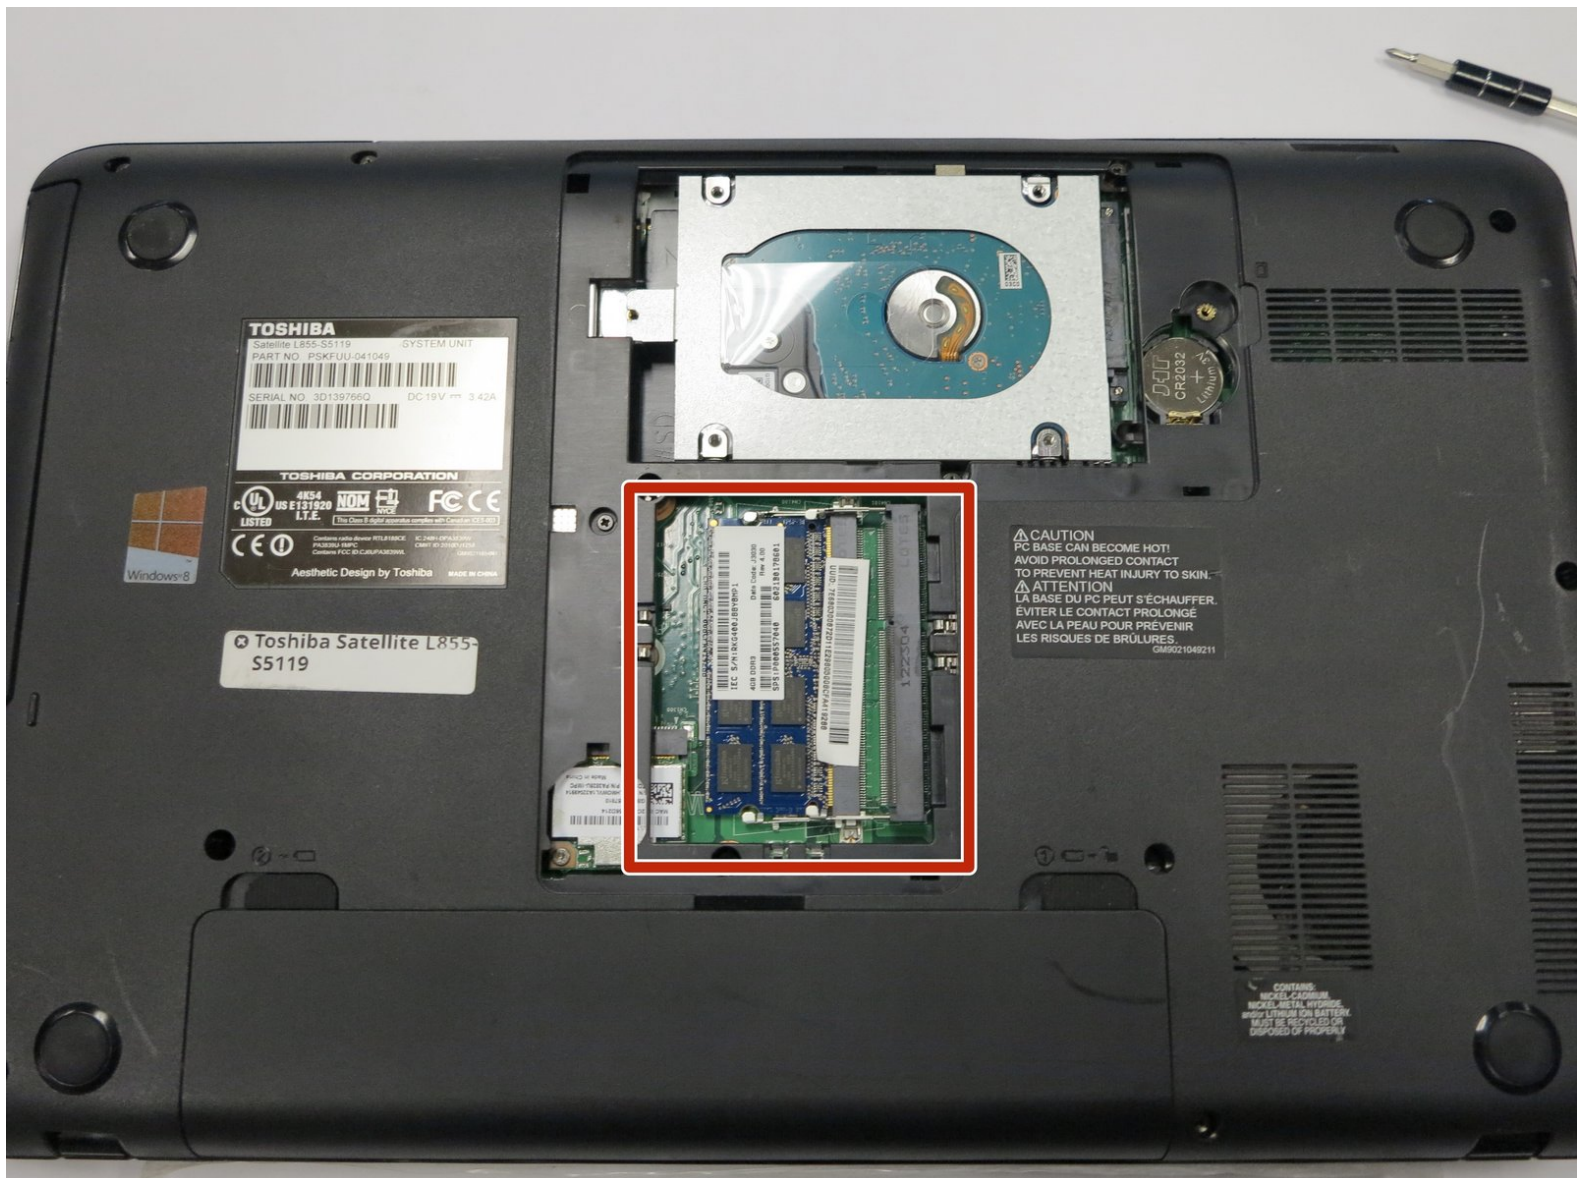

INTRODUCTION

This guide will inform readers on how to replace random access memory because of bad random access memory or the need for more.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the laptop face down to expose the back.
- Locate the battery.

Step 2




- i** Locate the battery latches. The battery latch mechanism can be compared to a door -- The right latch, when pushed right, unlocks the battery, while the left latch, when pushed left, releases the battery, pushing it out from its container.
- Push the latch on the right to the right to unlock the battery latch locking mechanism.
 - Push the battery latch on the left to the left to unlock the battery.

Step 3




- With the left battery latch pushed left, remove the battery from its port by lifting the battery from the middle of the battery.
- The battery will come free.

Step 4 — Back Plate Removal

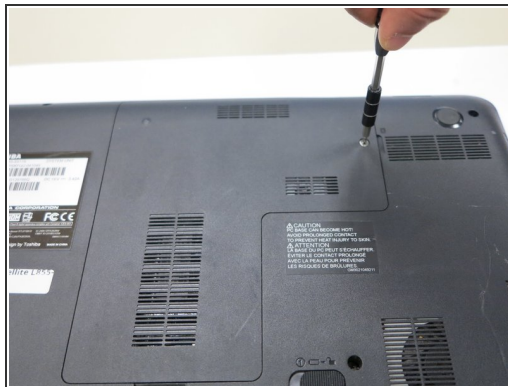

- Turn the laptop over to place it top down.
- Use a Phillips #1 screwdriver to remove the screw holding in the back plate. This screw does not come out of the plate.
- Lift the back plate off the laptop, exposing the RAM and Hard Disk.

Step 5 — Random Access Memory

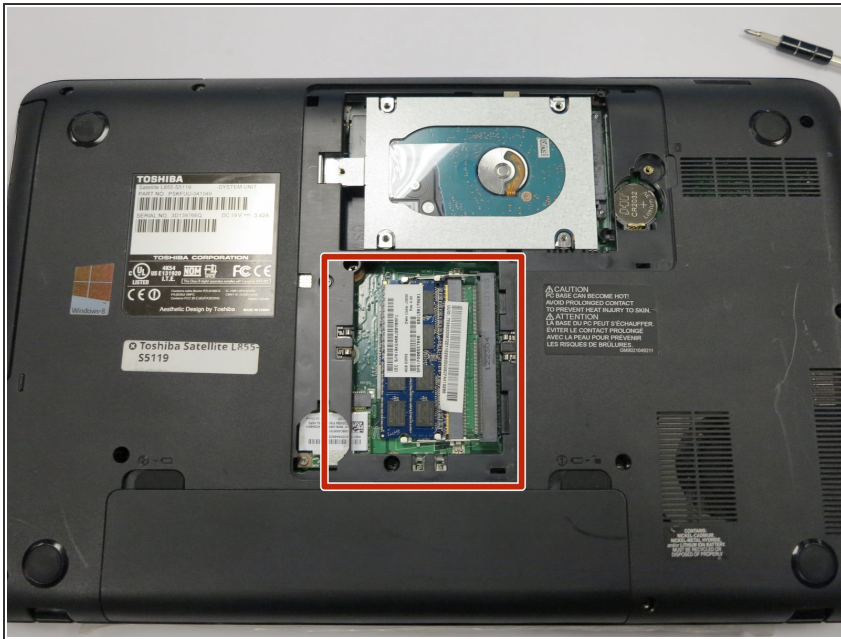

- Locate the Random Access Memory.

Step 6



- Pull back the two retention clips holding the RAM in place allowing it to pop up.
- Remove the RAM by pulling it from the SO-DIMM slot.

To reassemble your device, follow these instructions in reverse order.