




Hasee Z7M-i78172D1 Battery Replacement

This guide will show you how to remove and replace the battery in the Hasee Z7M-i78172D1.

Written By: Desiree Mora

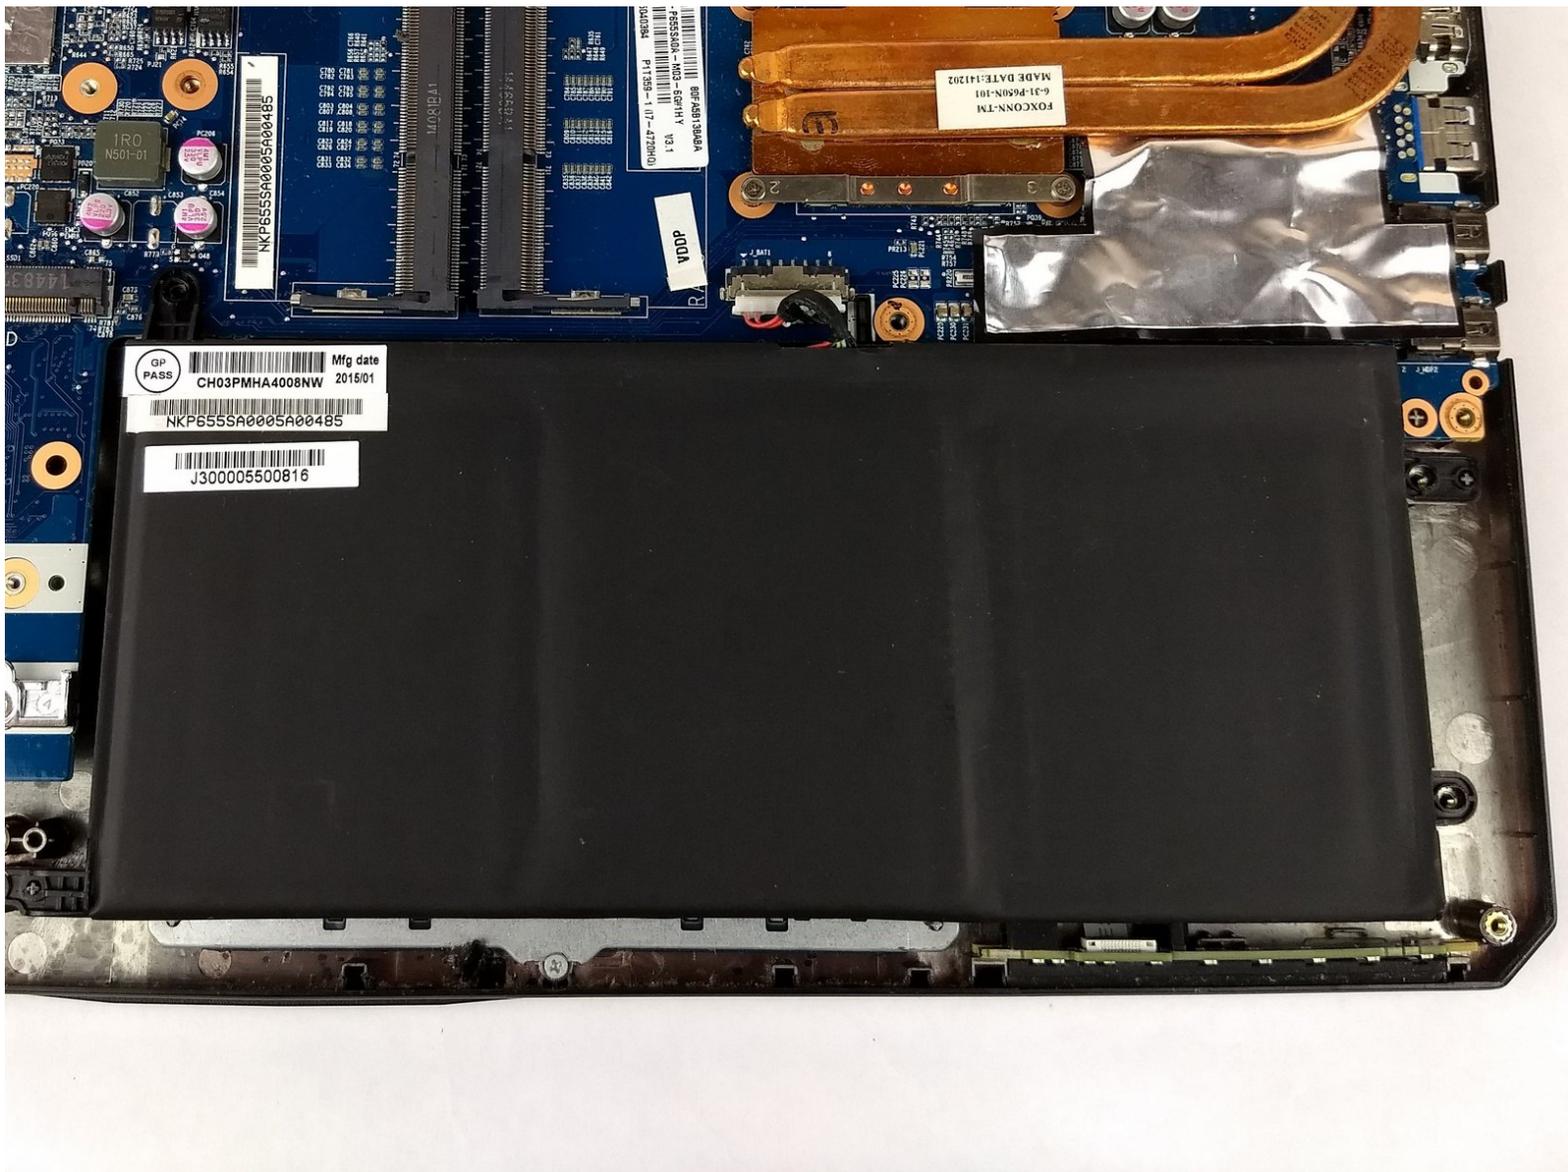

 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

 **PARTS:**

- [7mm Phillip's Head Screw](#) (20)
- [Plastic Back Panel](#) (1)
- [Battery](#) (1)

Step 1 — Rear Panel



- Use a #0 Phillips head screwdriver and unscrew the sixteen 7mm screws on the back of the device.

Step 2




- Use a plastic opening tool to take off the back plastic panel.

Step 3 — Battery





- Use a Phillips #0 head screwdriver to remove the four 7mm screws that hold the battery in place.

Step 4

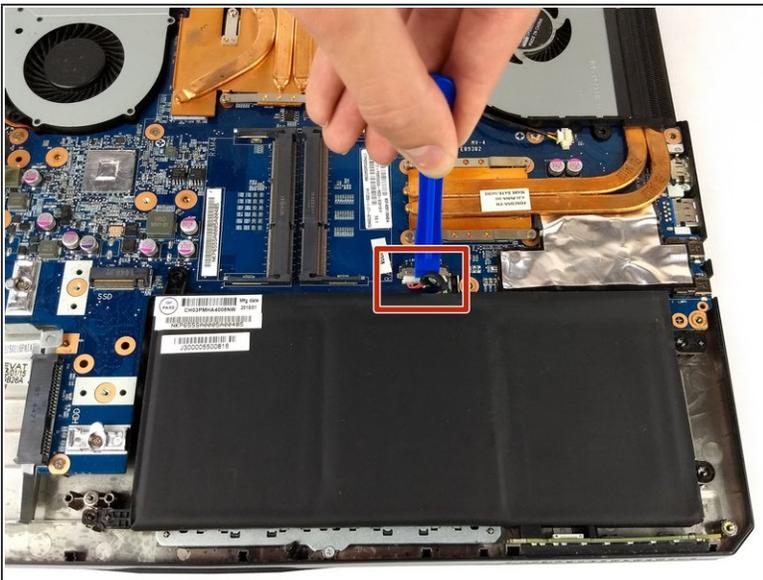

- Gently pry off the connecting wires with the plastic opening tool.

Step 5

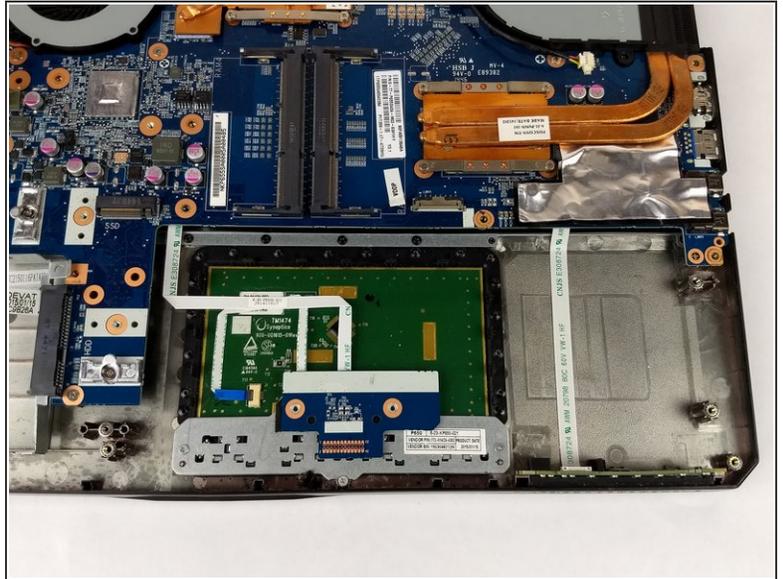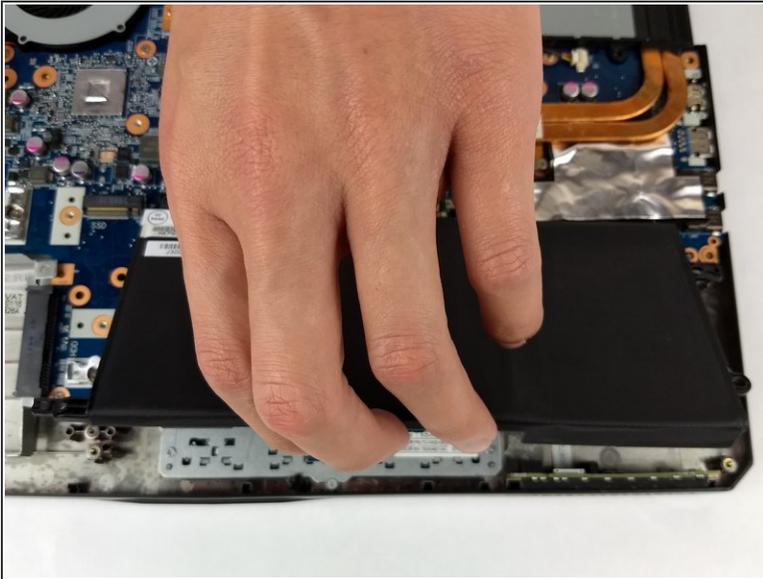

- Lift the battery out.

To reassemble your device, follow these instructions in reverse order.