



Acer Aspire E5-573G Battery Replacement

How to replace the battery on the Acer Aspire E5-573G.

Written By: Alex Bahm



INTRODUCTION

This guide will show you how to replace an old or faulty battery on the Acer Aspire E5-573G.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



PARTS:


- [Acer AL15A32 Replacement Battery](#) (1)

Step 1 — Optical Drive

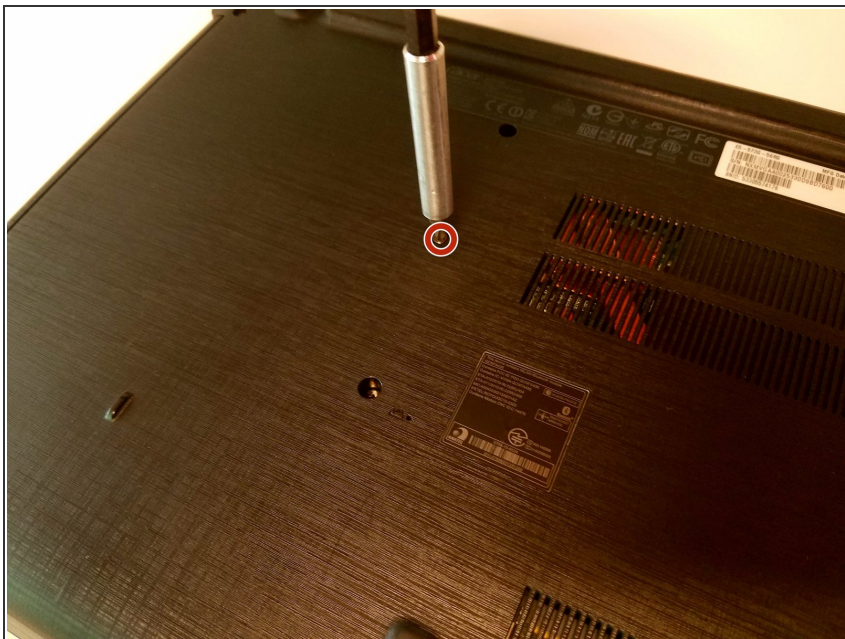


- ⚠ Ensure your device is OFF before beginning this procedure.
- Unscrew the 5 mm Phillips head screw holding the drive in place.

Step 2

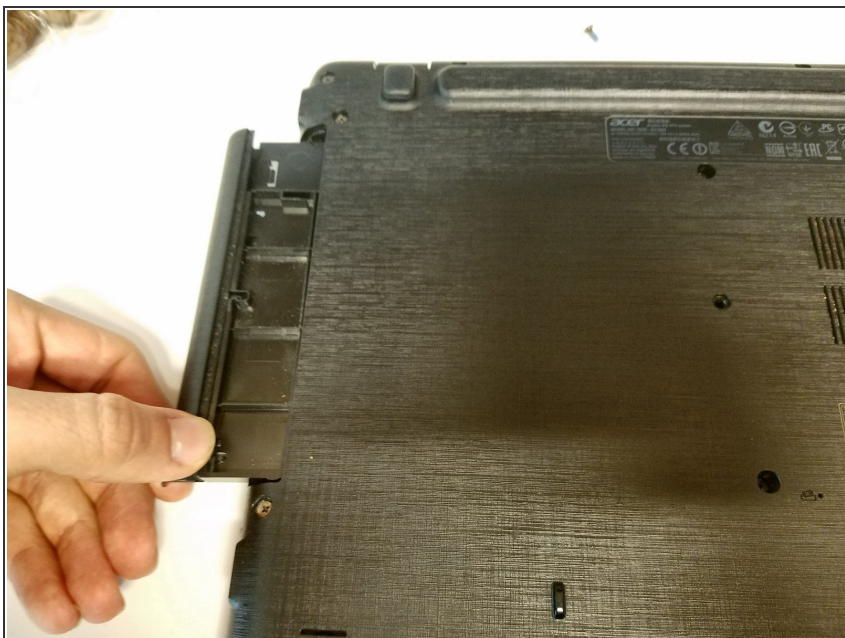


- Pull out the disk drive.

Step 3 — Battery

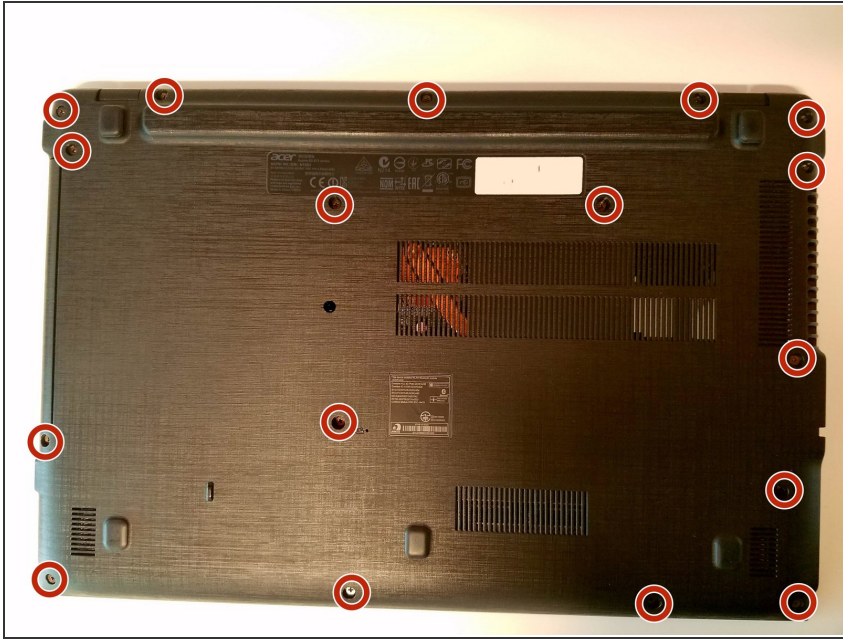

- Unscrew the seventeen 5 mm Phillips head screws from the bottom cover.

Step 4

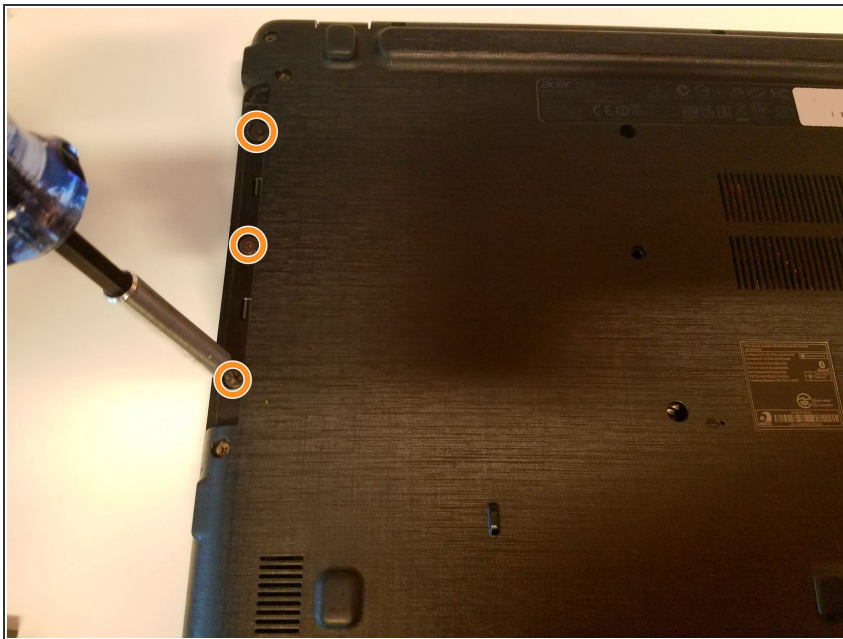


- Unscrew the three 2.5 mm Phillips head screws underneath the optical drive bay.

Step 5



- Run a pick between the bottom cover and the device around the edge of the laptop and unclip the cover from the rest of the device.

Step 6

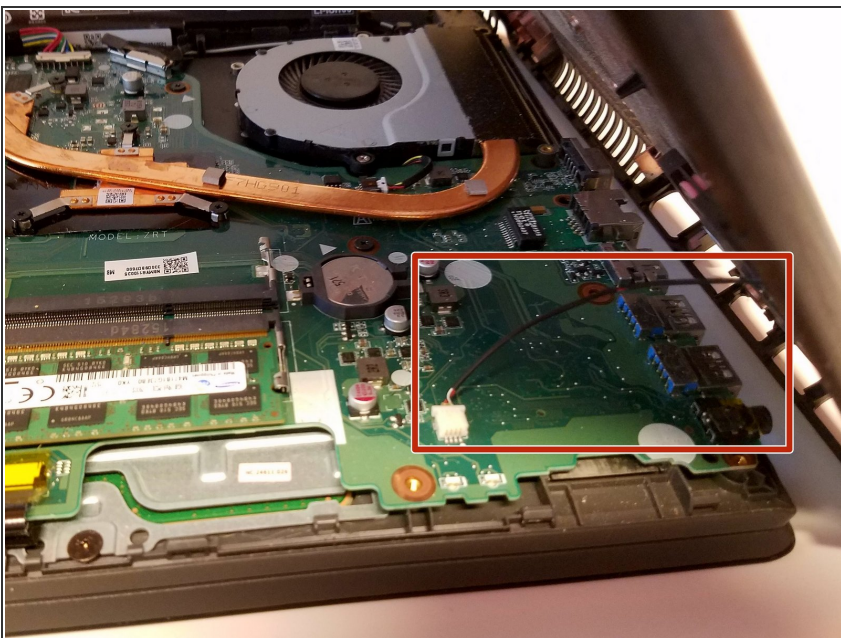

- Lift the left side of the bottom cover, but **do not completely remove the cover**, as the speaker cable is still connected and will be damaged.
- Pull the speaker connector towards the fan to disconnect it from its socket on the motherboard.

Step 7



- Pull the battery connector towards the battery to disconnect it from its socket on the motherboard.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).