

HP 15-f009wm Hard Drive Replacement

This guide explains how to remove the Hard...

Written By: Alex Birchler



INTRODUCTION

This guide explains how to remove the Hard Drive from the HP 15-f009wm notebook computer. This could be done to either replace a corrupt Hard Drive or to upgrade to a larger Hard Drive.



TOOLS:

- Phillips #00 Screwdriver (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tool (1)



PARTS:

- Crucial MX500 1 TB SSD (1)
- Crucial MX500 250 GB SSD (1)
- Crucial MX500 500 GB SSD (1)
- Crucial MX500 2 TB SSD (1)

Step 1 — Battery





- Turn laptop upside down.
- Flip the lock switch to the unlocked setting.







- Flip the release switch.
- Once the flip is switched, the battery should pop out.





Slide the battery out.

Step 4 — RAM







Remove the two Phillips #1 screws from the RAM panel.







Use the plastic opening tool to pop the panel off.







- Release the tabs on each side of the chip by simultaneously pushing each tab away from the RAM.
- (i) These tabs lock the chip in place and releasing them will cause the chip to "pop" up.



 Remove the RAM chip from the laptop.

Step 8 — Hard Drive



 Remove the sixteen 7mm Phillips #1 screws from the bottom panel.







Pull the disk drive out of the laptop.

Step 10



 Remove the three 2mm Phillips #00 screws found underneath the disk drive.








- Remove the single 4mm Phillips #1 screw from the Wi-Fi card.
- Pull the Wi-Fi card out of the motherboard.









- Open the laptop.
- Use a plastic opening tool to pop out the keyboard by starting at the top and working your way around the perimeter.

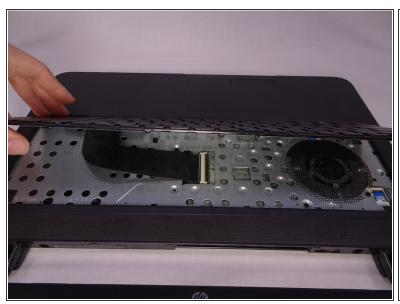

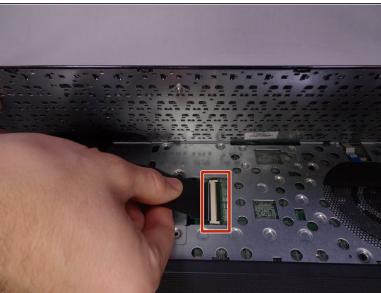

- Open the screen up until it lays flat and rotate the laptop until the screen is closest to you.
- Lift the keyboard from the laptop.
- Use a spudger to lift up the black latch on the ZIF connector and remove the ribbon cable.


Step 14

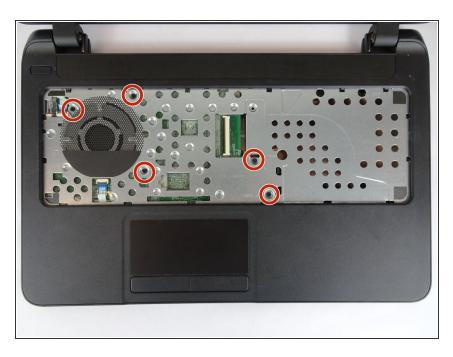

 Remove the five 7mm Phillips #1 screws found underneath the keyboard.





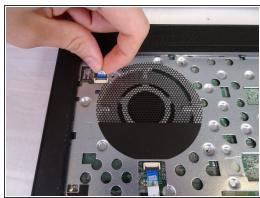

- Use a spudger to lift the black tabs on the ZIF connectors.
- Remove the ribbon cables from the ZIF connectors.







- Use a plastic opening tool to pop the palm rest off of the laptop.
- Lift and remove the palm rest.







- Use a spudger to lift up the black latch on the ZIF connector.
- Remove the USB/AUX port ribbon cable from the ZIF connector on the motherboard.





- Remove the single 7mm Phillips #1 screw from the USB/AUX board.
- Remove the USB/AUX board from the laptop.







- Lift the Hard Drive from the laptop.
- Disconnect the hard drive from the motherboard.

To reassemble your device, follow these instructions in reverse order.