


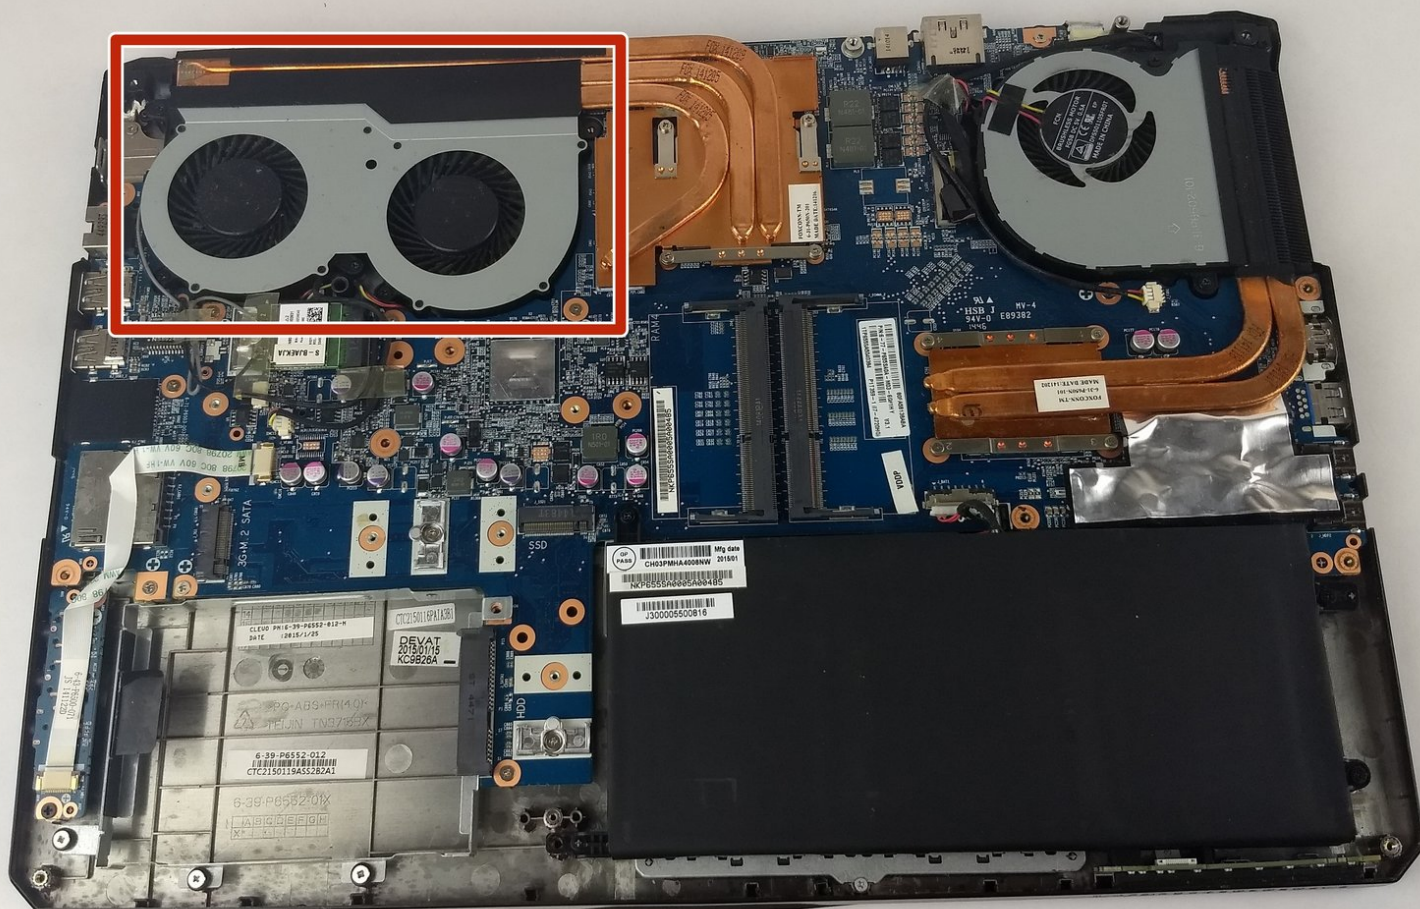

Hasee Z7M-i78172D1 Graphic Card Fan Replacement

This guide will show how to remove the back plastic cover from the Hasee Z7M-i78172D1 as well as the Graphic card fan.

Written By: Zachary Gay





TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [7mm Phillip's Head Screw](#) (21)
- [Plastic Back Panel](#) (1)

Step 1 — Rear Panel




- Use a #0 Phillips head screwdriver and unscrew the sixteen 7mm screws on the back of the device.

Step 2

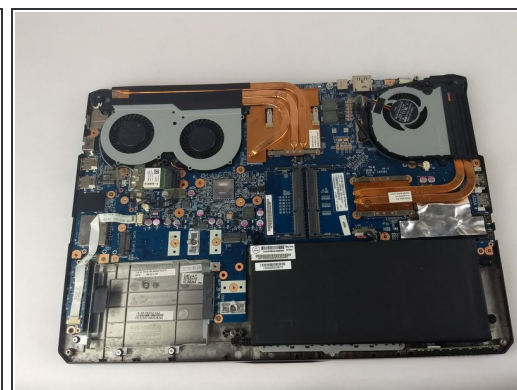

- Use a plastic opening tool to take off the back plastic panel.

Step 3 — Graphic Card Fan

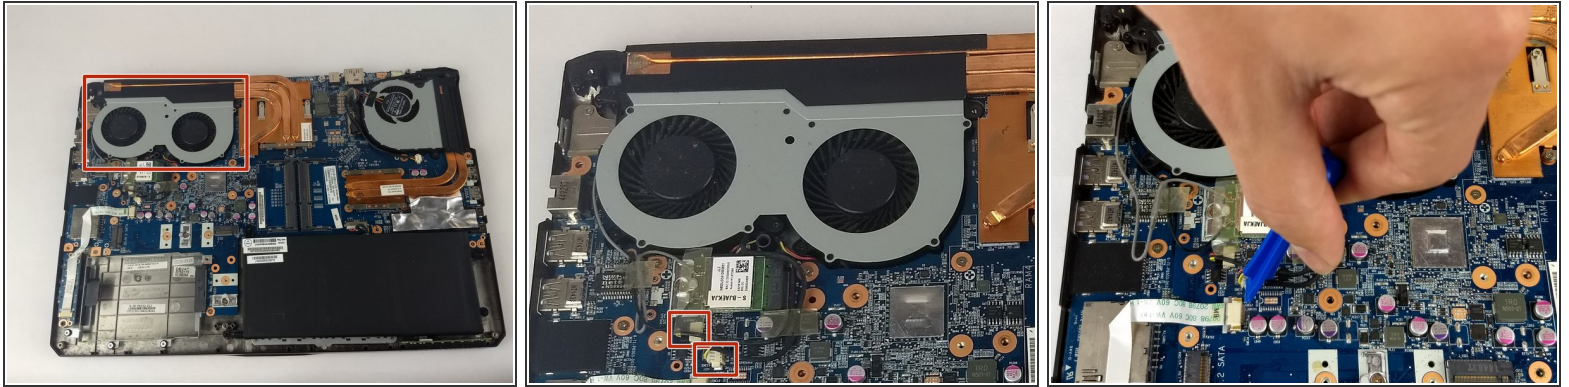


- To take out the Graphics card fan it is necessary to disconnect the two Graphic card fan cables. Use a plastic opening tool to remove the cable.

Step 4



- Use a #0 Phillips head screwdriver and unscrew the five 7mm screws holding the fan in place.

Step 5

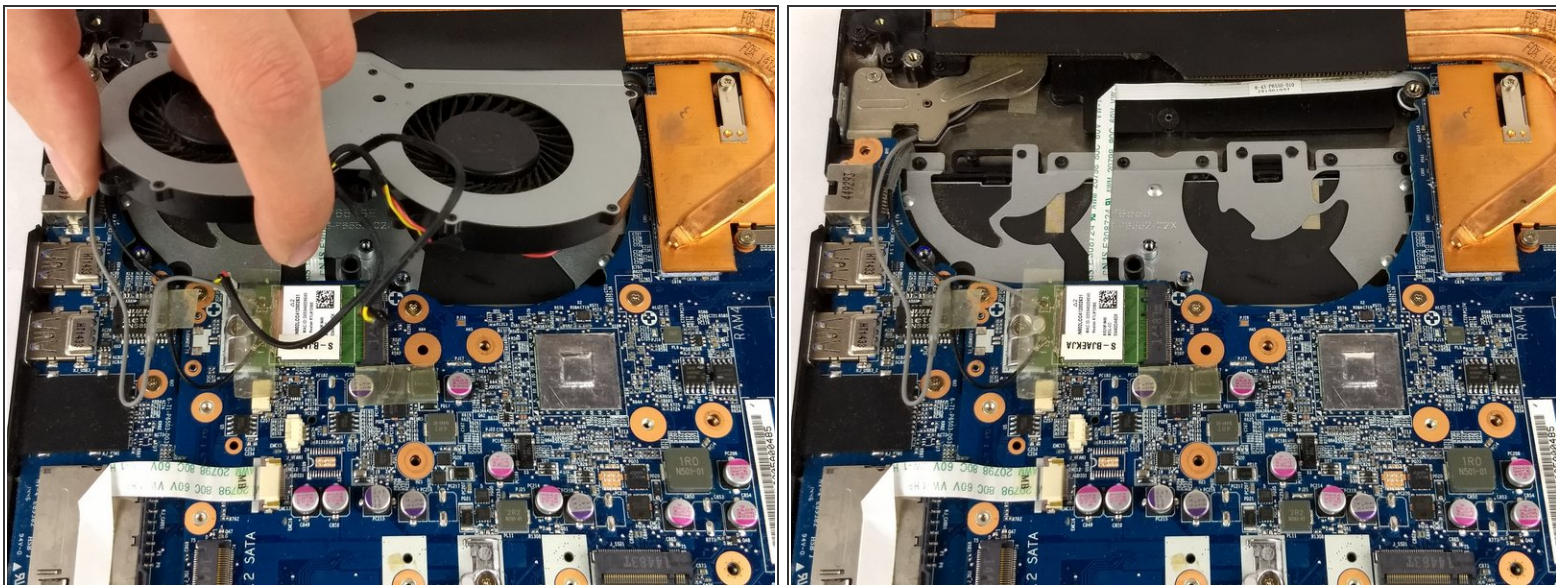

- Lift the Graphics card fan out and replace with the replacement fan.

To reassemble your device, follow these instructions in reverse order.