



ASUS X552LAV-BBI5N08 Hard Drive Replacement

This guide will show you how to replace the hard drive for the ASUS X552LAV-BBI5N08 laptop.

Written By: Jason Vo



INTRODUCTION

This guide will show you how to replace the hard drive for the ASUS X552LAV-BBI5N08 laptop.

TOOLS:

- [Y1 Tri-point Screwdriver](#) (1)
-

Step 1 — Battery



i Battery is not showed in pictures.

- Flip the laptop face down.

Step 2



- Slide the right button to the left.
- Hold the left button to the right.
- While you hold the left button in position, slide the battery out by pushing it away from you.

Step 3 — Hard Drive



- Start by flipping the laptop face down.
- Locate the bottom panel. It is at the opposite end of the battery.
- Remove the two 12mm screws at the bottom panel with a Tri-wing Y1 screwdriver.

Step 4



- Remove bottom panel by lifting it up.
- Locate the hard drive.
- It is located in the bottom left corner.

Step 5



- Remove the four 5.5mm screws located on the hard drive case using a Tri-wing Y1 screwdriver.
- Slide the hard drive out to the left.

Step 6



- Lift the hard drive out.
- Once the hard drive is removed, place the hard drive at a different area.

Step 7



- Place the hard drive on its side.
- Remove the four 5mm screws from the sides of the case by using a Tri-wing Y1 screwdriver.
- Lift the hard drive out of the case.

To reassemble your device, follow these instructions in reverse order.