



# Dell Vostro 3360 Palm-Rest Replacement

Written By: Johnathan Hammond



---

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Palm-Rest.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Remove the Screw



- Remove the screw that secures the access panel to the computer.

## Step 2 — Remove the Access Panel

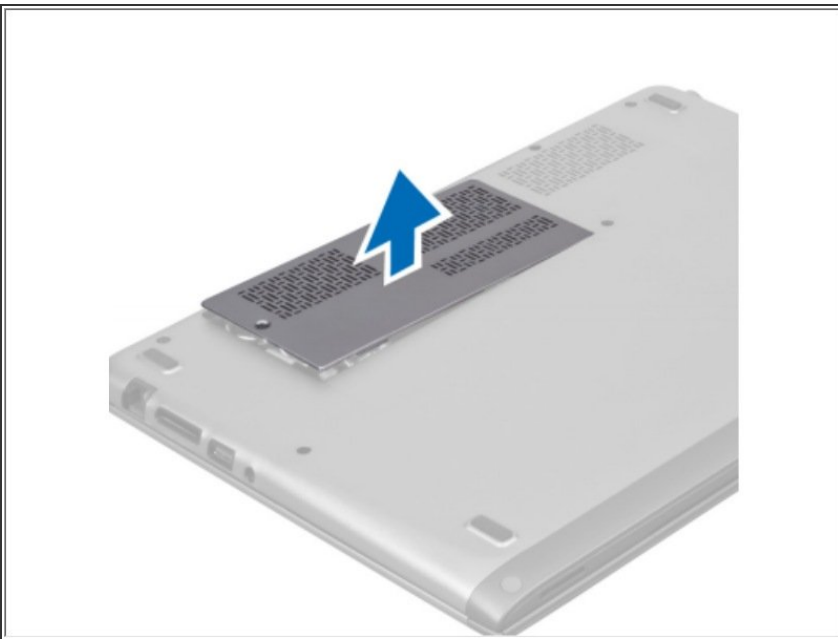


- Remove the access panel from the computer.

### Step 3 — Remove the Screw



- Remove the screw that secures the keyboard to the chassis.

### Step 4 — Prying the Keyboard

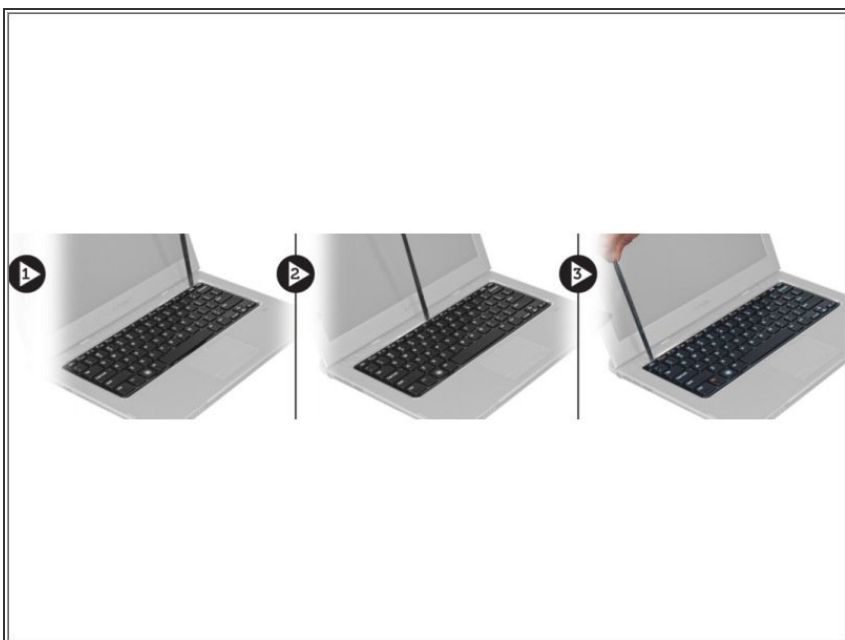


- Starting on the right side of the system, use a plastic scribe to pry up the keyboard from the computer.

## Step 5 — Flipping the Keyboard



- Flip the keyboard over and lay it on the palmrest.

## Step 6 — Lifting the Clip

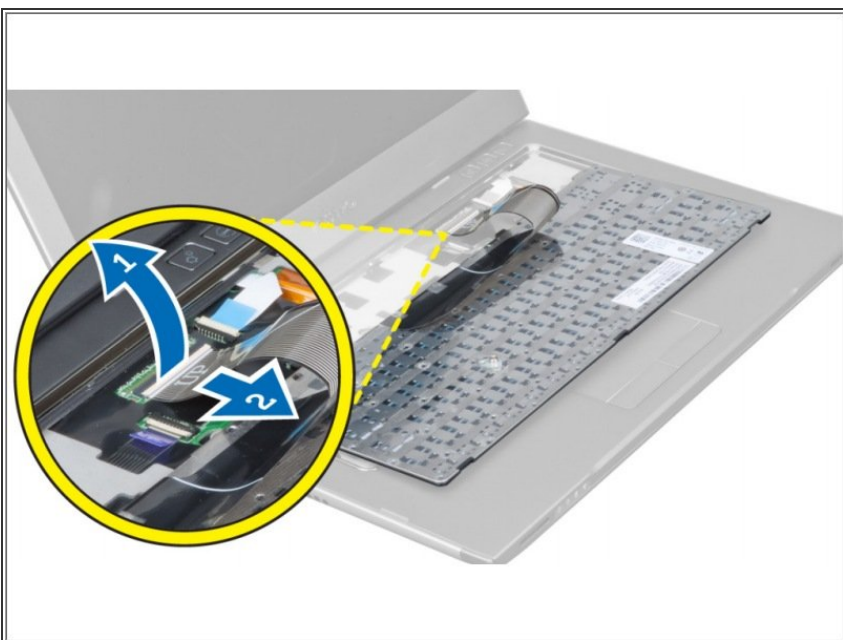

- Lift the clip to release the keyboard cable and disconnect it from the computer.

## Step 7 — Display-Hinge Cover




- Remove the screws that secure the display-hinge cover to the computer

## Step 8 — Remove the Display Hinge Cover




- Remove the display-hinge cover from the computer.

## Step 9 — Prying the Rubber Pads

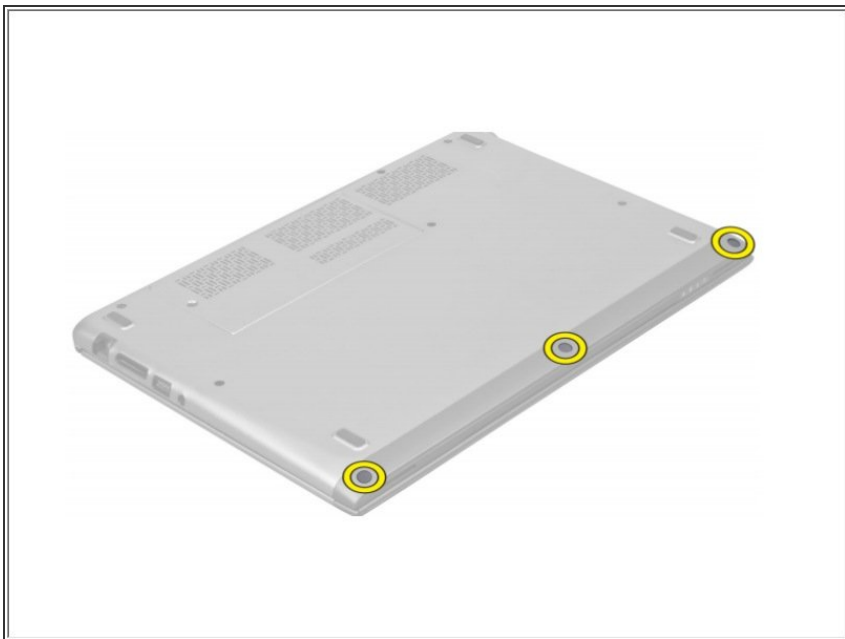


- Using a plastic scribe pry out the rubber pads that cover the front screws on the base cover.

## Step 10 — Remove the Screws

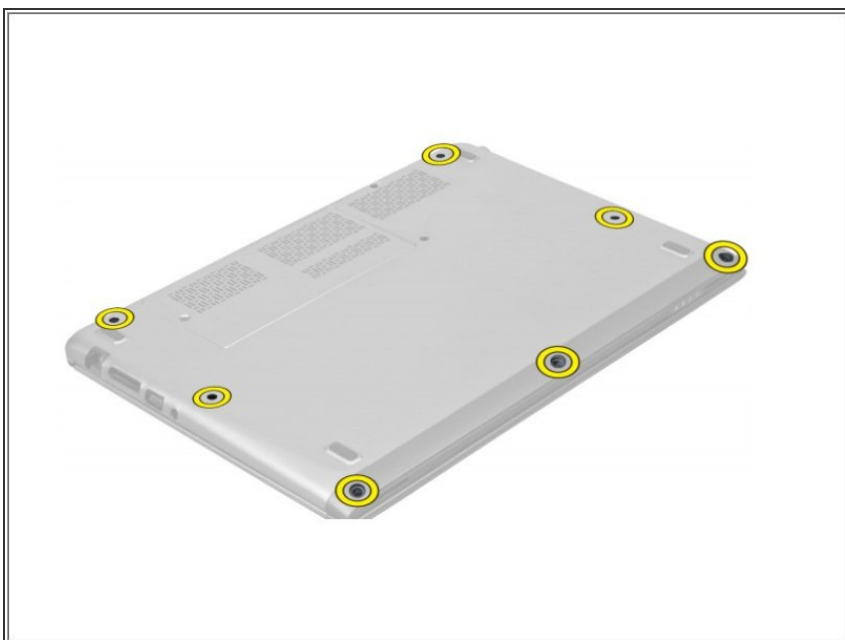


- Remove the screws that secure the palm-rest to the computer.

## Step 11 — Disconnecting the Board Cable

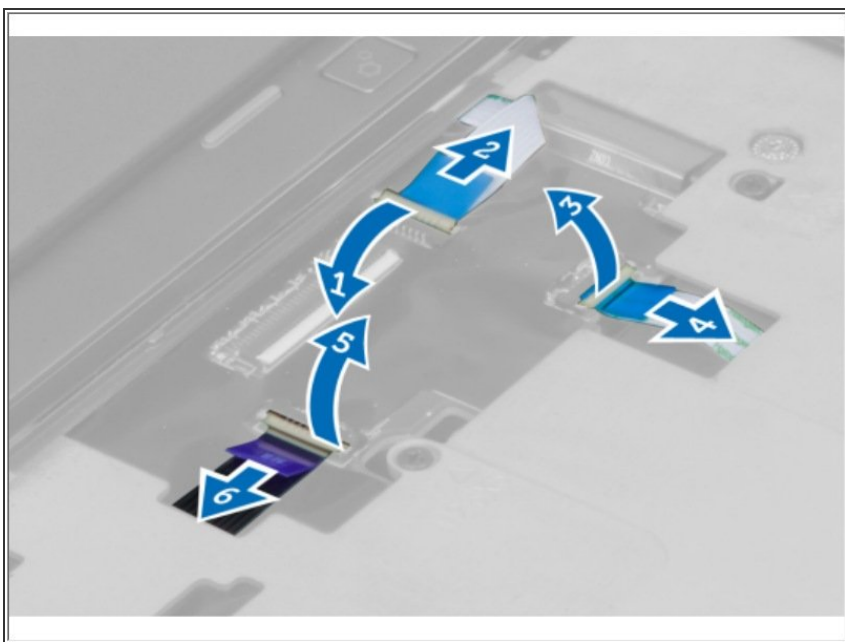

- Disconnect the quick launch board cable, the finger print reader cable, and the palmrest cable from the system board.

## Step 12 — Disconnecting the LED Cable

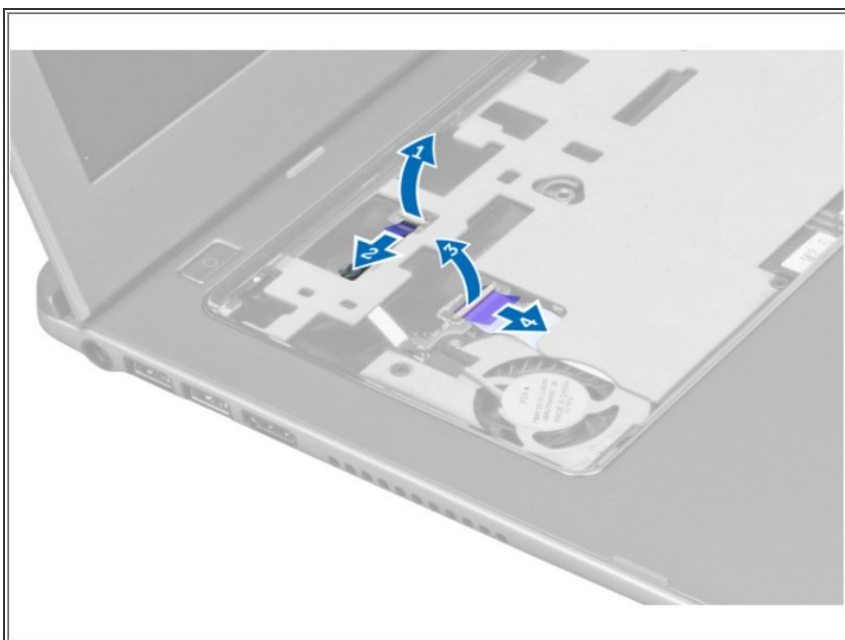

- Disconnect the power LED cable and the LED board cable from the system board.



## Step 13 — Remove the Screws



- Remove the screws that secure the palmrest to the front of the computer.

## Step 14 — Prying the Edges of the Palm-Rest



- Pry along the edges of the palmrest to release the palmrest.

## Step 15 — Lifting the Palm Rest



- Lift the palm-rest up and away from the computer.