



Ring Video Doorbell Battery Replacement

In this guide, you will be shown how to take...

Written By: Abdulrahman



INTRODUCTION

In this guide, you will be shown how to take apart the housing unit in order to replace the battery of the Ring Video Doorbell, step-by-step. You will need only a Plastic Tool Opener for this.


TOOLS:

Phillips #00 Screwdriver (1)
iFixit Opening Tool (1)

PARTS:



Ring Video Doorbell (Gen 1) Battery (1)

Step 1 — Battery

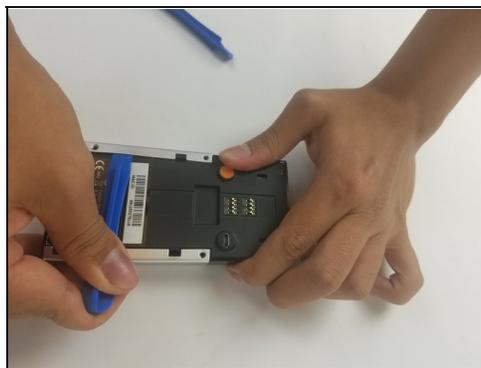

- Start by using the PH00 Phillips Screwdriver to take out the 6 1 mm screw's on the bottom of the device.
- Pry open the aluminium plate using the Plastic Opening Tool(s).
- Remove the 2 1. mm screws using the PH00 Phillips Screwdriver.

Step 2

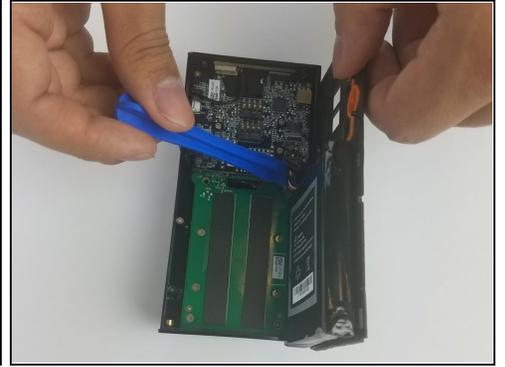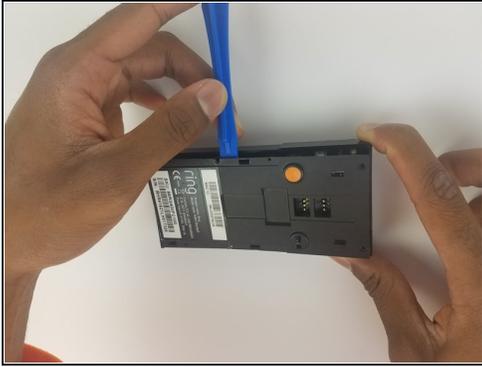

- Pry open the back case as shown using the Plastic Opening Tool.
⚠ Do **NOT** lift the case of all the way, there is still a cable connecting the two pieces.
 - Disconnect the battery from motherboard by carefully pulling up on the connector.
-

To reassemble your device, follow these instructions in reverse order.