



# ASUS ROG G53SW-XT1 Battery Replacement

ASUS ROG G53SW-XT1 battery replacement

Written By: Bailey Herring



# INTRODUCTION

This guide will detail how to replace the battery in the ASUS ROG G53SW-XT1.

## Step 1 — Battery




- Unplug the power cable and flip the computer over.

## Step 2



- Unlock the battery by pushing the switch to the right.

## Step 3

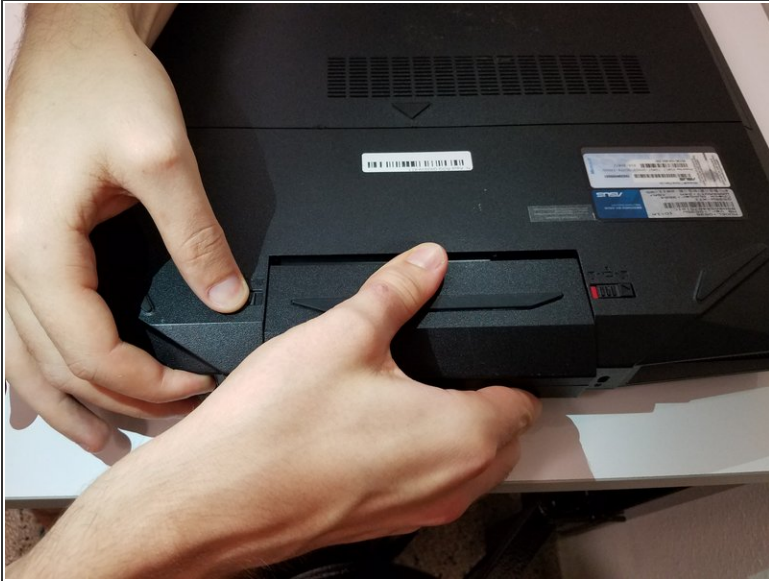

- Push and hold the left switch, then pull the battery out.

To reassemble your device, follow these instructions in reverse order.